
SECTION 1B3

OM600 ENGINE MECHANICAL

CAUTION: Disconnect the negative battery cable before removing or installing any electrical unit or when a tool or equipment could easily come in contact with exposed electrical terminals. Disconnecting this cable will help prevent personal injury and damage to the vehicle. The ignition must also be in LOCK unless otherwise noted.

TABLE OF CONTENTS

Specifications	1B3-2	Valve Springs (Cylinder Head Installed) . .	1B3-109
Fastener Tightening Specifications	1B3-2	Valve Stem Seals	1B3-112
Special Tools	1B3-4	Check and Replacement of	
Special Tools Table	1B3-4	Valve Guides	1B3-116
Maintenance and Repair	1B3-12	Valve Seat Rings	1B3-122
On-Vehicle Service	1B3-12	Check and Machining of Valves	1B3-127
Engine Assembly	1B3-12	Machining of Valve Seat	1B3-132
Poly V-Belt	1B3-21	Camshaft Timing Test	1B3-137
Tensioning Device	1B3-23	Camshaft	1B3-139
Poly V-Belt Alignment & Inspection	1B3-26	Chain Tensioner	1B3-145
Prechamber	1B3-29	Timing Chain	1B3-147
Milling of Prechamber Sealing Surface	1B3-32	Tensioning Rail	1B3-151
TDC (TDC Sensor Bracket) Setting	1B3-35	Cylinder Head Guide Rail	1B3-152
Cylinder Head	1B3-37	Timing Case Cover Guide Rail	1B3-156
Timing Case Cover	1B3-63	Crankshaft Sprocket	1B3-158
Crankshaft End Cover	1B3-71	Piston	1B3-163
Vibration Damper and Hub	1B3-74	Oil Filter	1B3-169
Crankshaft Front Radial Seal	1B3-80	Oil Pan	1B3-171
Crankshaft Ball Bearing	1B3-82	Oil Spray Nozzle	1B3-174
Crankshaft	1B3-83	Oil Pump	1B3-175
Flywheel	1B3-93	Unit Repair	1B3-177
Machining of Flywheel	1B3-97	Cylinder Head Pressure Leakage Test . . .	1B3-177
Flywheel Ring Gear	1B3-98	Facing Cylinder Head Mating Surface . . .	1B3-178
Hydraulic Valve Clearance Compensation		Replacement of Crankcase Core Plug . . .	1B3-180
Element Check	1B3-101	Facing Crankcase Contacting Surface . . .	1B3-182
Valve Tappets	1B3-103	Oil Gallery Steel Ball	1B3-183
Valve Spring Check	1B3-105	Cylinder Bore Measurement	1B3-187
Valve Springs (Cylinder Head Removed) .	1B3-106		

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Engine Assembly

Application	N·m
Skid Plate Bolt	28 - 47
Drain Plug Bolt	30
Coolong Fan Shroud Bolt	3 - 7
Control Linkage Nut	8 - 18
Clutch Linkage Cylinder Nut	20 - 34
Exhaust Manifold Bolt	30
Propeller Shaft Bolt & Nut (Axle)	70 - 80
Propeller Shaft Bolt & Nut (T/C)	81 - 84
Engine Mounting Nut	50 - 75

Crankshaft Assembly

Application	N·m
Cooling Fan Belt Pulley Bolt	10
Socket Bolt	23
Tighten The Bolt	200 / 90°
End Cover Bolt	10
Crankshaft Bearing Cap Bolt	55 / 90°
Ball Bearing	45 / 90°
Camshaft Sprocket Bolt	25 / 90°
Oil Pump Sprocket Bolt	25

Piston

Application	N·m
Connecting Rod Bolt	35 / 90°

Flywheel

Application	N·m
12-Sided Stretch Bolt	45 / 90°

Cylinder Head

Application	N·m
Prechamber Threaded Ring	130
Cylinder Head Cover Bolt	10
Fuel Injsction Pipe Nut	18
Socket Bolt	25
Fuel Filter Pipe Bolt	25
Idle Pulley Bolt	23
Damper Bolt	21

Cylinder Head

Application	N·m
Camshaft Bearing Cap Bolt	25
Camshaft Sprocket Bolt	25 / 90°
Exhaust Pipe Bolt& Nut	25
Chain Tensioner	80
Injection Nozzle	40
Intake Manifold Not	25
Injection Nozzle Pipe Not	18
Oil Dipstick Tube Bolt	10
Screw Plug M18 x 15	50

Cam Support & Shaft




Application	N·m
Stud Bolt	12
Exhaust Manifold Not	25
CamShaft Bearing Cap Bolt	25
12-Sided Bolt (M11)	25 / 90°

Timing Cover



Application	N·m
Oil Pan Bolt-Socket Bolt	10
Oil Pan Bolt- M6	10
Oil Pan Bolt- M23	23
Belt Pulley Bolt	32
Guide Pulley Bolt	4
Guide Pulley Bracket Nut	23
Chain Tensioner	80
Tesioning Lever Bolt	23

SPECIAL TOOLS





SPECIAL TOOLS TABLE

	603 589 00 09 00 Serration Wrench		603 589 00 40 00 Counter Holder
	657 589 03 63 00 Sliding Hammer		000 589 77 03 00 Box Wrench Insert
	601 589 00 66 00 Counter Sink		602 589 00 40 00 Engine Lock
	667 589 00 23 00 Height Gauge		116 589 20 33 00 Sliding Hammer


SPECIAL TOOLS TABLE (Cont'd)

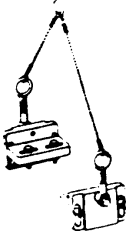	116 589 03 07 00 T Type Socket Wrench		115 589 34 63 00
	601 589 00 10 00 Cylinder Head Bolt 102		601 589 00 25 00
	102 589 12 15 00 (<i>F</i>17) Drift		102 589 00 15 00 (<i>F</i>34) Drift
	617 589 10 21 00 RI Sensor		601 589 05 14 00 Assembly Cage







SPECIAL TOOLS TABLE (Cont'd)

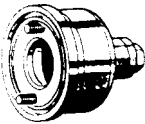	601 589 08 15 00 Drift		103 589 00 33 00 Puller
	001 589 53 21 00 Dial Gauge		601 589 03 14 00 Sleeve
	601 589 07 21 00 Depth Gauge		601 589 03 43 00 Oil Seal Assembler
	667 589 01 21 00 Fixing Device		366 589 00 21 05 Extension


SPECIAL TOOLS TABLE (Cont'd)

	363 589 02 21 00 Dial Gauge Holder		116 589 07 15 00 Drift
	000 589 33 33 00 Counter Support		000 589 04 14 00 Tensioning Strap
	000 589 25 33 00 Internal Extractor		102 589 03 40 00 Magnetic Bar
	102 589 05 33 00 Puller		601 589 01 59 00 Assembling Board







SPECIAL TOOLS TABLE (Cont'd)

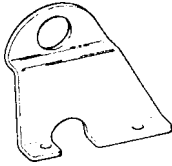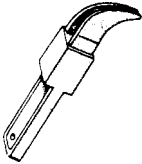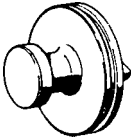	601 589 02 59 00 Supporting Bridge		667 584 02 63 00 Supporting Bar
	667 589 00 31 00 Press Lever		104 589 00 37 00 Pliers
	116 589 06 63 00 Magnetic Finger		601 589 02 43 00 Drift
	603 589 01 40 00 Holding Wheel		000 589 10 68 00 Cylinder Brush




SPECIAL TOOLS TABLE (Cont'd)

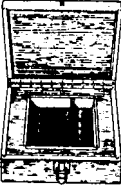	601 589 02 23 00 Go/No Go Gauge		601 589 05 15 00 Drift (for Intake)
	105 589 03 15 00 Drift (for Intake)		601 589 06 15 00 Drift (for Exhaust)
	103 589 02 15 00 Drift (for Exhaust)		000 589 10 53 00 Reamer (for Exhaust)
	346 589 00 63 00 Super Cooling Box		000 589 21 53 00 Reamer (for Intake)

SPECIAL TOOLS TABLE (Cont'd)

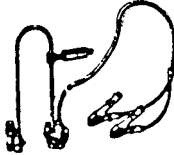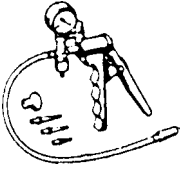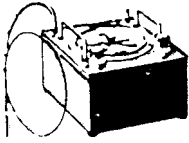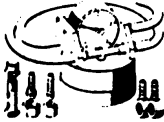	001 589 32 21 00 Dial Gauge		124 589 15 21 00 Tester
	001 589 53 21 00 Dial Gauge		667 589 02 21 00 TDC Pulse Generator
	000 589 58 43 00 Chain Assembling Device		501 589 73 21 00 Vacuum Pump
	201 589 13 21 00 Vacuum Tester		617 589 04 21 00 Tester


SPECIAL TOOLS TABLE (Cont'd)

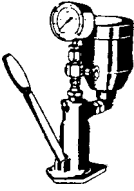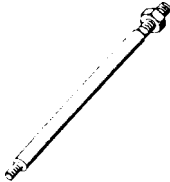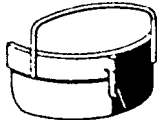	000 589 14 21 00 Tester		601 589 00 08 00 Flange
	001 589 65 09 00 Serration Wrench		116 589 02 34 00 Thread Bolt
	000 589 00 68 00 Cleaning Set		667 589 04 63 00 Retaining Plate
	601 589 05 21 00 Looking Screw		617 589 08 21 00 Position Sensor

MAINTENANCE AND REPAIR

ON-VEHICLE SERVICE

ENGINE ASSEMBLY

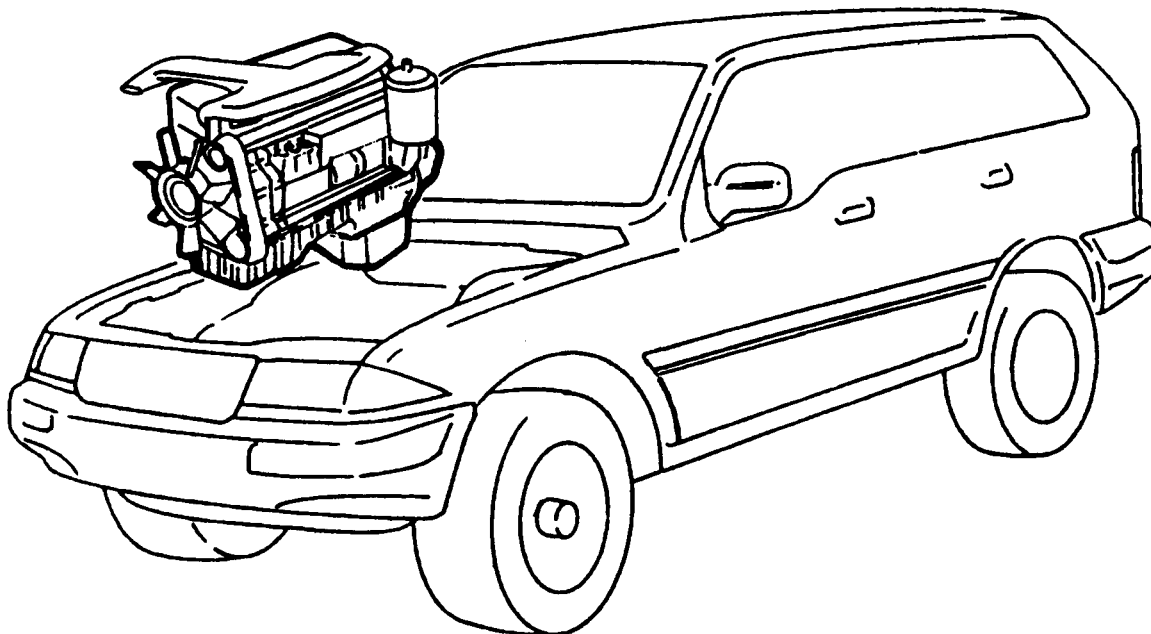


Removal & Installation Procedure

1. Disconnect the negative terminal of battery.
2. Remove the hood.
3. Remove the skid plate.

Installation Notice


Tightening Torque	28 - 47 Nm
-------------------	------------

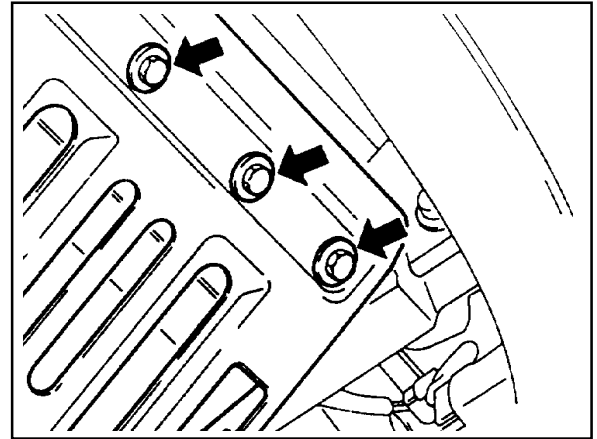

4. Remove the radiator drain cock and drain the coolant.

Notice


Open the coolant reservoir tank cap.

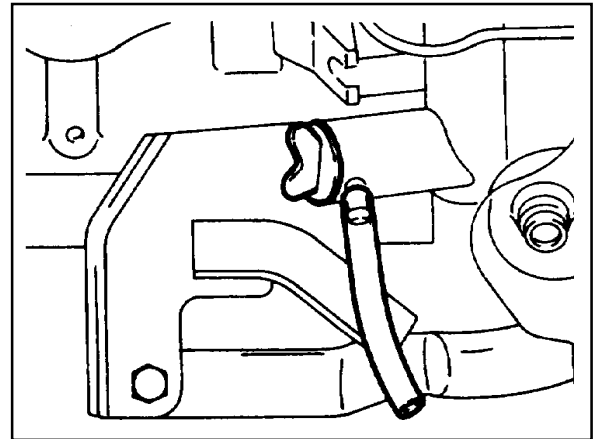


5. Remove the drain plug (1) and seal (2) from the cylinder block and drain the coolant completely.
6. After draining, replace the seal and reinstall the drain plug.

Installation Notice

Tightening Torque	30 Nm
-------------------	-------

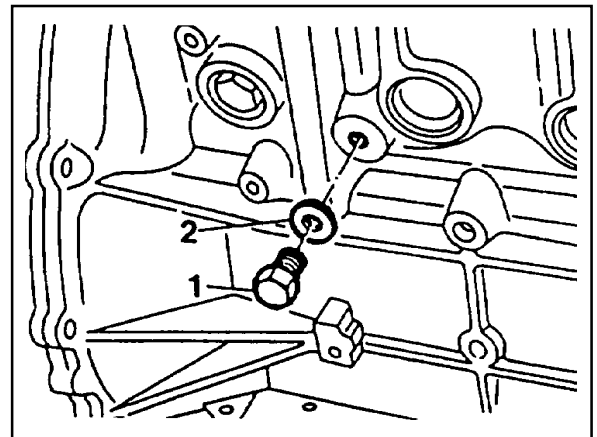


7. Disconnect the lower coolant hose from the radiator.

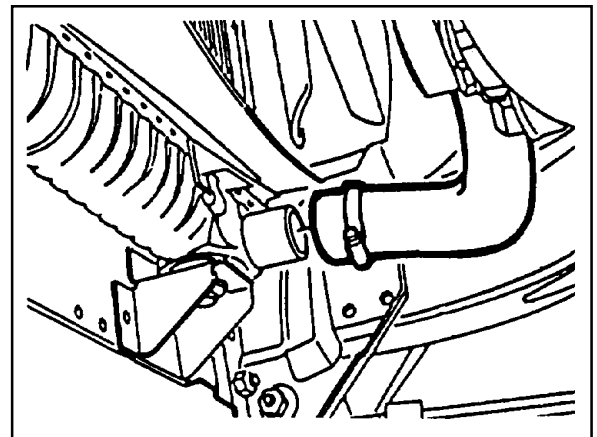


1B3-14 OM600 ENGINE MECHANICAL

8. Disconnect the upper coolant hose from the radiator.

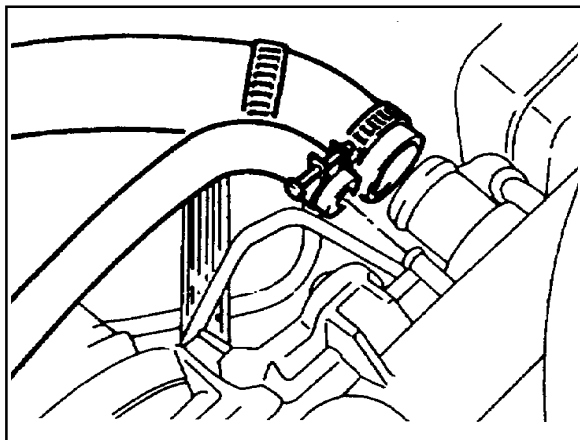


9. Loosen the bolt and remove the coolant pipe and cooling fan shroud.


Tightening Torque	3 -7 Nm
-------------------	---------

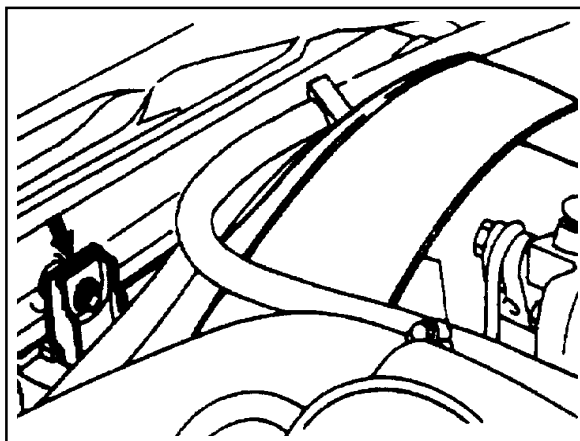


10. Remove the hoses (air intake to intercooler, intercooler to intake duct).

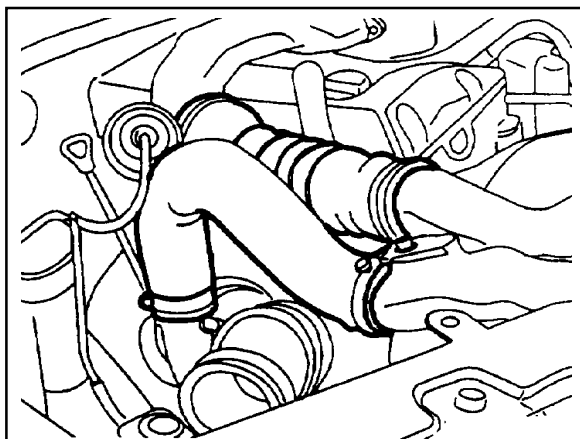


11. Remove the pipes connected to intercooler.

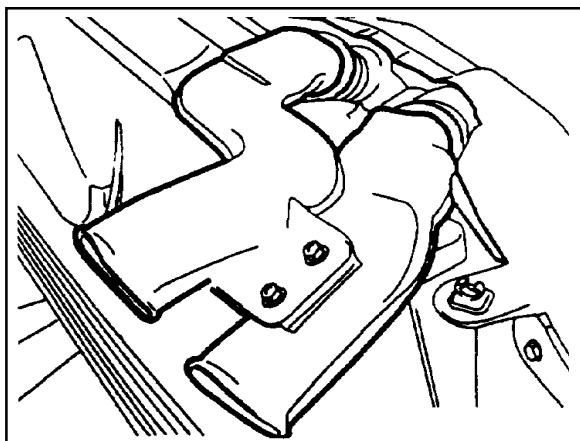


12. Remove the hose(air cleaner to turbocharger) with blow by hose.

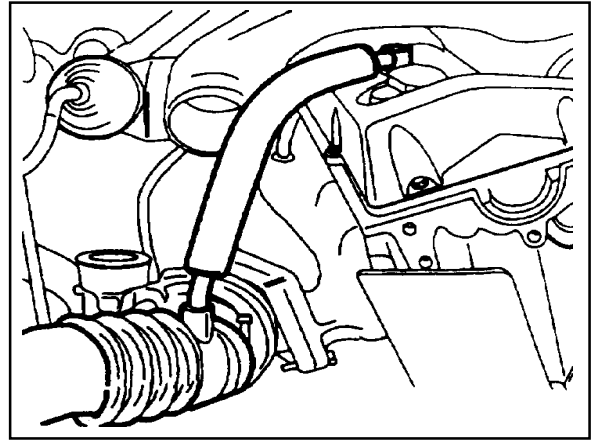

13. Disconnect the air cleaner intake hose and remove the air cleaner cover and element.

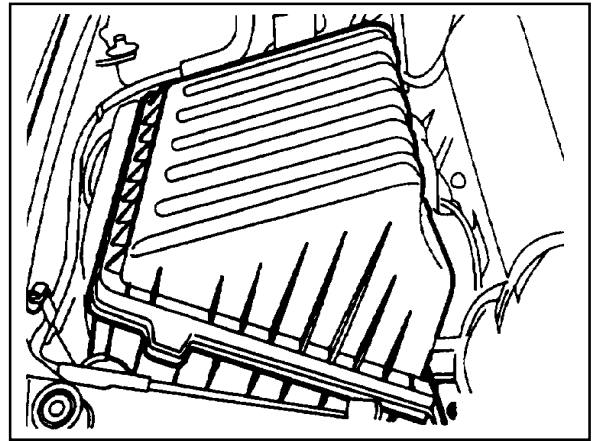


14. Disconnect the coolant hose from the water inlet.

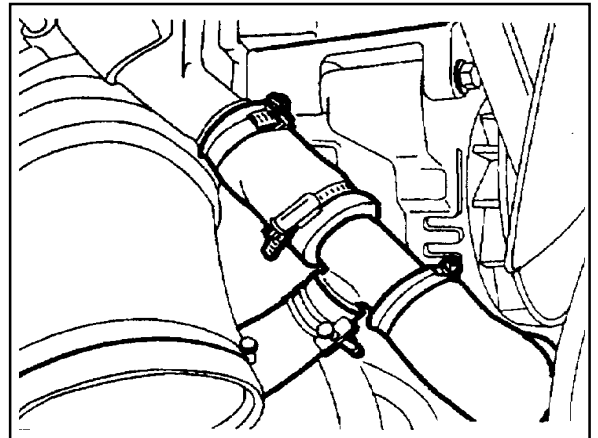

15. Remove the air-conditioner lines from the compressor.

Notice

Evacuate the refrigerant before removal.

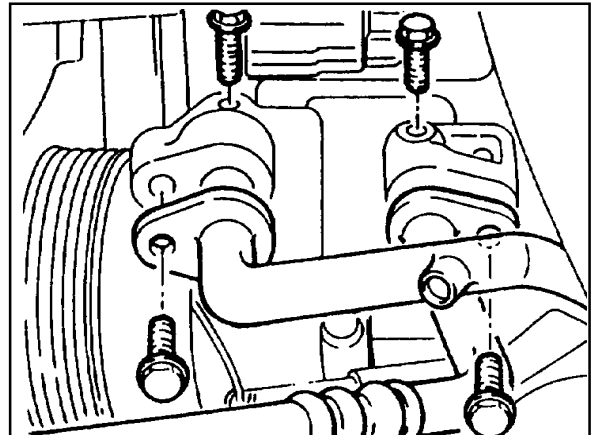


1B3-16 OM600 ENGINE MECHANICAL


16. Remove the power steering pump lines.

Notice

Completely drain the fluid.

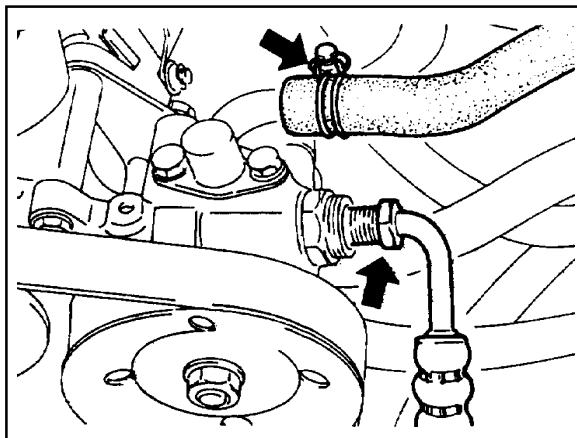


17. Disconnect the fuel feed line with prefilter from the feed pump on injection pump.

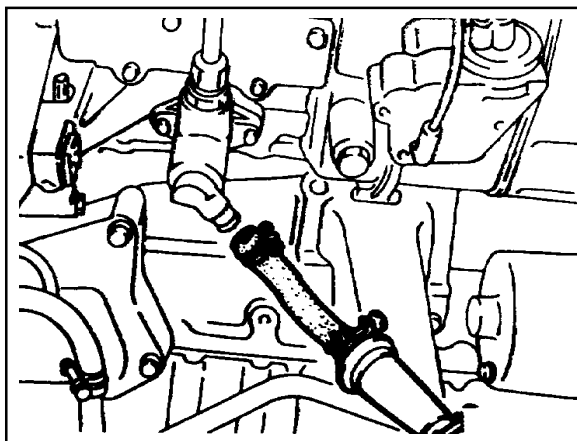


18. Vehicle with automatic transmission.

Remove the hydraulic lines (19, 20) from oil cooler (2).

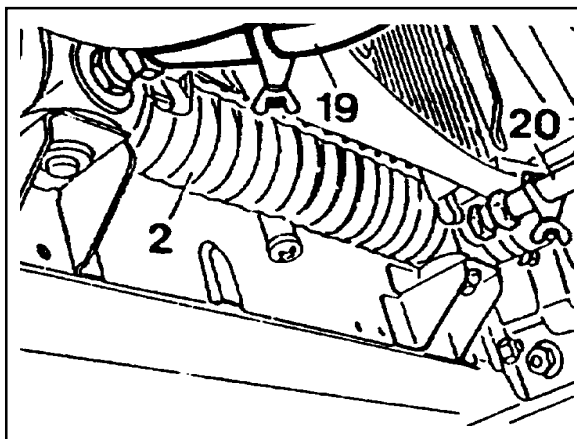


19. Disconnect the engine harness.


20. Disconnect the preheating time relay cable.

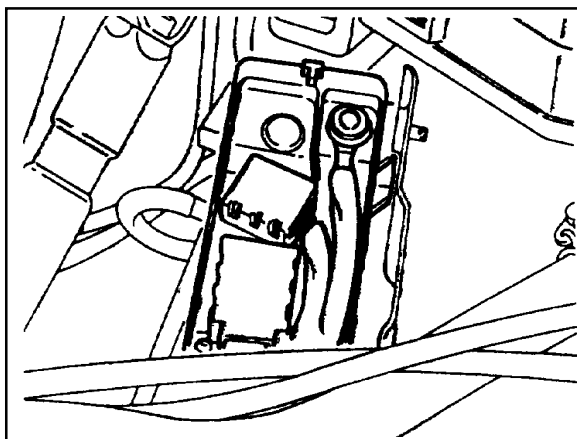


21. Remove the fuel lines from the fuel filter and cover the filter with plug.

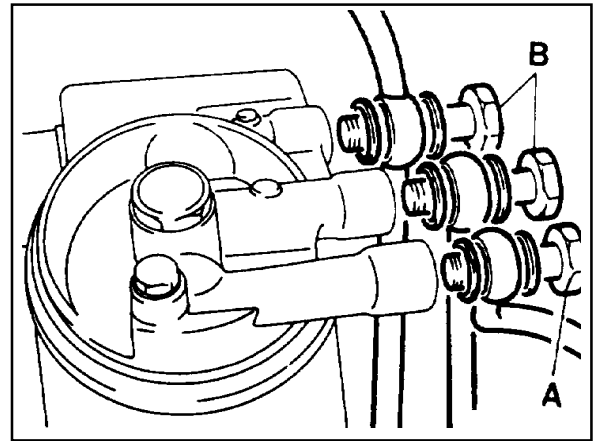


22. Disconnect the brake booster hose from vacuum pump.
23. Disconnect the other vacuum lines.

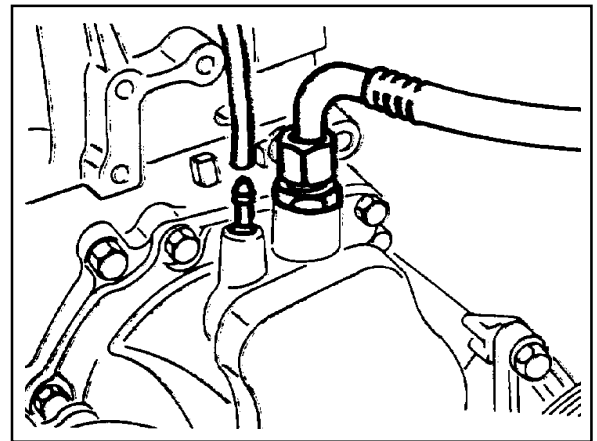

24. Disconnect the ground cable.
25. Disconnect the alternator wires.

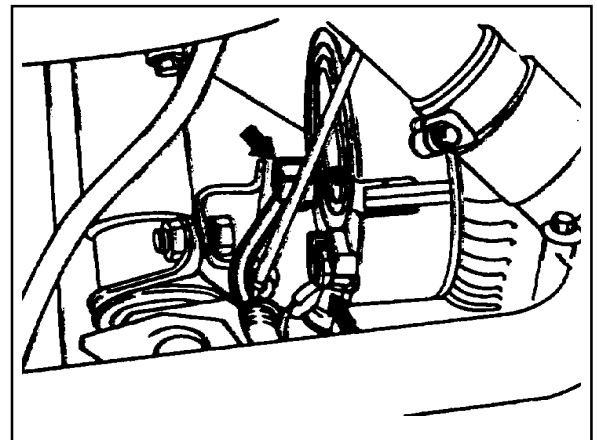


26. Disconnect the starter motor wires and remove the starter motor.

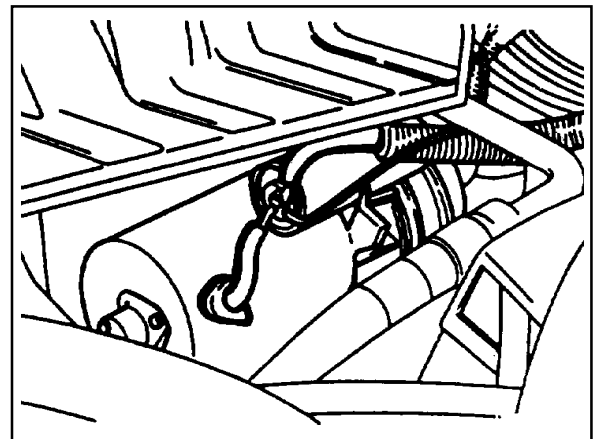


1B3-18 OM600 ENGINE MECHANICAL

27. Disconnect the preheating time relay sensor plug.

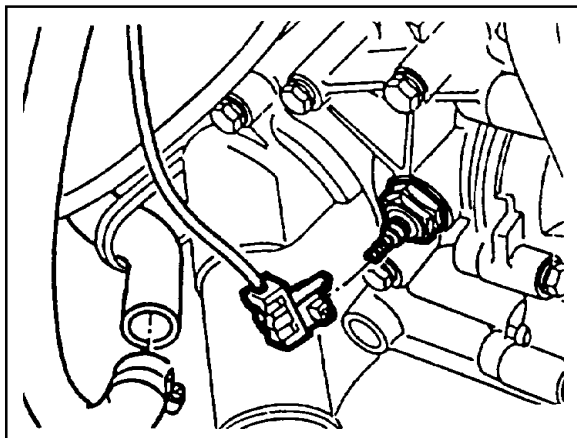


28. Disconnect the coolant temperature sensor plug.

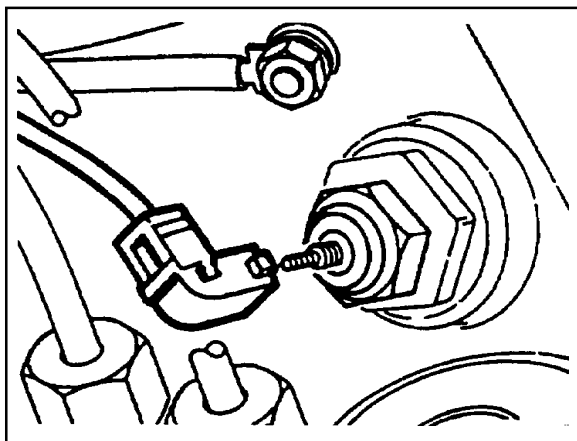


29. Disconnect the accelerator cable from the control linkage.

Installation Notice

Tightening Torque	8 - 18 Nm
-------------------	-----------

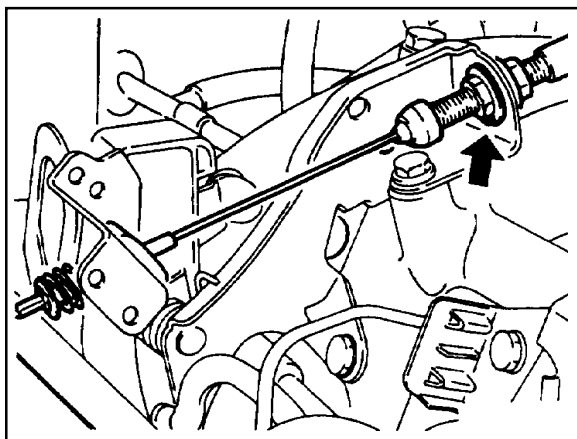


30. Loosen the connection of control pressure cable (an arrow used in auto transmission).

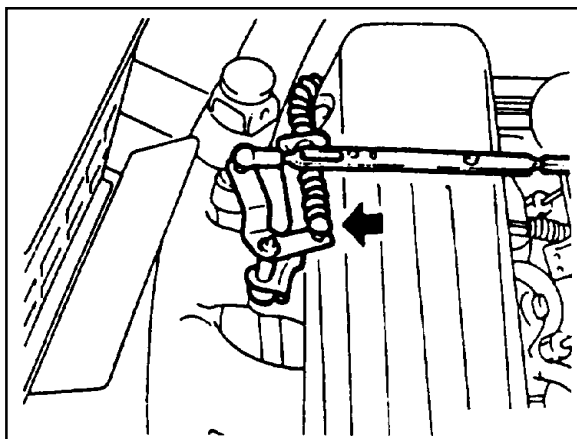

31. Separate the exhaust pipe flange from the turbo charger.

Installation Notice


Tightening Torque	30 Nm
-------------------	-------

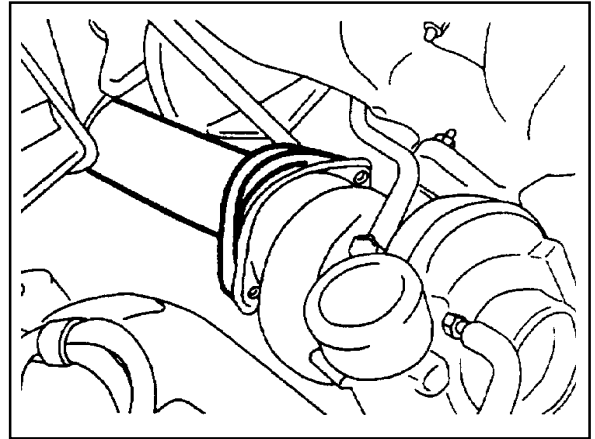

32. Loosen the installing bolt of clutch release cylinder and remove the clutch release cylinder.

Installation Notice

Tightening Torque	20 - 34 Nm
-------------------	------------

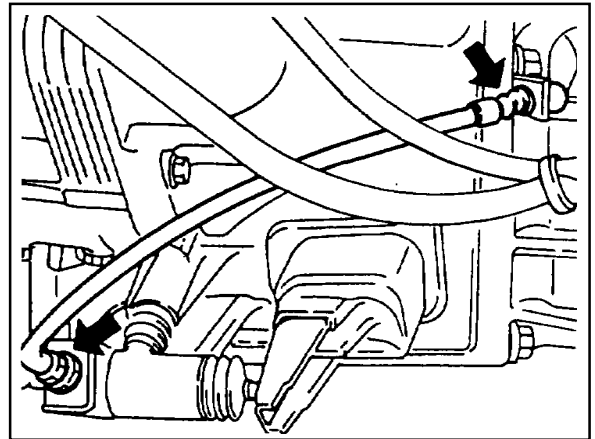

33. Disconnect the exhaust pipe flange from the exhaust manifold.


Installation Notice

Tightening Torque	30 Nm
-------------------	-------


34. Remove the propeller shaft from the transmission.

Installation Notice

Tightening Torque	Axle 70 ~ 80 Nm
	T/C 81 ~ 89 Nm

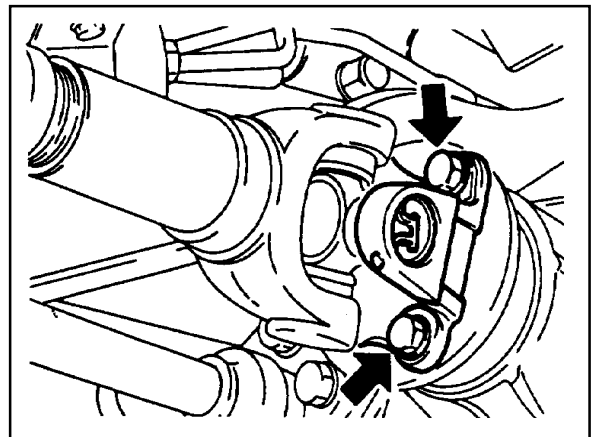

35. Remove the shift control cable.
36. Remove the transmission.

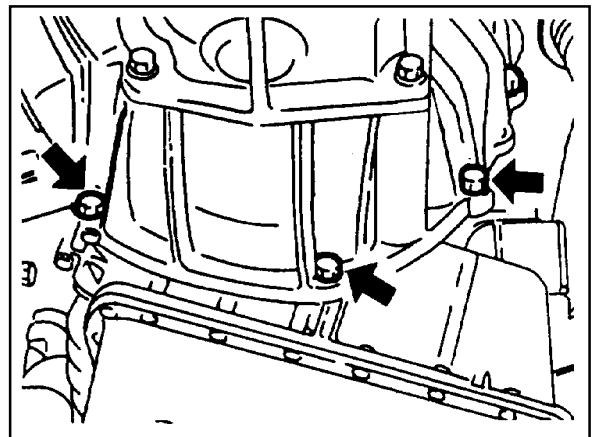


1B3-20 OM600 ENGINE MECHANICAL

37. Loosen the engine mounting bracket nut.


Installation Notice


Tightening Torque	50 - 75 Nm
-------------------	------------

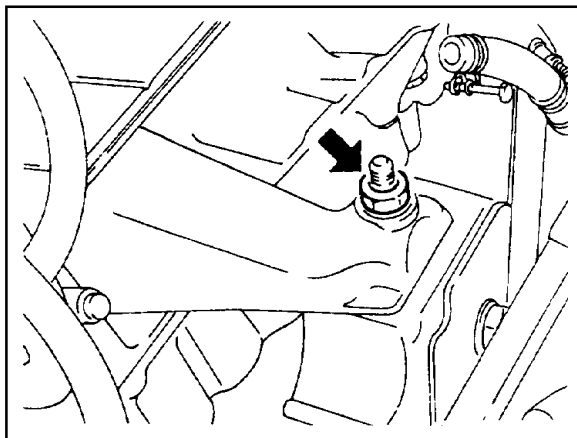

38. Remove the engine assembly from the vehicle by using a hoist or crane.

39. Installation should follow the removal procedure in the reverse order.

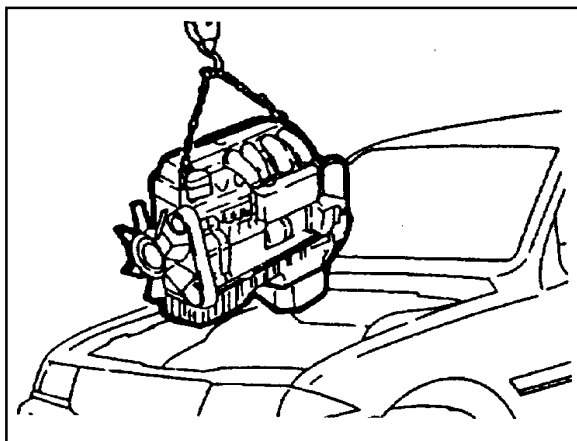



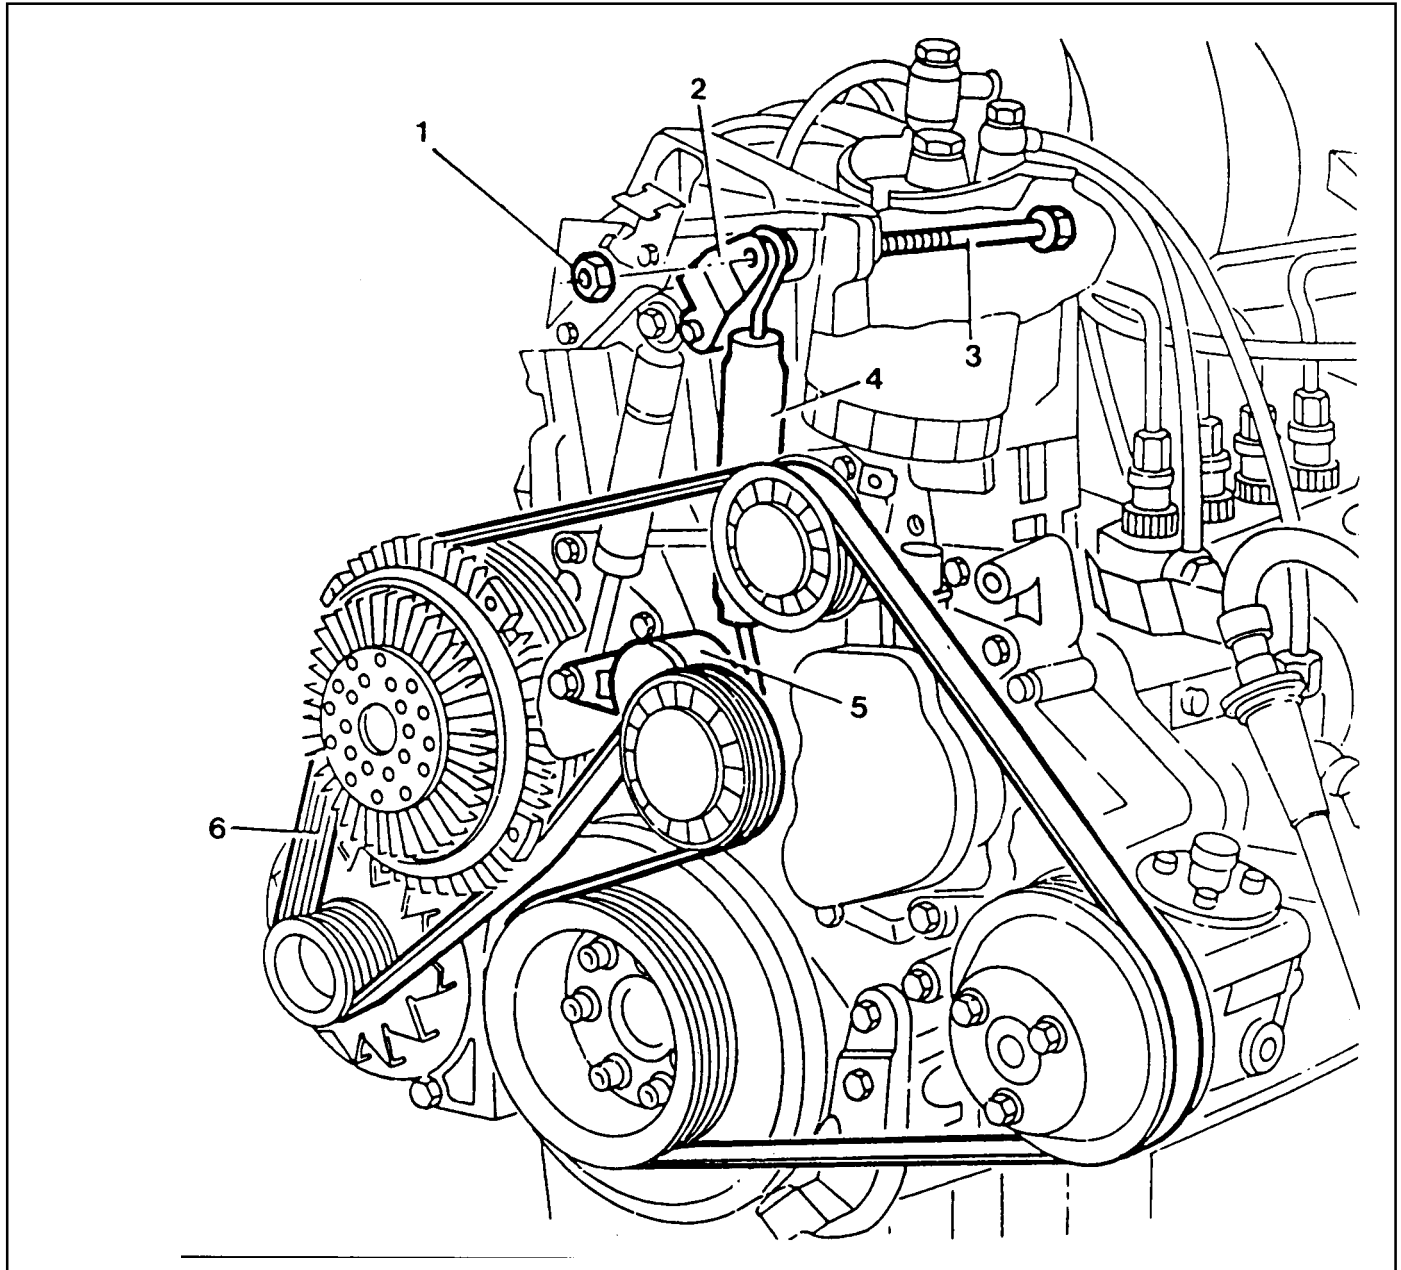
POLY V-BELT

- 1 Nut 23Nm
- 2 Tensioning Lever
- 3 Bolt

- 4 Spring
- 5 Tensioning Lever
- 6 Poly V-Belt

Removal & Installation Procedure

- 1. Remove the nut.
- 2. Push the tensioning lever in direction of arrow with a rod (F12 ´ 180mm) and pull out the bolt to the rear.
- 3. Push back the tensioning lever (arrow direction) to release the spring tension and remove the belt.
- 4. Install the poly V-belt beginning at the tensioning pulley (7).

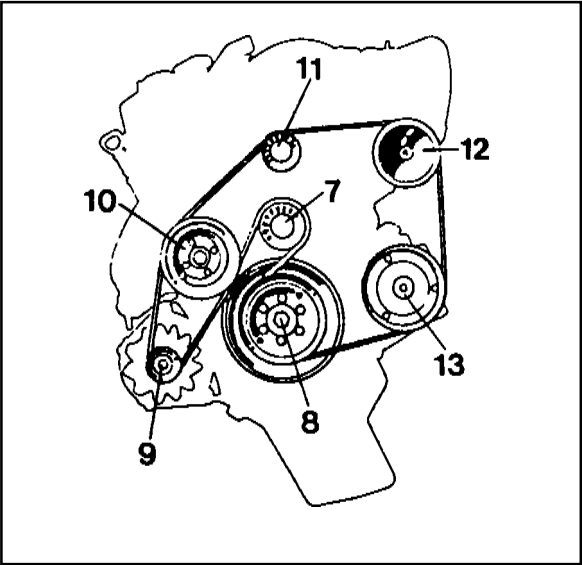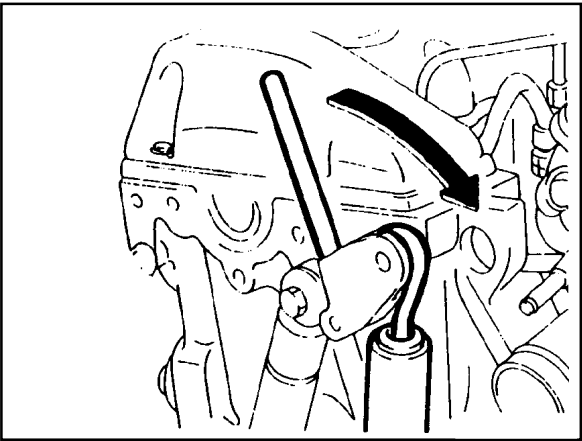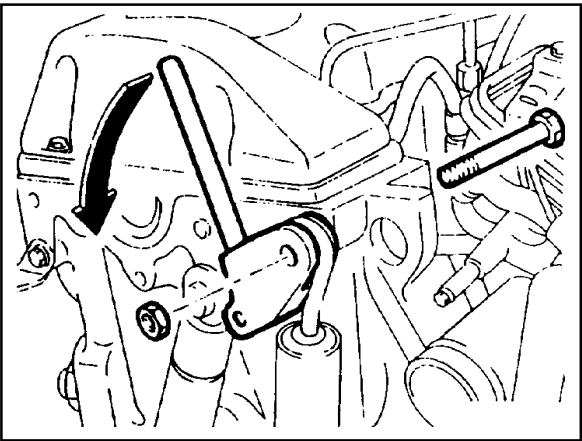


- 7 Tensioning Pulley
- 8 Crankshaft
- 9 Alternator
- 10 Coolant Pump
- 11 Guide Pulley
- 12 Power Steering Pump
- 13 Aircon. Compressor

Lengthe of Belt

Length (L)	With Air Conditioner	2,100 mm
	Without Air Conditioner	2,040 mm

TENSIONING DEVICE

Preceding Work : Removal of cooling fan

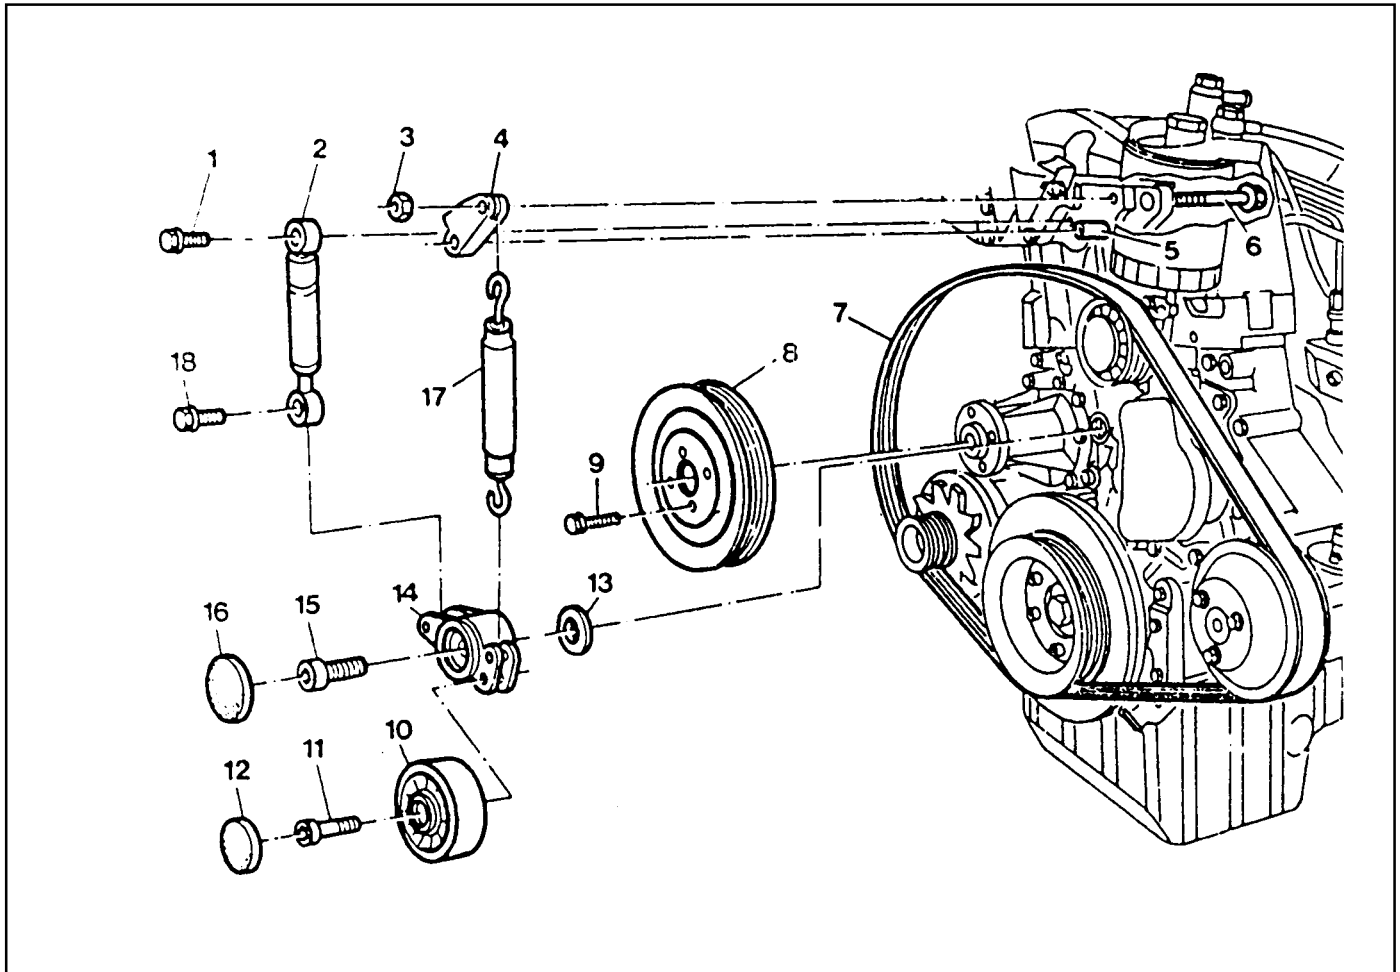

1 Bolt	21Nm	10 Tensioning Pulley	
2 Damper		11 Socket Bolt	29Nm
3 Nut	21Nm	12 Closing Cover	
4 Tensioning Lever		13 Washer	
5 Guide Rail Pin		14 Tensioning Lever	
6 Bolt		15 Fit Bolt	100Nm
7 Poly V-Belt		16 Closing Cover	
8 Belt Pulley		17 Spring	
9 Bolt	10Nm	18 Bolt	20Nm


Removal & Installation Procedure

1. Remove the nut.


Installation Notice

Tightening Torque	10 Nm
-------------------	-------


2. Push the tensioning lever in direction of arrow with a rod (F12 ´ 180mm) and push out the bolt to the rear.

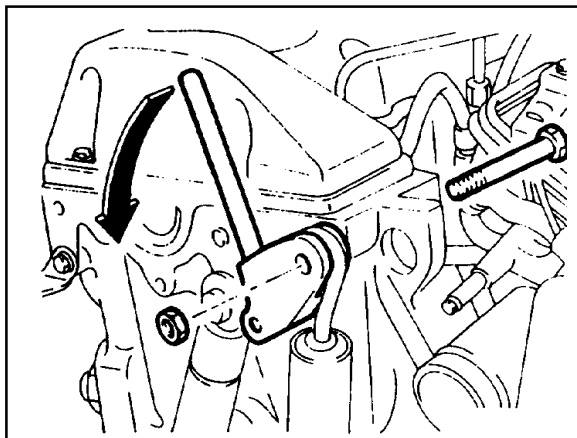

3. Push back the tensioning lever to release the spring tension and remove the belt.

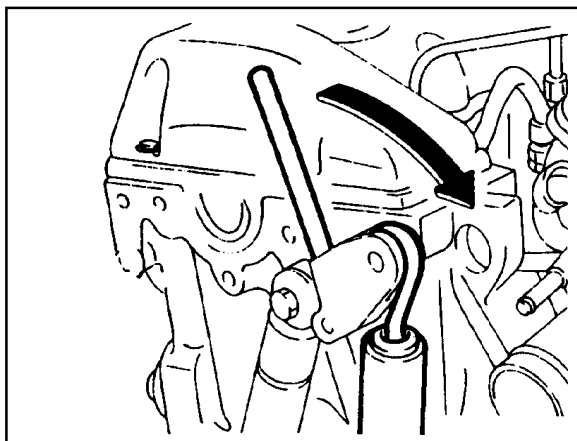


4. Remove the bolt (9) and then remove the belt pulley (8).

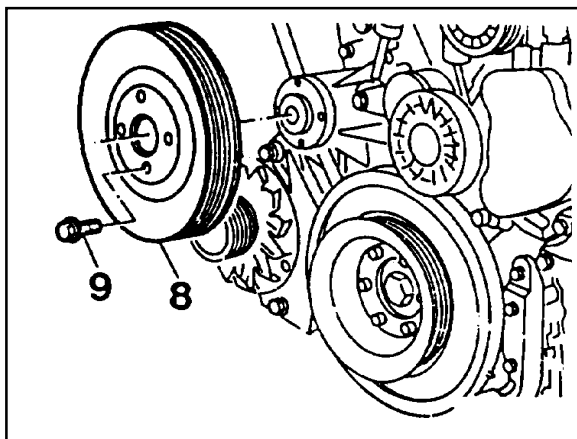

5. Remove the bolt (1, 18) and take off the damper (2).

Notice


Pay attention to installation position of the damper.

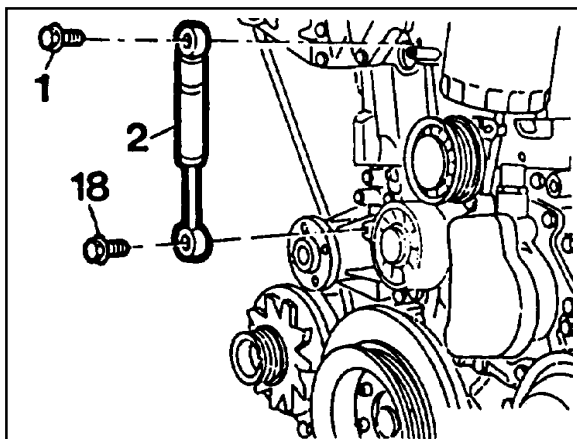

6. Pull off the tensioning lever (4) from guide rail pin.
7. Remove the spring (17).

Installation Notice


Insert spring (17) with color coding (blue/violet) facing up.

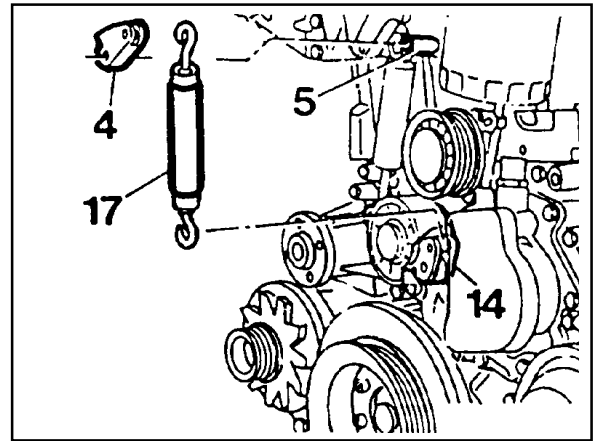

8. Pry off the closing cover (12) and remove the socket bolt (11) and then remove the tensioning pulley (10).

Installation Notice

Tightening Torque	29 Nm
-------------------	-------

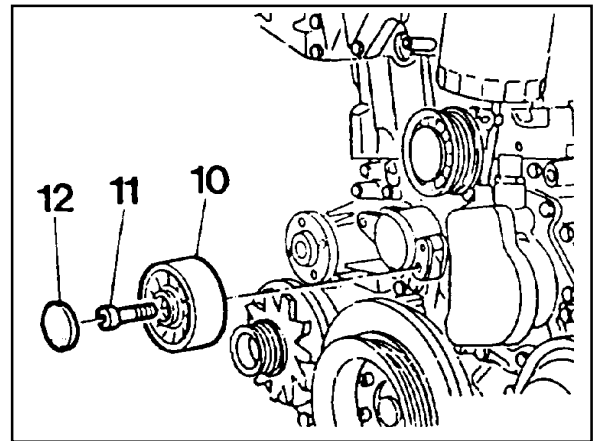


9. Pry off the closing cover (16) and remove the fit bolt (15).
10. Remove the tensioning lever (14) and washer (13).
11. Clean thread in the timing case cover and fit bolt.

Installation Notice

Apply Loctite on thread of fit bolt.


Tightening Torque	100 Nm
-------------------	--------

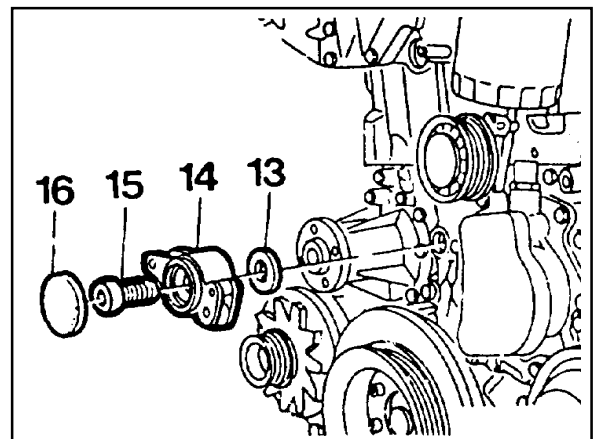


12. Installation should follow the removal procedure in the reverse order.

POLY V-BELT ALIGNMENT & INSPECTION

Without Air Conditioner

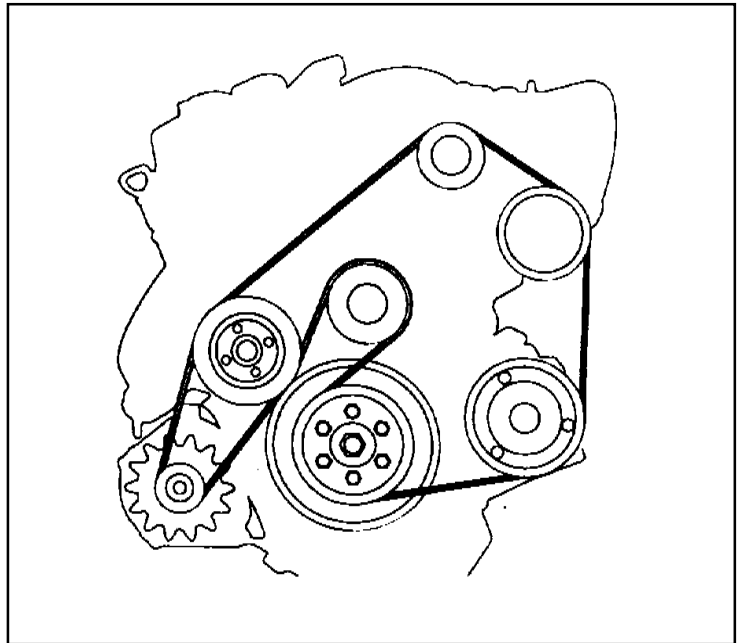

With Air Conditioner

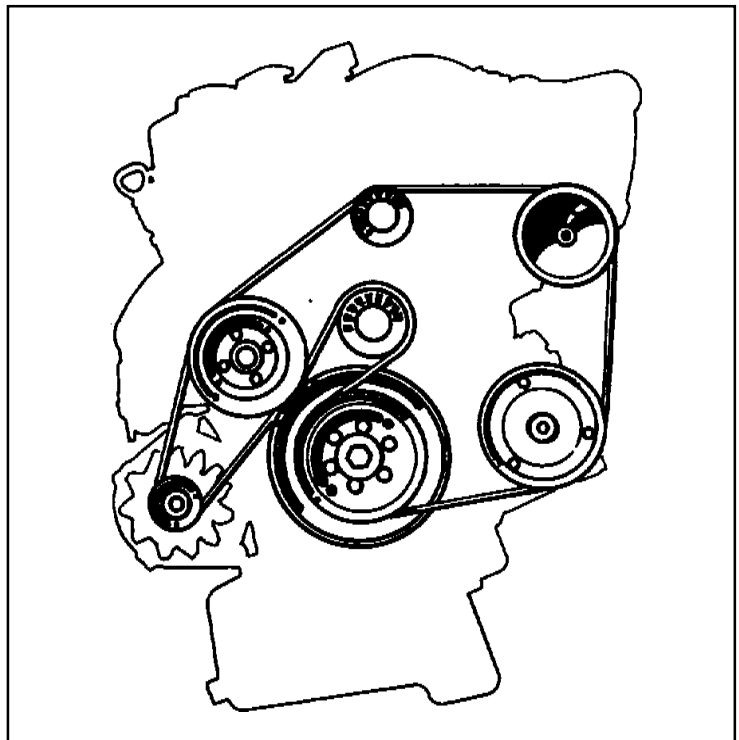


Inspection Procedure


- Mark poly V-belt at a clearly visible point with chalk.
- Rotate the engine and check the belt.

Notice


If one of the following types of damage is found, replace the belt.

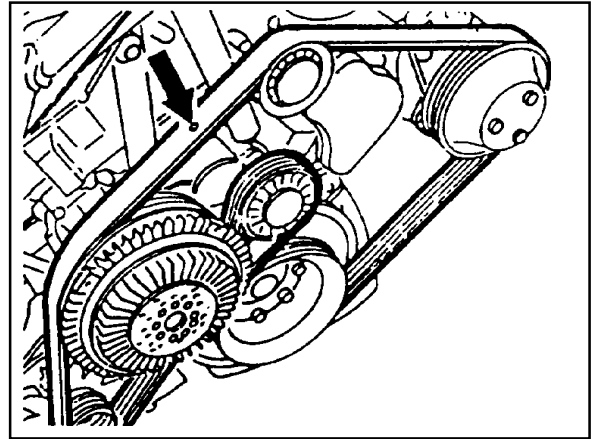


1. Rubber lumps in the base of rips.
2. Dirt or grit ingrained.

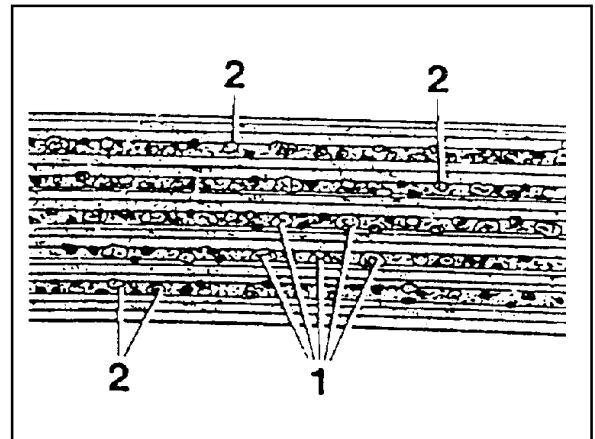


3. Pointed rips.
4. Belt cord visible in the base of rips.

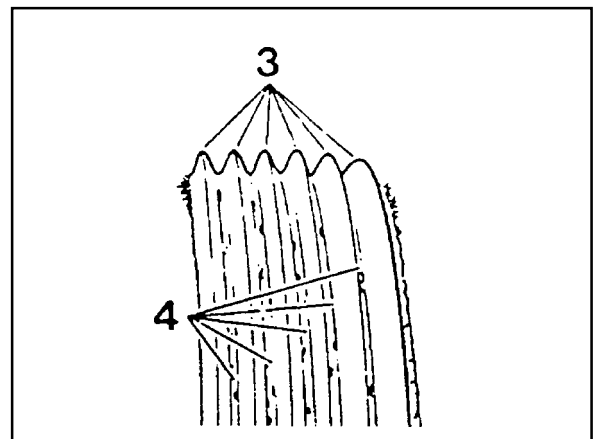

5. Cord torn out at the side.
6. Outer cords frayed.

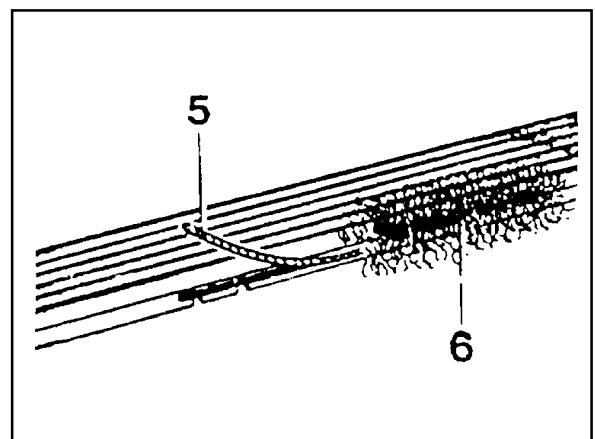


7. Belt detached from the base of rip.

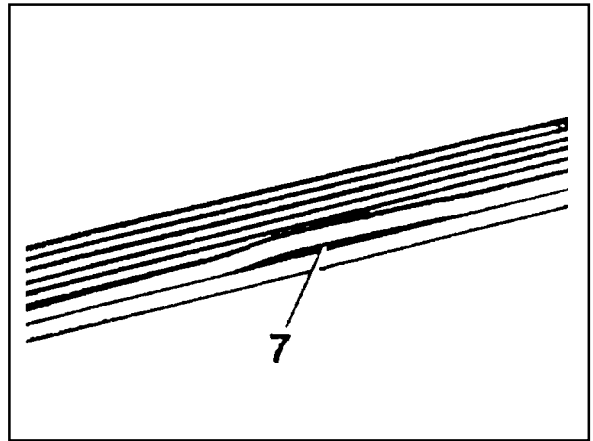


8. Splits across the rips.


9. Sections of rip torn out.

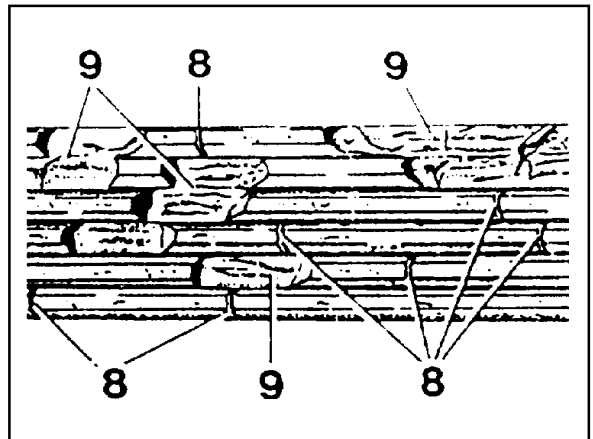

10. Splits across several rips.

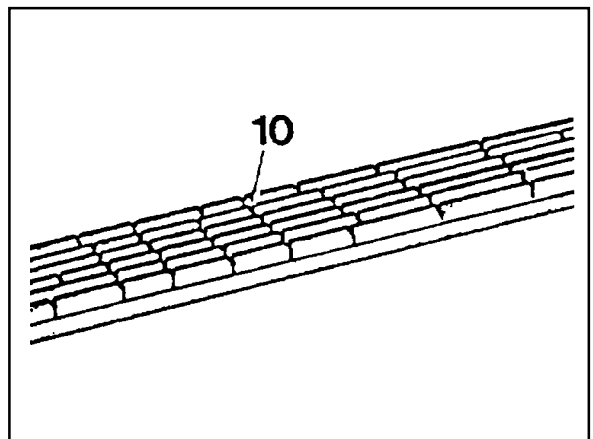


11. Splits across the back.

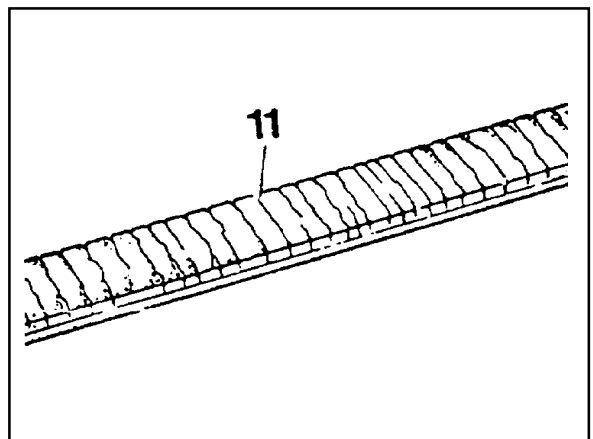

PRECHAMBER

Preceding Work : Removal of glow plug
Removal of fuel injection nozzle

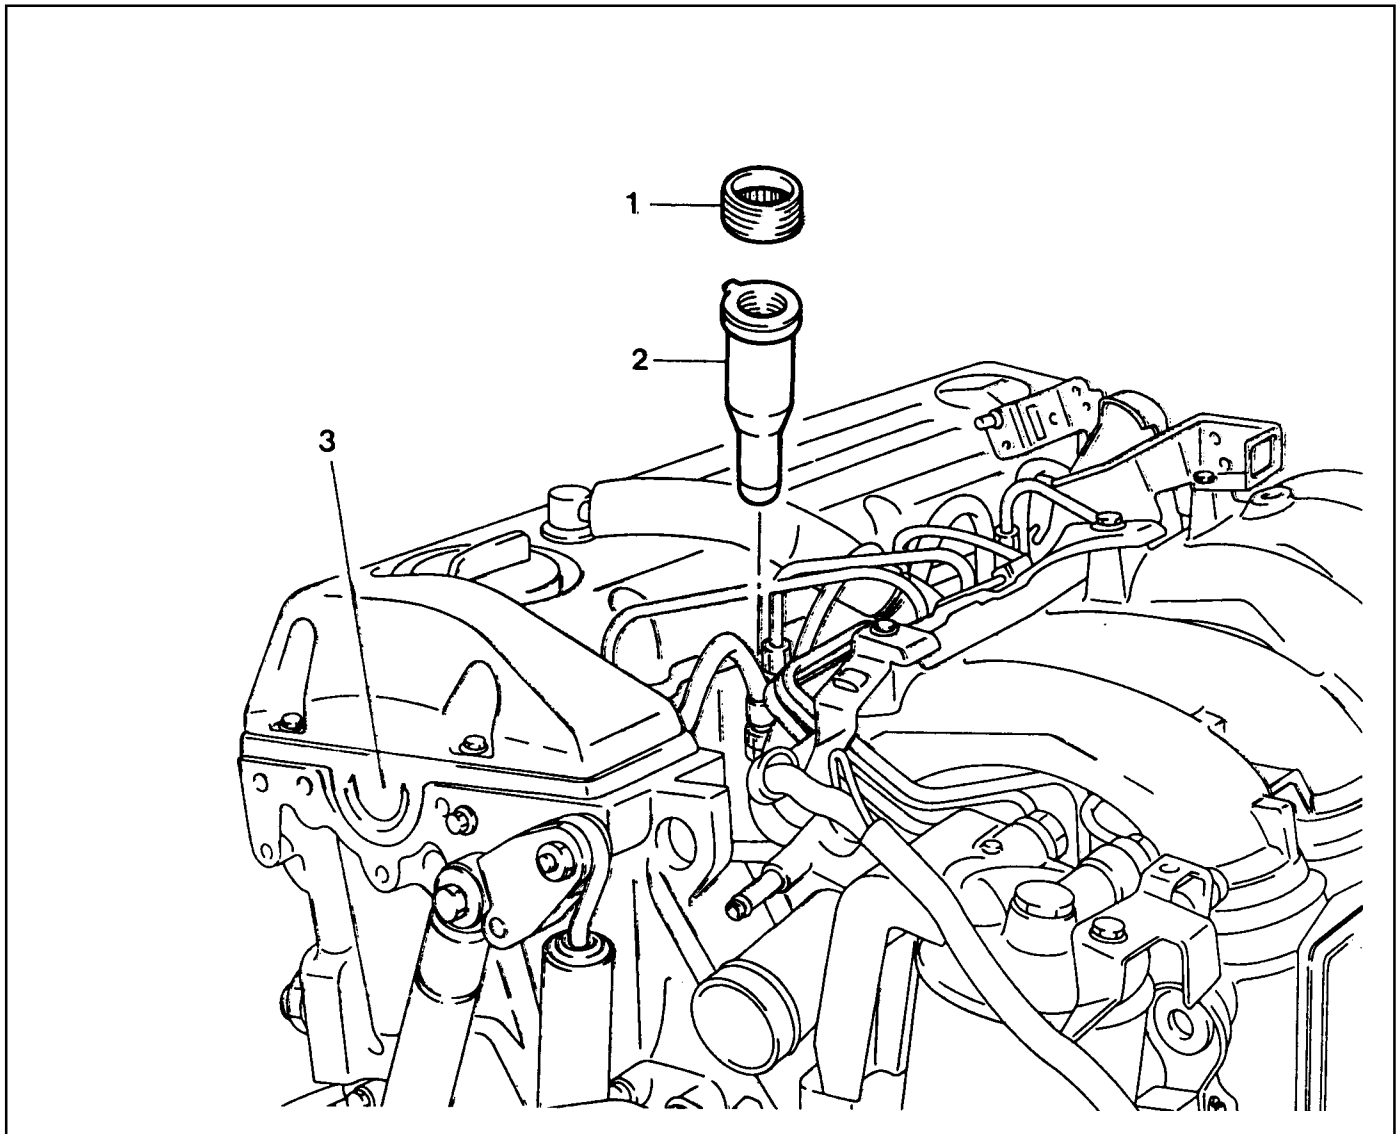

- | | | |
|-----------------------|--------|-----------------|
| 1 Threaded Ring | 130 Nm | 3 Cylinder Head |
| 2 Prechamber | | |

Tools Required


603 589 00 09 00 Serration Wrench

667 589 03 63 00 Sliding Hammer

Removal & Installation Procedure


1. Using the serration wrench (4), remove the threaded ring (1).

Serration Wrench 603 589 00 09 00

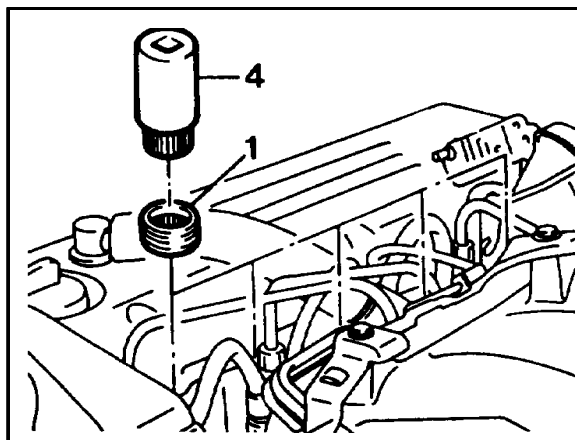

2. Install the sliding hammer into the prechamber.


Sliding Hammer 667 589 03 63 00

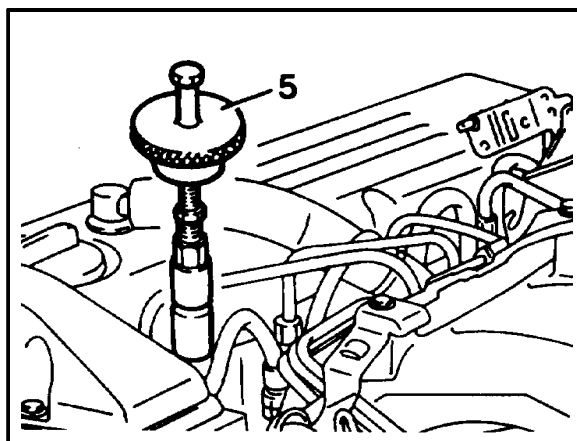

3. Remove the perchamber (2).

Notice


After removing the prechamber, cover over the bores with clean rag.

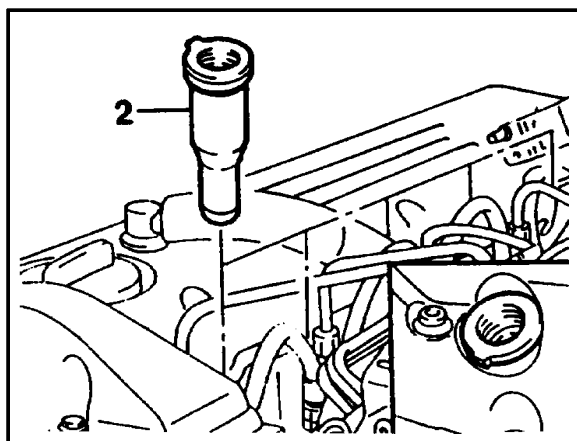

4. Inspect the prechamber.

Notice

If the prechamber seats in the cylinder head are leaking or if the prechambers are replaced, the sealing surfaces in the cylinder head must be remachined.

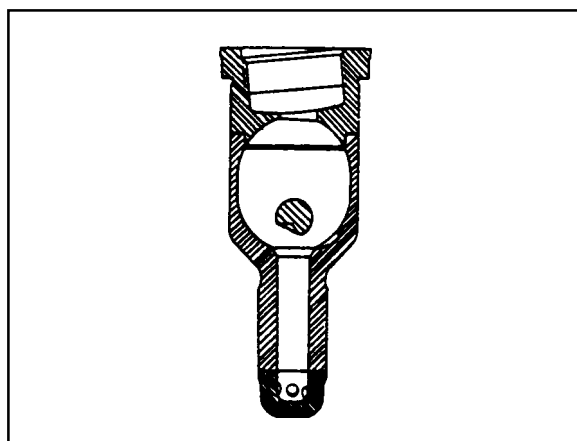

Assembly Procedure

Notice

In case the prechambers are reused, inspect the prechambers thoroughly, if the ball pin by heat and fire is broken, it can not be used.

1. Clean the sealing surface of the prechamber.
2. Insert the prechamber into the cylinder head at the same time aligning the cam on the collar of the prechambers with the slots in the cylinder head.


Notice

If the spacer rings are fitted to the prechambers, the spacer rings should be replaced with rings of the same thickness.


Thickness of Spacer Ring	0.3, 0.6, 1.0 mm
--------------------------	------------------

3. Coat the threaded ring with oil and assemble the ring by using the serration wrench.

Tightening Torque	130 Nm
-------------------	--------

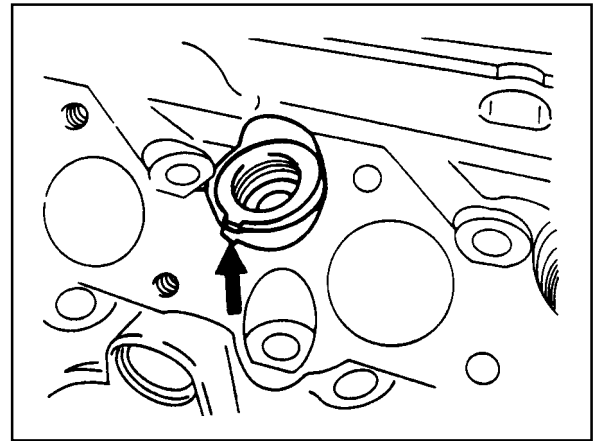

MILLING OF PRECHAMBER SEALING SURFACE

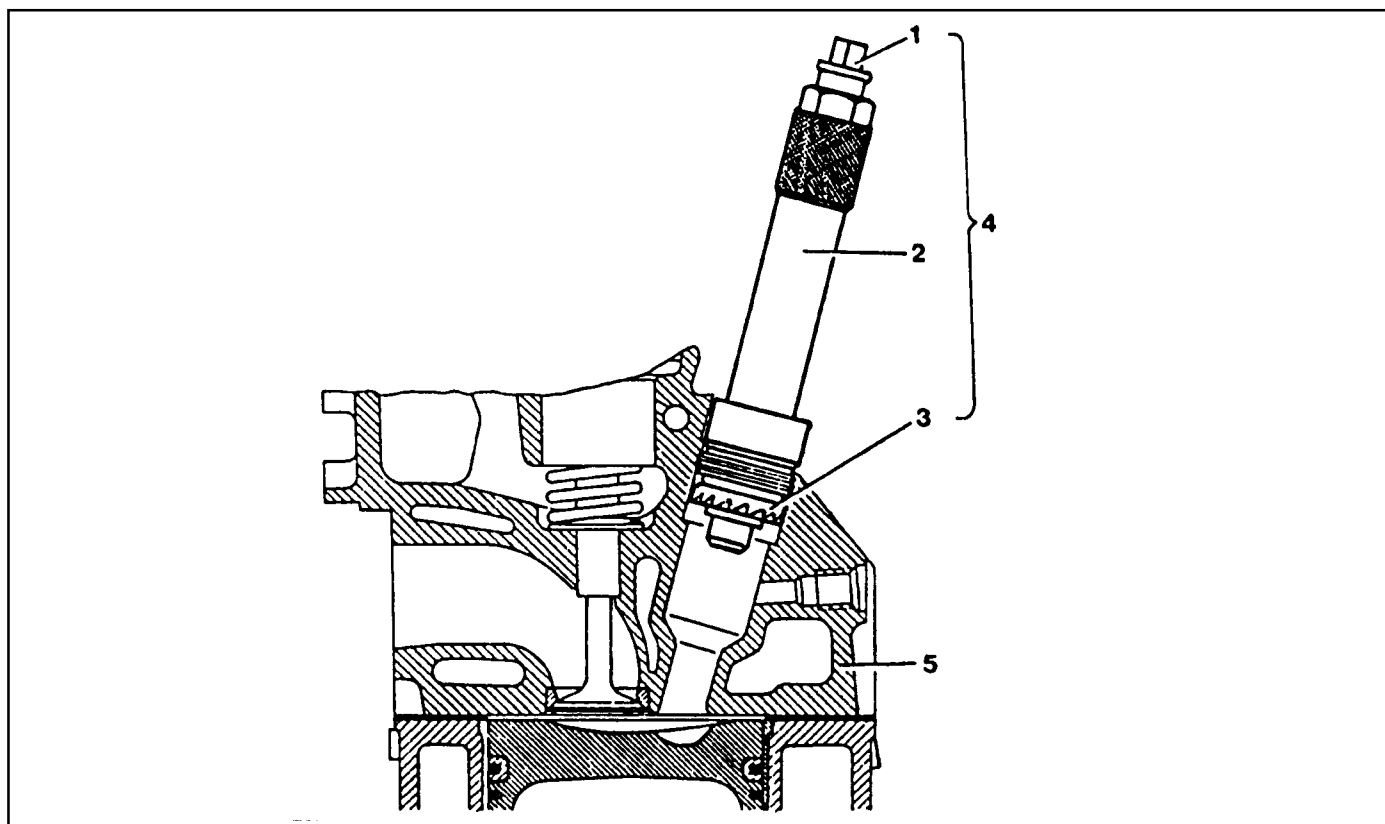

- 1 Drift
- 2 Sleeve
- 3 Milling Cutter

- 4 Counter Sink (Special Tool - 601 589 00 66)
- 5 Cylinder Head

Tools Required

601 589 00 66 00 Counter Sink

667 589 00 23 00 Height Gauge

Milling of the Prechamber Sealing Surface

Notice

The prechamber sealing surface may only be remachined once with the cylinder head fitted. It is essential to adhere to the specified projection 'C' of the prechamber of 7.6 - 8.1mm.


This ensures that the required clearance exists between prechamber and piston crown with the piston in TDC. For this reason, spacer rings should be inserted on remachined sealing surfaces.

Tightening Torque	0.3, 0.6, 1.0 mm
-------------------	------------------

If a spacer ring is already fitted, or a marking is made on the cylinder head, the cylinder head must be removed and size 'C' measured if further remachining is necessary on a prechamber sealing surface.


1. Remove the injection nozzle.
2. Remove the prechamber.
3. Cover the prechamber bore to avoid any chips dropping into the combustion chamber.
4. Remove the protective sleeve from the countersink and rotate the countersink into the prechamber bore to be machined as far as the stop.

Counter Sink 601 589 00 66 00

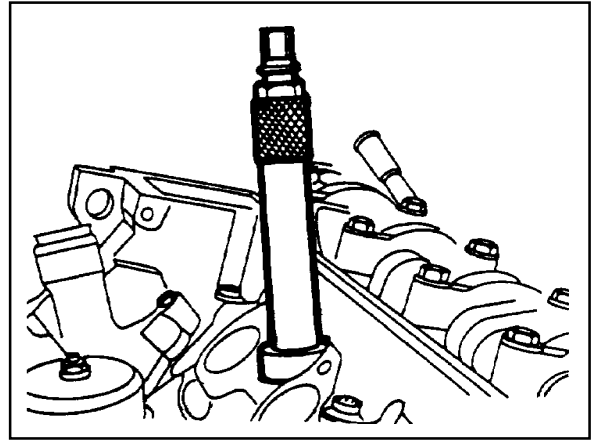


5. Maintain size 'X' from the top edge of mandrel to the top edge of the sleeve with the gauge.


Height Gauge 667 589 00 23 00

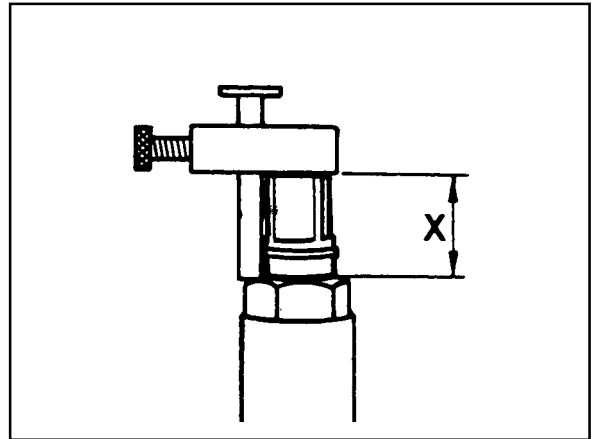

6. Measure the 'X' by using a vernier caliper.

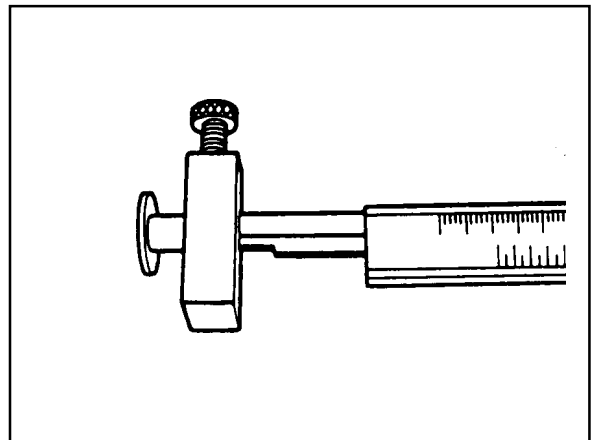

7. Mount the turning tool onto the countersink tool and rotate to the right approx. 5 revolutions by applying slight pressure.

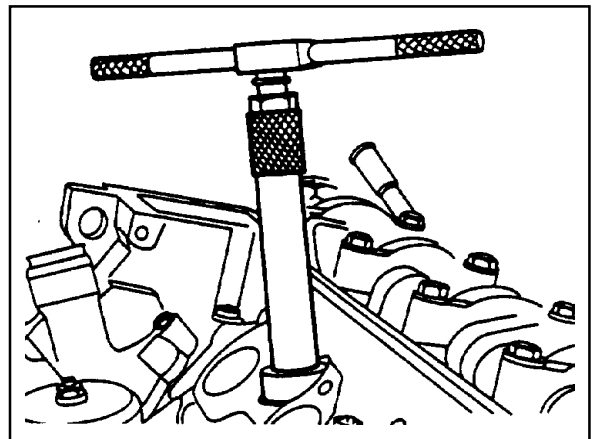

8. Remeasure size 'X' and compare it with the first measurement and determine the thickness of spacer ring.

Ex

Size before machining	25.7 mm
Size after machining	25.5 mm

The spacer ring should be selected so that it is at least 0.1mm and not more than 0.3mm thicker than the measured on the sealing surface. In this example, the necessary thickness of spacer ring should be within 0.3 ~ 0.5mm and the thickness of spacer ring to be installed is 0.3mm.

9. Remove the countersink tool and clean the chips.

Notice



If the sealing surface is not completely flat, remachine the sealing surface.

10. Remove rag from the prechamber bore and crank the engine with starter motor to throw out any chips which may have got into the combustion chamber.
11. Insert the proper spacer ring into the prechamber sealing surface.
12. Punch a mark on the cylinder head above the prechamber sealing surface which has been machined.
13. Install the prechambers.

Notice


If the cylinder head is removed, the projection 'C' is measured in place of size 'X' and the appropriate size of spacer ring selected.

Normal Projection (c)	7.6 - 8.1mm
-----------------------	-------------

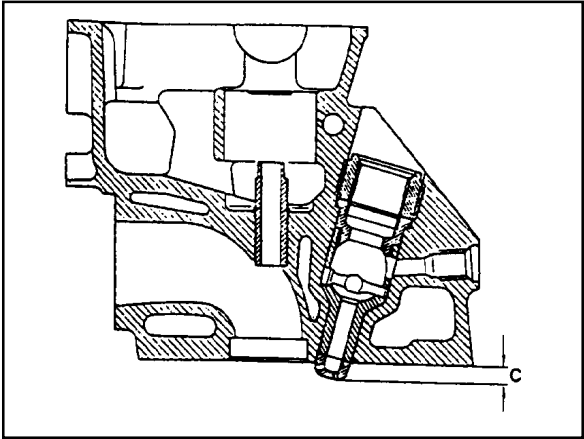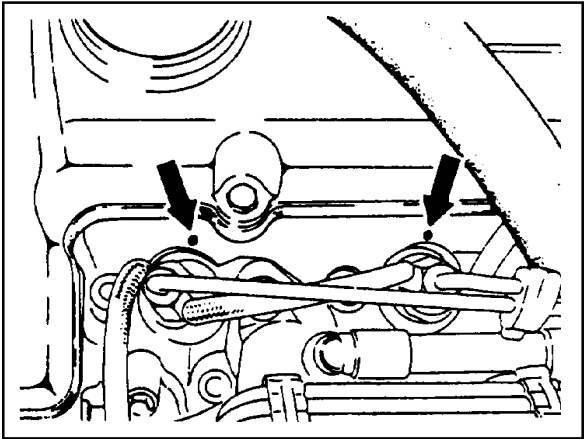

TDC (TDC SENSOR BRACKET) SETTING

Preceding Work : Removal of No.1 cylinder prechamber

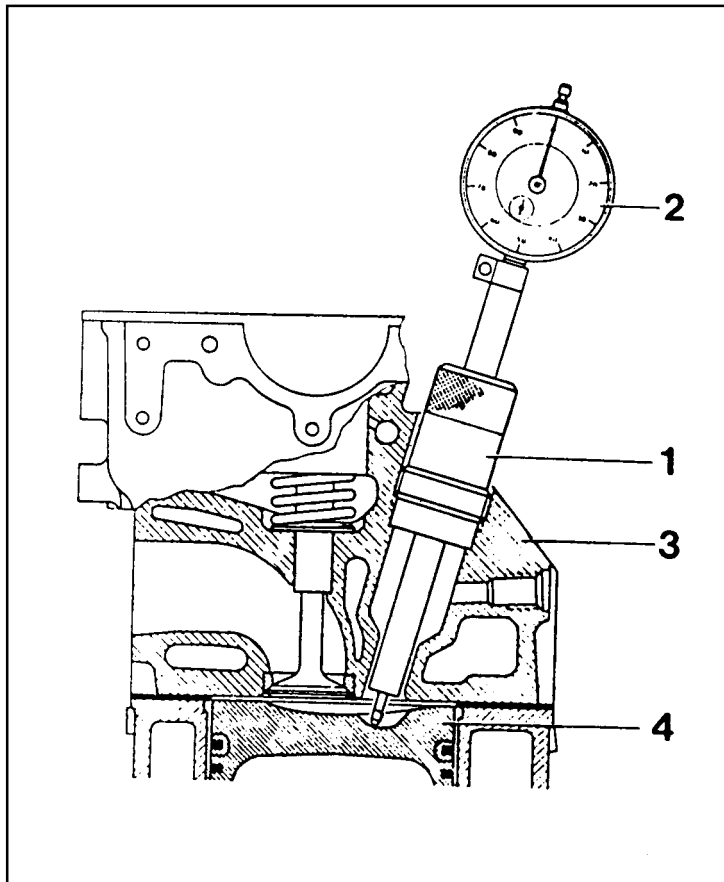

- 1 Measuring Device
- 2 Dial Gauge
- 3 Cylinder Head
- 4 Piston Set at TDC

Tools Service

001 589 32 21 00 Dial Gauge

601 589 07 21 00 Depth Gauge

667 589 01 21 00 Fixing Device

Notice


- The TDC sensor bracket must be adjusted in case of followings.
- When replacing the TDC sensor bracket.
- When replacing the crankshaft, the hub or the vibration damper.
- When replacing or installing the timing case cover.
- After engine overhauling.

* If the cylinder head is removed, the measuring pin of the dial gauge can be positioned on the piston crown.

This is done by placing the magnetic dial holder on the mating surface of the crankcase.

Setting (with cylinder head installed)

- 1. Remove the prechamber of No. 1 cylinder.
- 2. Position the piston of No.1 cylinder at BTDC 10.

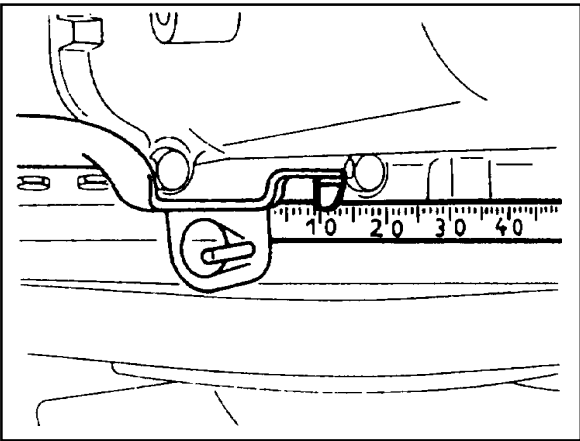


- 3. Install the measuring device into the prechamber bore and position the dial gauge with a preload of 5mm.

Dial Gauge 001 589 53 21 00
Depth Gauge 601 589 07 21 00

- 4. Slowly rotate the crankshaft in the direction of engine rotation until the large pointer on the dial gauge stops (TDC position).

Notice

- The position of TDC is when the large pointer on the dial gauge is stopped before moving back.
- 5. remove the reinstall the measuring device and position the dial gauge scale at '0'.
 - 6. Slowly rotate the crankshaft in the direction of engine rotation until the dial gauge has moved back (counterclockwise) by 3.65mm.

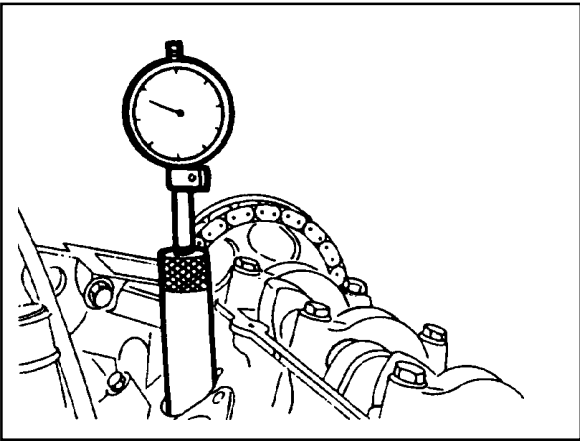


- 7. Insert fixing device into the sensor bracket.

Notice

- The pin on the vibration damper must engage into the slot of the fixing device.

Fixing Device 667 589 01 21 00

- 8. If the pin does not engage, adjust the setting of the sensor bracket by removing and tightening of the sensor bracket bolts.

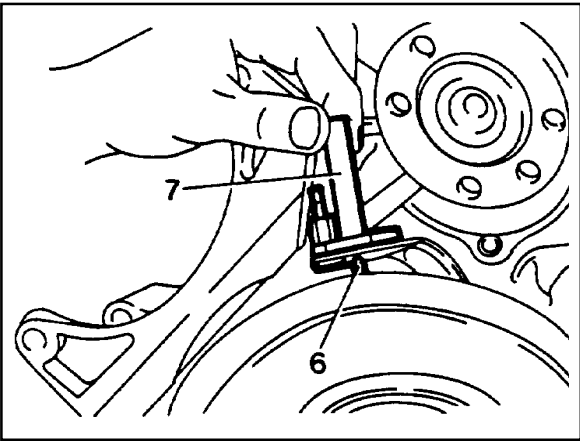


Tightening Torque	10 Nm
-------------------	-------

Notice

- The timing mark on the damper must be positioned at ATDC 20.

CYLINDER HEAD

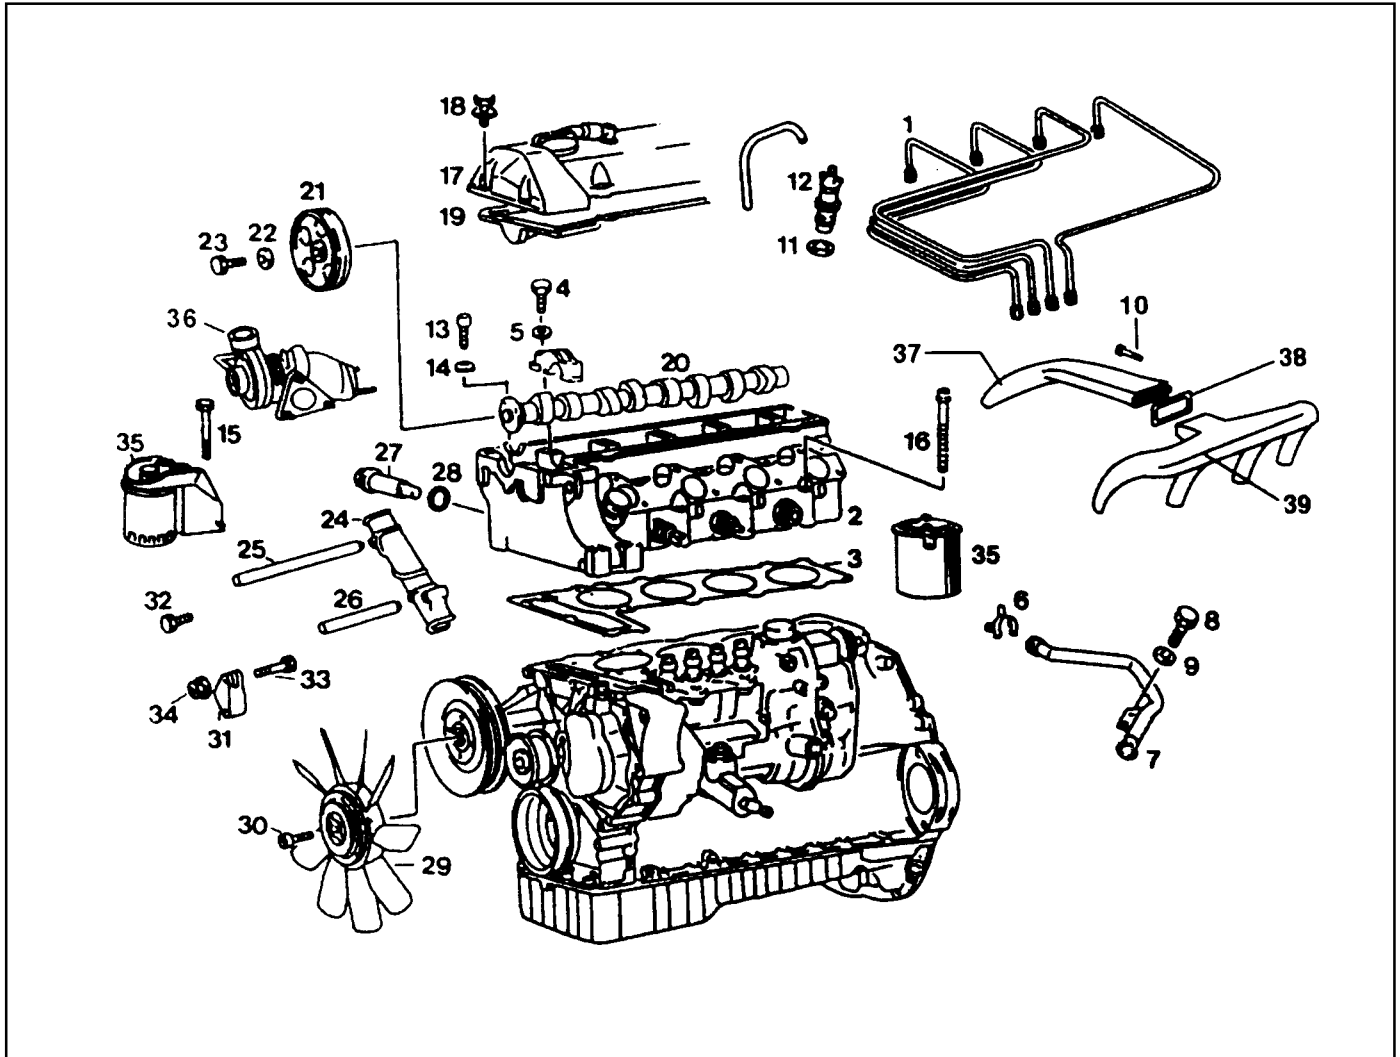

1 Fuel Injection Pipe	18Nm	21 Camshaft Drive Sprocket	Replace
2 Cylinder Head		22 Washer	
3 Gasket	Replace	23 Bolt(12-Sided)	25Nm + 90°
4 Bolt	25Nm	24 Sliding Rail	
5 Washer		25 Sliding Rail Pin	
6 Clamp		26 Sliding Rail Pin	
7 Heater Feed Pipe		27 Chain Tensioner	80 Nm
8 Bolt		28 Gasket	Replace
9 Washer		29 Cooling Fan	Check
10 Bolt		30 Hexagon Socket Bolt	45 Nm
11 Nozzle Washer	Replace	31 Tensioning Lever	
12 Fuel Injection Nozzle	35-40 Nm	32 Bolt	25 Nm
13 Hexagon Socket Bolt	25 Nm	33 Bolt	
14 Washer		34 Nut	23 Nm
15 Bolt	25 Nm	35 Fuel Filter	
16 Cylinder Head Bolt	See Table	36 Turbo Charger	
17 Cylinder Head Cover		37 Intake Duct	
18 Bolt	10 Nm	38 Gasket	Replace
19 Gasket		39 Intake Manifold	
20 Camshaft			

Tightening Torque


Cylinder Bolts (12-sided socket head) (Engine cold)	stage1	10 Nm
	stage2	35 Nm
	stage3	180°
M8 Cylinder Head Bolts		25 Nm

Tools Required


- 000 589 77 03 00 Box Wrench Insert
- 001 589 65 09 00 Socket Wrench Insert
- 102 589 03 40 00 Magnetic Bar
- 116 589 02 34 00 Threaded Pin
- 116 589 03 07 00 T Type Socket Wrench
- 116 589 20 33 00 Sliding Hammer
- 601 589 00 10 00 Cylinder Head Bolt Wrench
- 602 589 00 40 00 Engine Lock
- 603 589 00 40 00 Counter Holder

Tightening Sequence for Cylinder Head Bolts

OM 662LA Engine

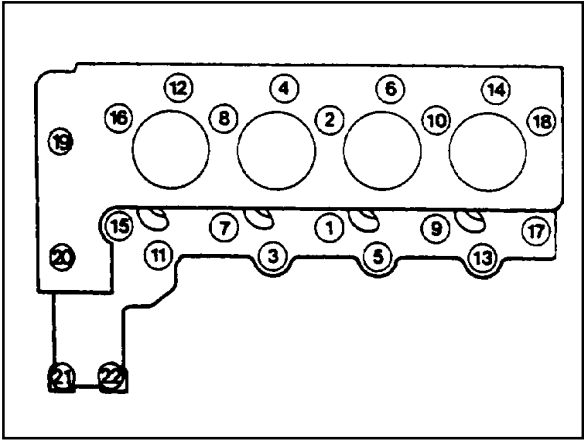

OM 661LA Engine

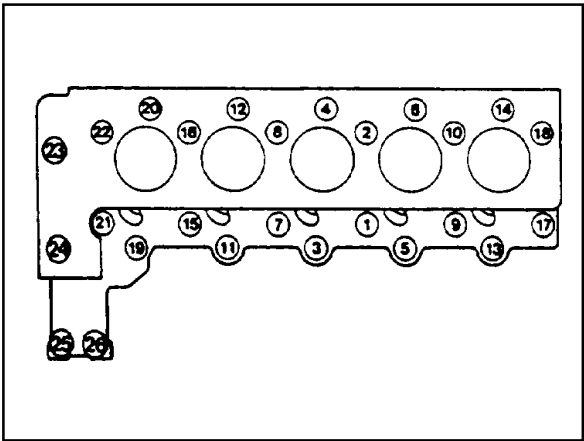


Notice

The cylinder head may only be removed when the engine has cooled down. The cylinder head is removed together with the exhaust manifold. As the cylinder head bolts undergo a permanent tightening. They require to be replaced if they exceed the maximum lengths indicated in the table.

Thread Dia.	Length(L) When New	Max. Length(L)
M10	80mm	82mm
M10	102mm	104mm
M10	115mm	117mm

The twelve-sided socket head bolts are tightened with each stages of torque and torque angle.

It is not necessary to retighten the cylinder head bolts at the 1000~1500km inspection or after 1000~1500km of repairs.

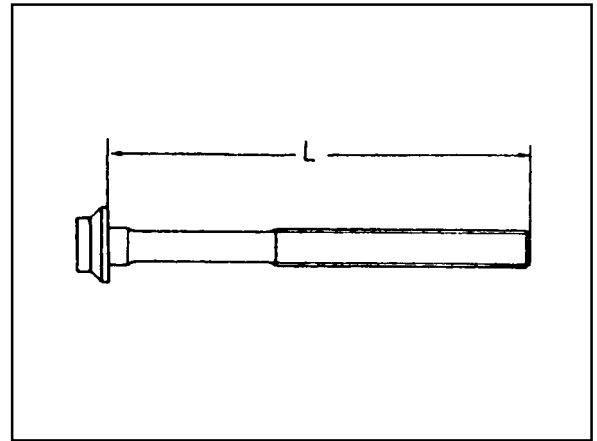


Disassembly Procedure

1. Completely drain the coolant from the radiator and cylinder block.
2. Remove the cooling fan shroud.
3. Hold the fan with counter holder and remove the bolt and then remove the cooling fan.


Notice

Keep the fan in vertical position.


Counter Holder 603 589 00 40 00

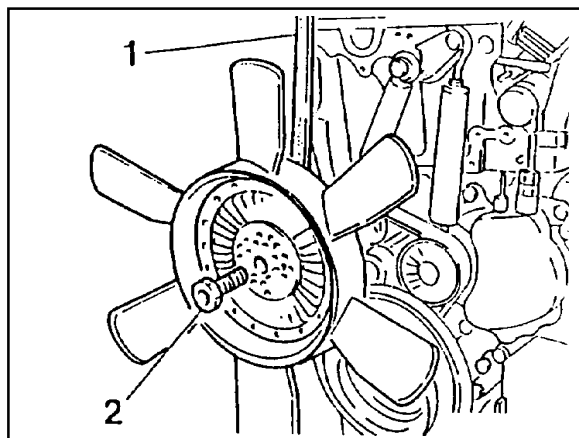


4. Remove the bracket oil dipstick tube.

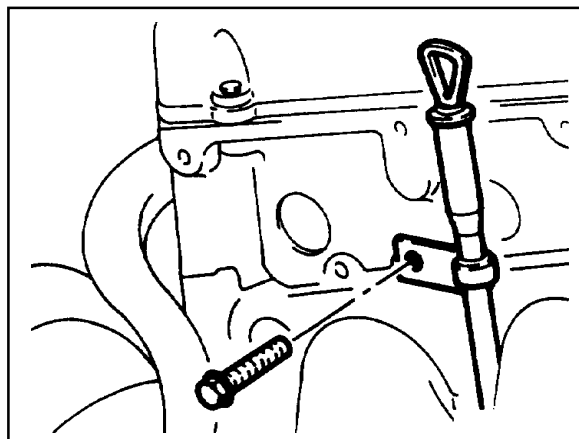

5. Remove the nut.
6. Remove the nut on the tensioning lever and insert the rod(F12 ´ 180mm). By pushing the rod to the arrow direction, pull back the bolt.

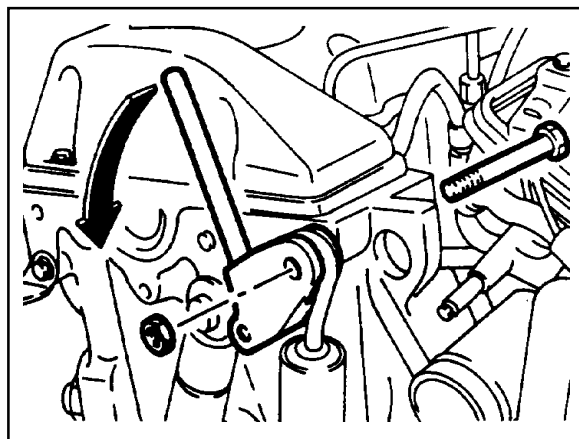


7. Push the tensioning lever to the opposite direction to release the spring tension and remove the poly V-belt.

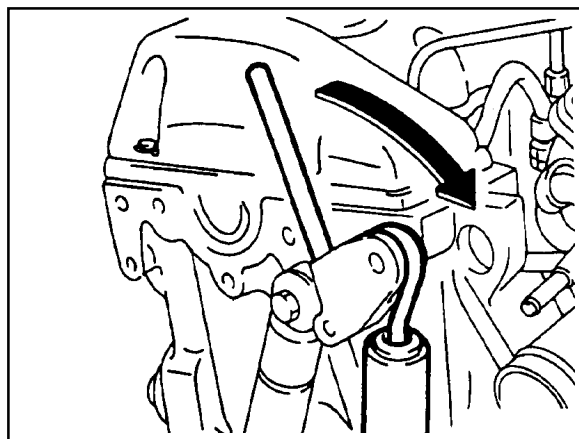


8. Remove the air cleaner cover and element and then remove the air cleaner housing.
9. Remove the oil return hose and plug.

Notice


Cover them to prevent chips from coming into.

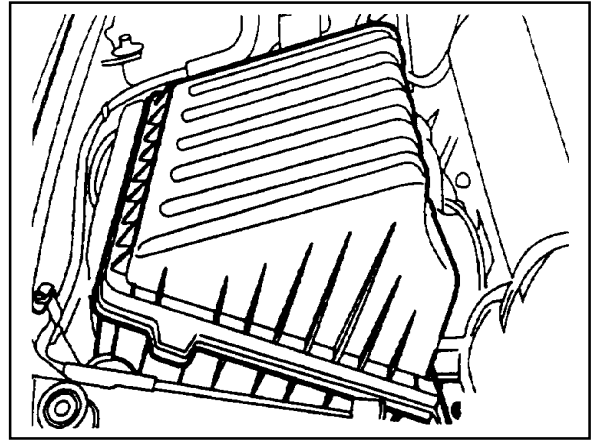


10. Unscrew the EGR pipe mounting bolts onto the exhaust manifold.
11. Remove the duct bracket from the cylinder head.

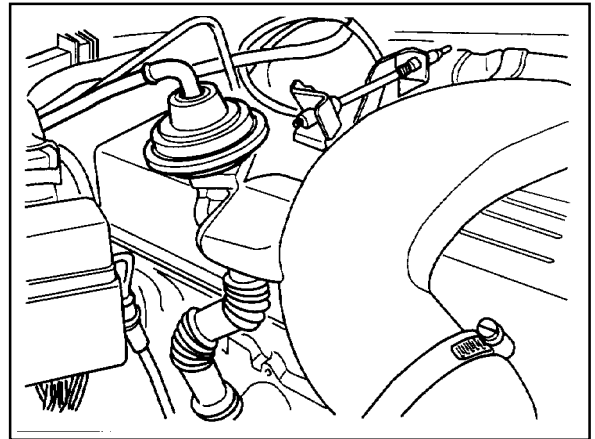

12. Unscrew the intake duct mounting bolts onto the intake manifold.

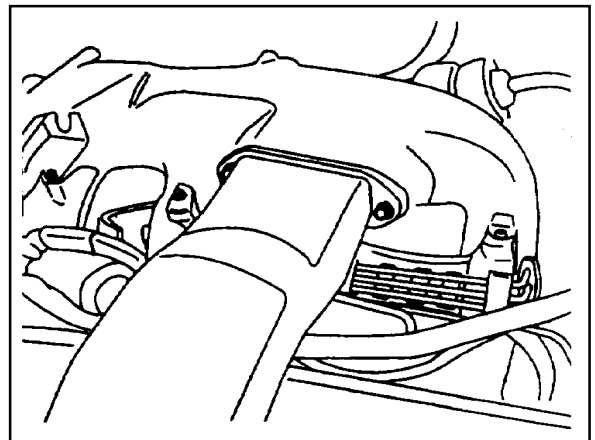


13. Separate the connecting rod from the control lever.

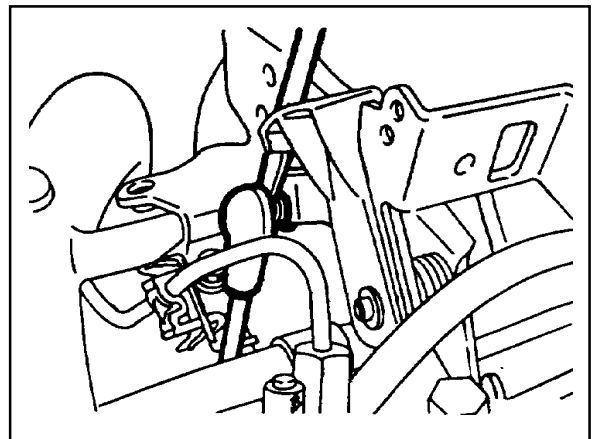


1B3-42 OM600 ENGINE MECHANICAL

14. Pull out the accelerator control linkage.

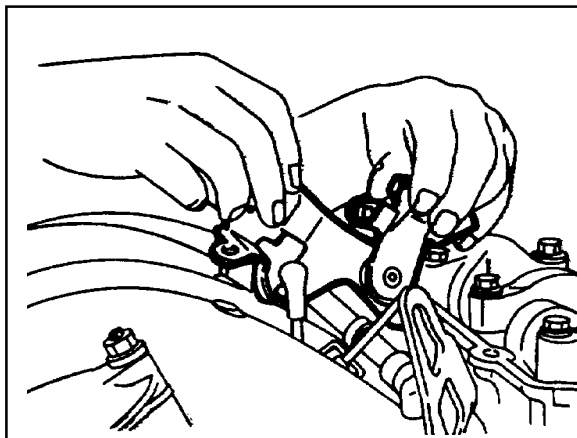


15. Remove the fuel injection line(1) from the fuel injection nozzle(12).

Box Wrench Inset 000 589 77 03 00

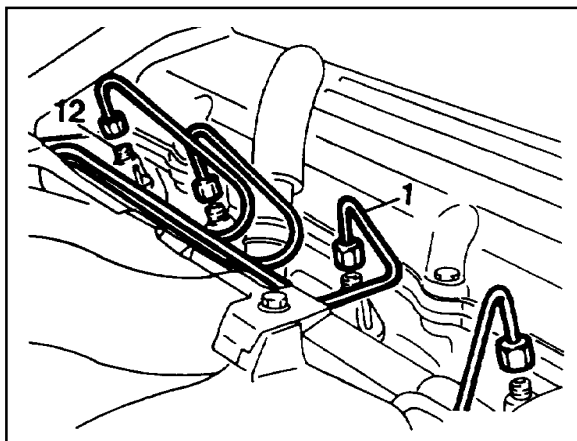


16. Remove the fuel injection line from the fuel injection pump.


Box Wrench Inset 000 589 77 03 00

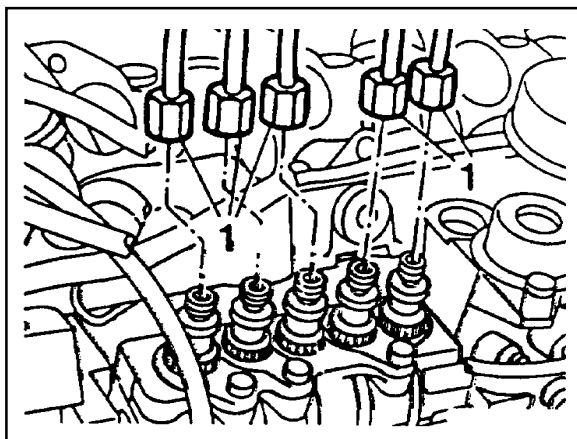


17. Remove the bracket mounting bolts and then remove the fuel injection line(1).

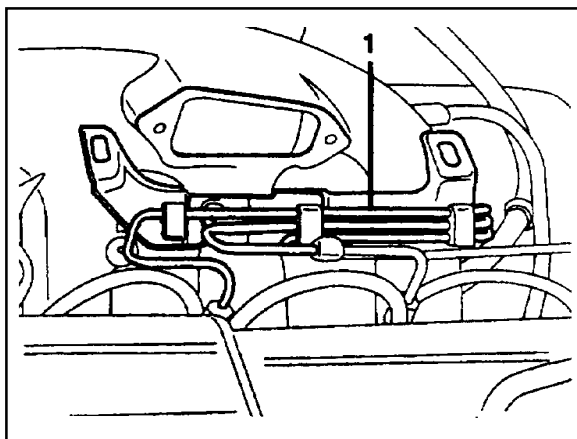


18. Disconnect the booster hose connected to intake manifold.

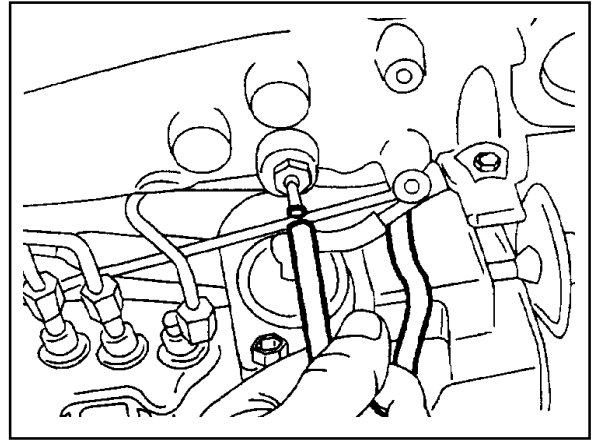


19. Remove the intake manifold and gasket.

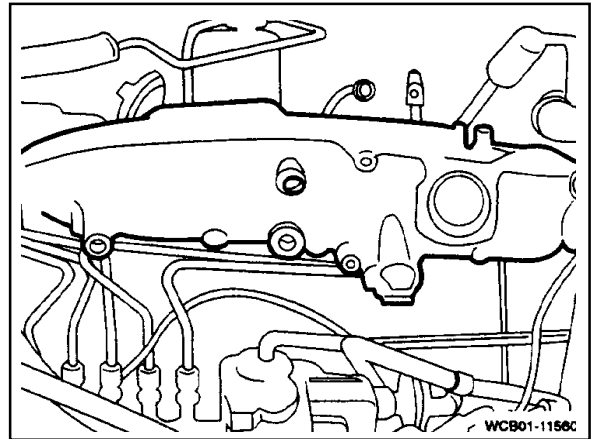


20. Remove the cylinder head cover and gasket with the blow-by gas hose.

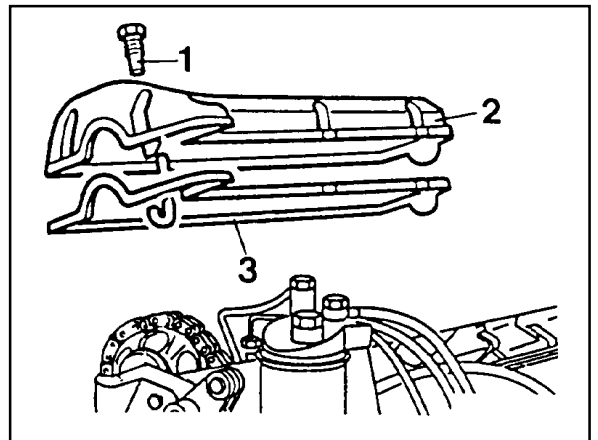


21. Disconnect the glow plug cables.

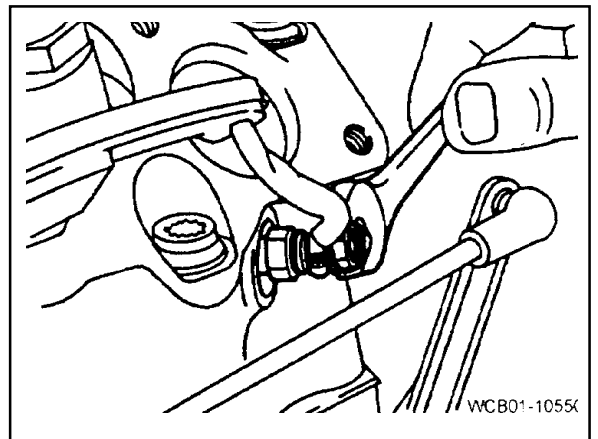


22. Remove the cable channel.

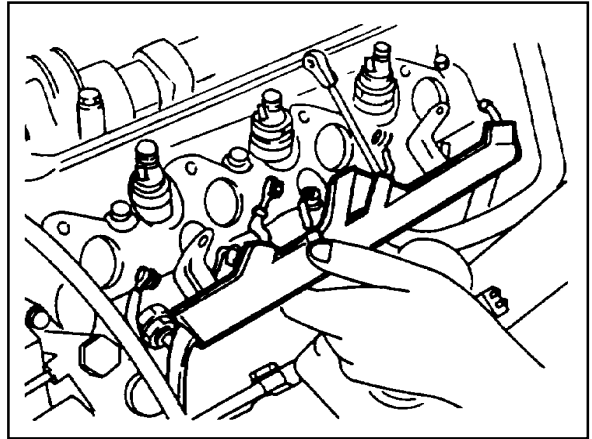


23. Disconnect the cables from the glow plug sensor and coolant temperature sensor.

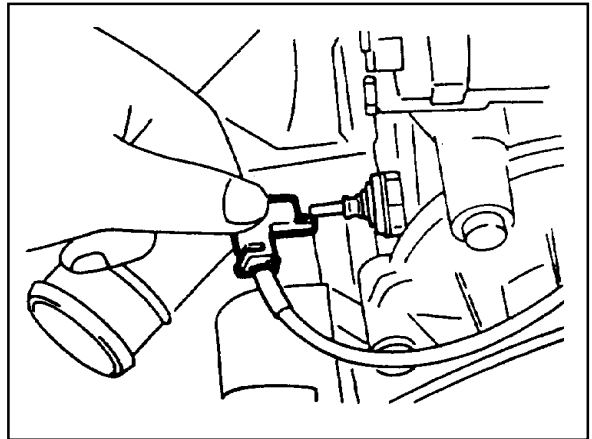


24. Remove the heater pipe bracket from the oil filter.

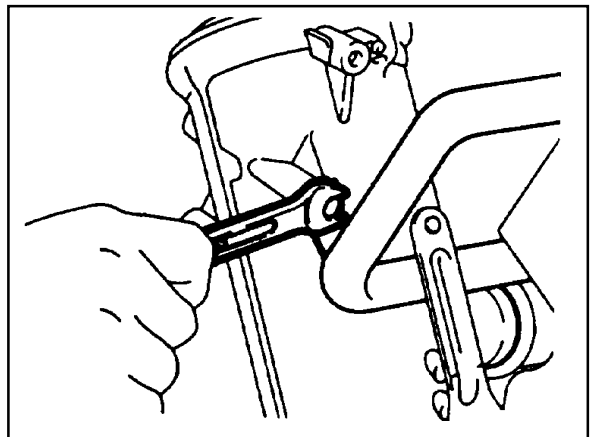


25. Pry off the clamp and push the heater feed pipe forward and then pull out the pipe.

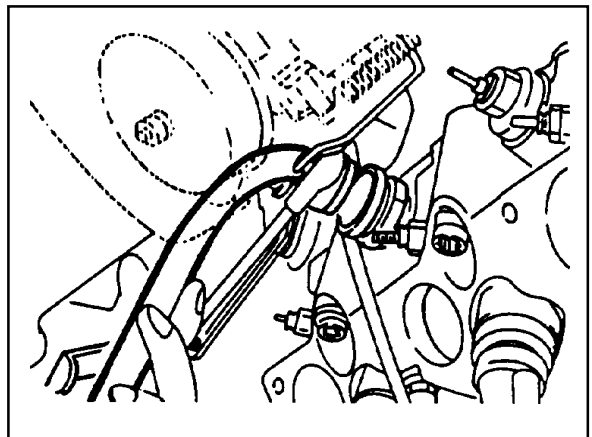


26. Disconnect the fuel lines from the fuel filter.

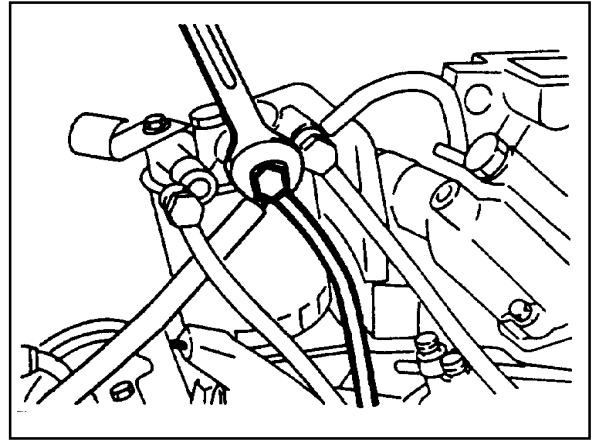

27. Disconnect the fuel lines from the injection pump.

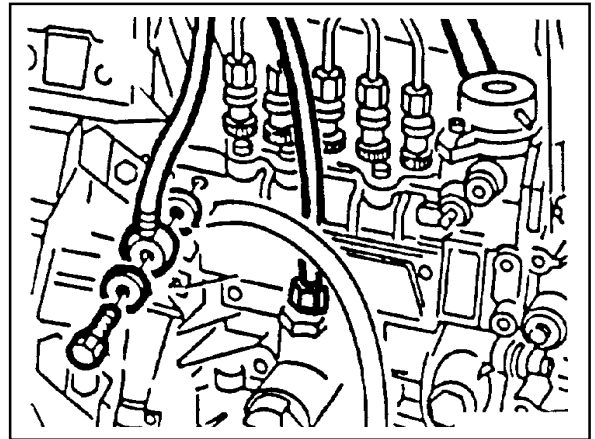


28. Remove the fuel filter(35).

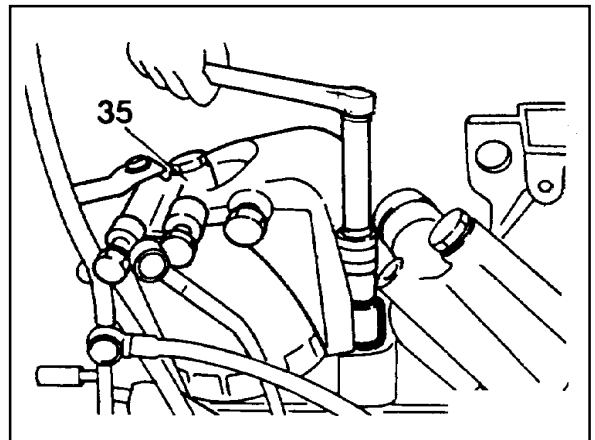

29. Remove the fuel injection nozzle(12) and nozzle washer(11).


Socket Wrench Insert 001 589 65 09 00

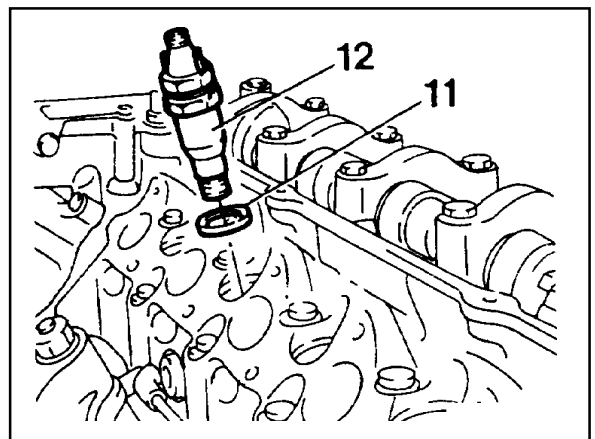


30. Rotate the crankshaft and set the no.1 cylinder at TDC.

Notice


Do not rotate the crankshaft to the opposite direction of engine revolution.

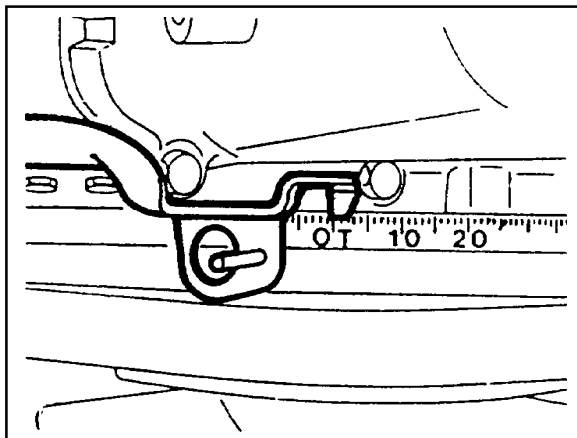


31. Place alignment marks on the camshaft gear and timing chain.

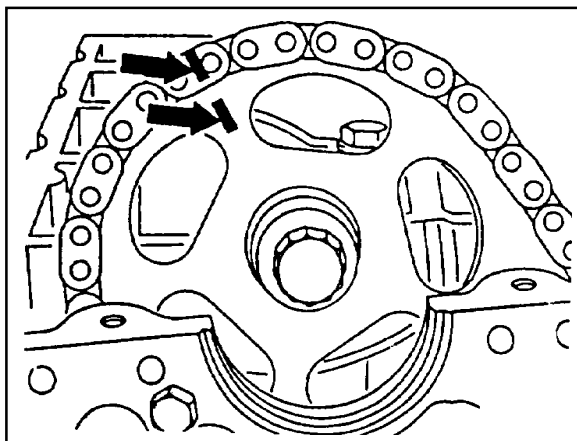

32. Ensure that the camshaft and the bearing cap marking are aligned.

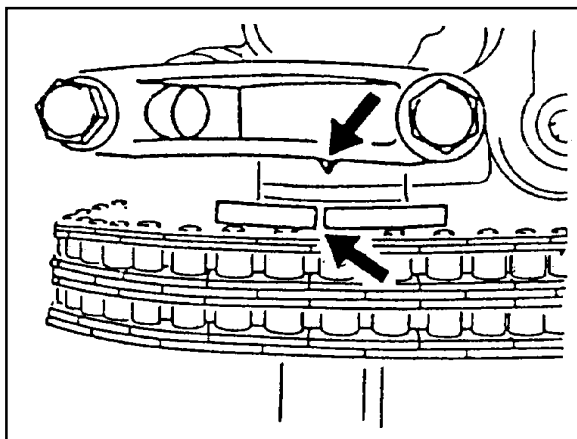


33. Remove the starter motor and install the engine lock onto the flywheel ring gear.

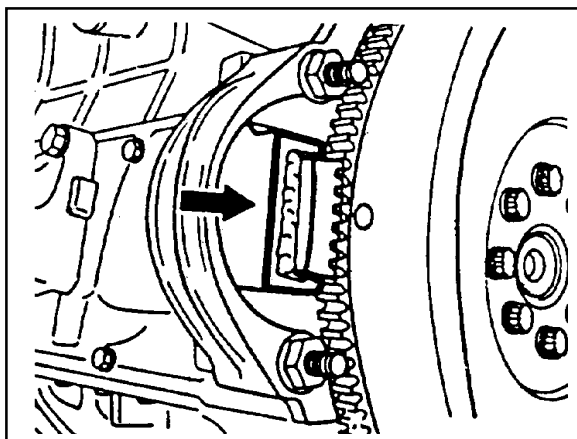


Engine Lock 602 589 00 40 00


34. Remove the turbocharger.

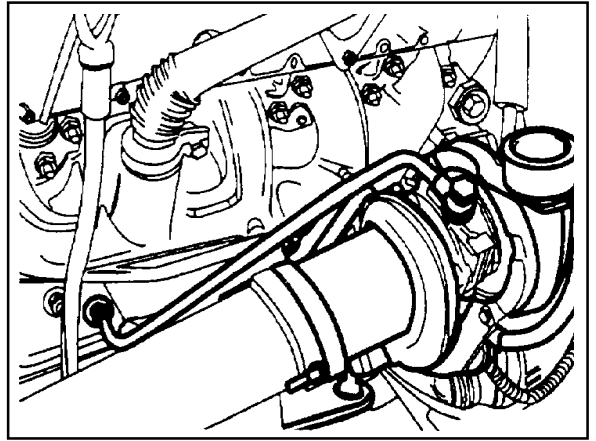

35. Remove the exhaust manifold and gasket.

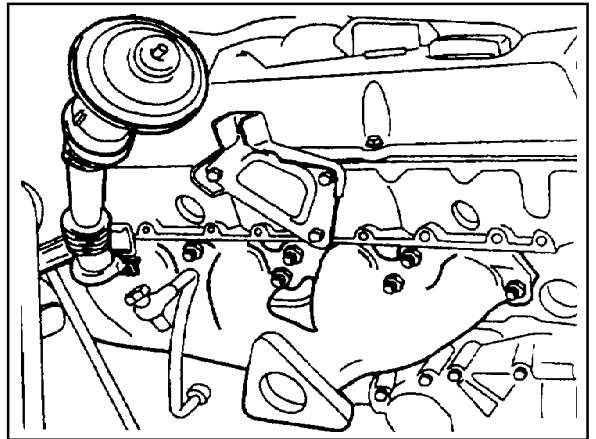

36. Remove the chain tensioner and seal.

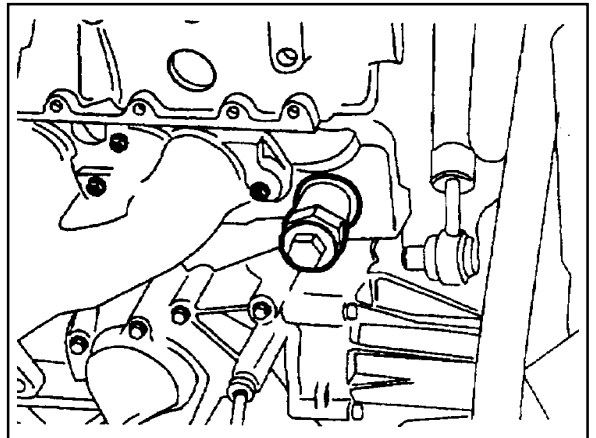


37. Remove the bolt and separate the drive sprocket(21).

Notice

During removal, be careful not to drop the sprocket and chain into the timing case.

Carefully pull off the chain and then pull out the sprocket.

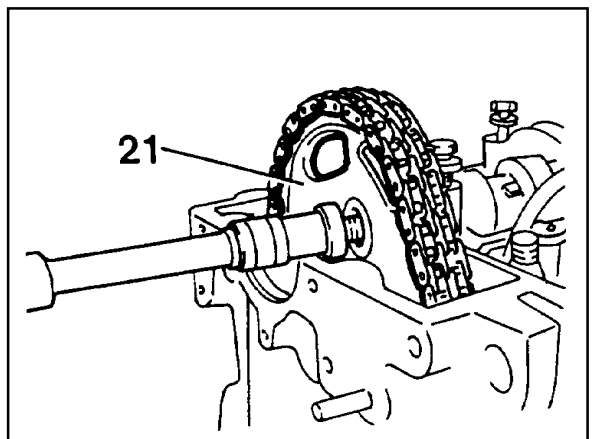


1B3-48 OM600 ENGINE MECHANICAL

38. Remove the camshaft bearing cap bolts according to the numerical sequence.


Notice

Remove the No.1 bolts first and then remove the No. 2 bolts. Do not remove the bolts at a time completely but remove them step by step evenly or camshaft can be seriously damaged.

OM662LA

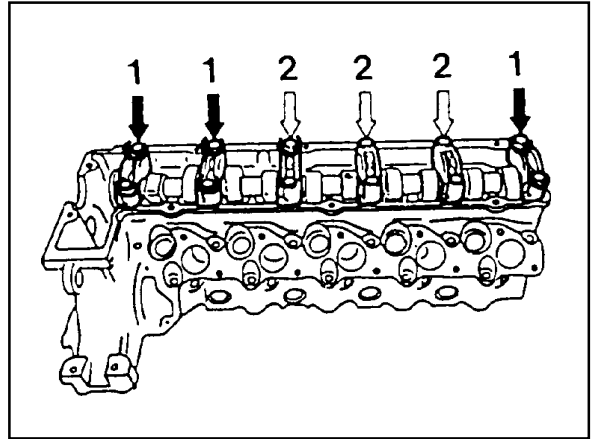


OM661LA

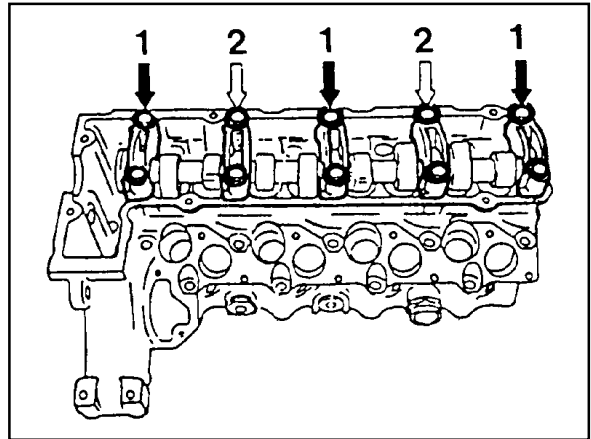

39. Remove the bearing caps and then pull out the camshaft(20) upward.

Notice


Be careful not to miss the locking washer.

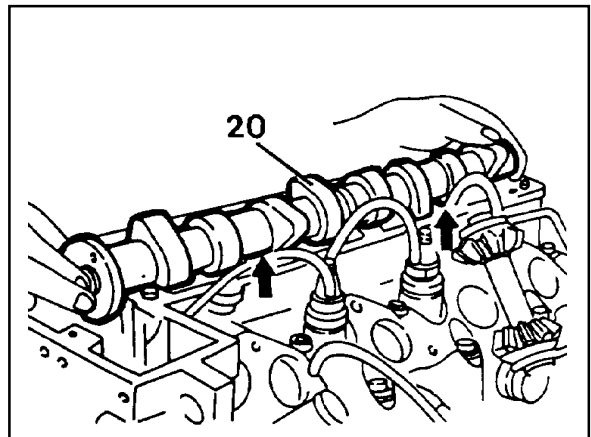


40. Remove the locking washer.

Notice


Check the locking washer and replace if necessary.

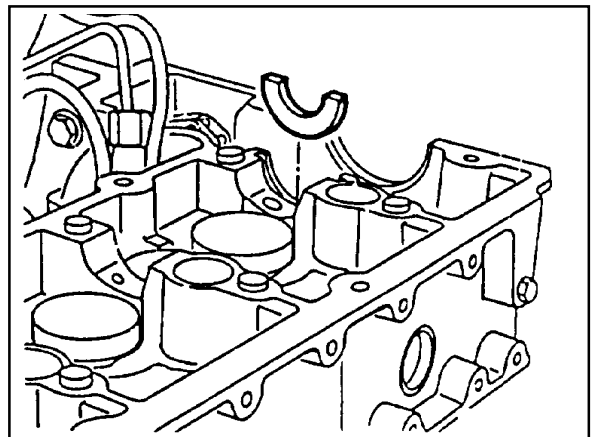


41. Remove the bolt(32).

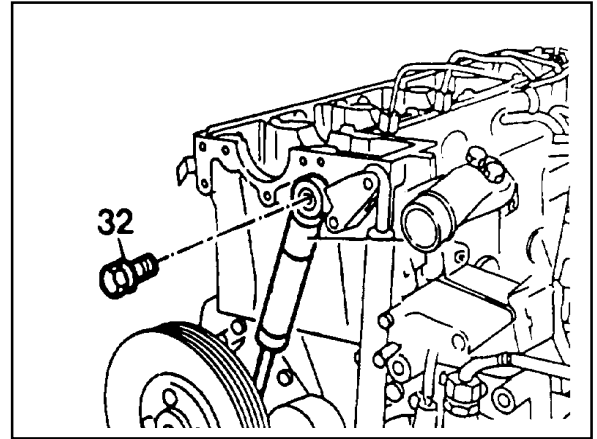

42. Separate the spring and pull out the tensioning lever(31).

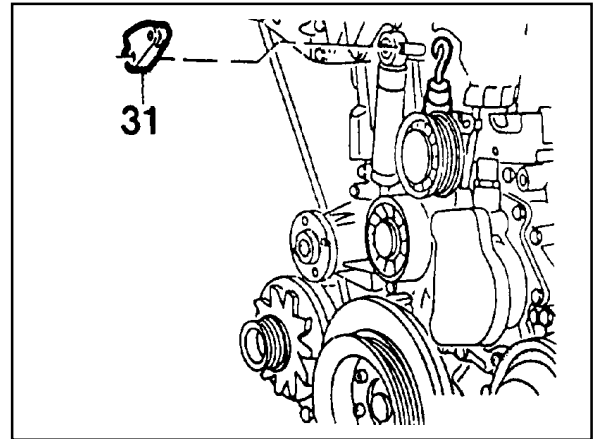


43. Pry off the closing cover. Remove the bolt and then remove the idle pulley.

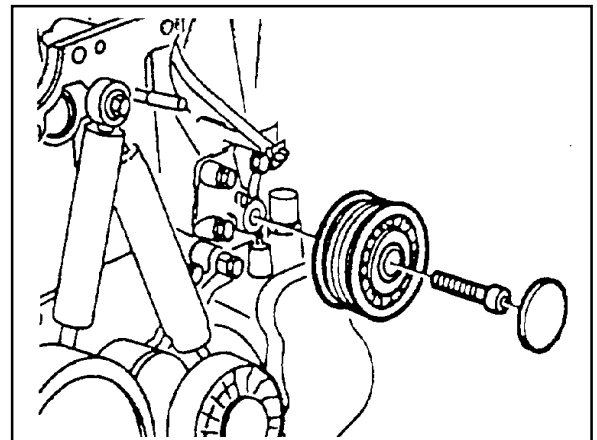


44. Using the sliding hammer(36) and the threaded pin(37), pull out the sliding rail pins(25, 26) and remove the sliding rail(24).

Sliding Hammer 116 589 20 33 00
Threaded Pin 116 589 02 34 00

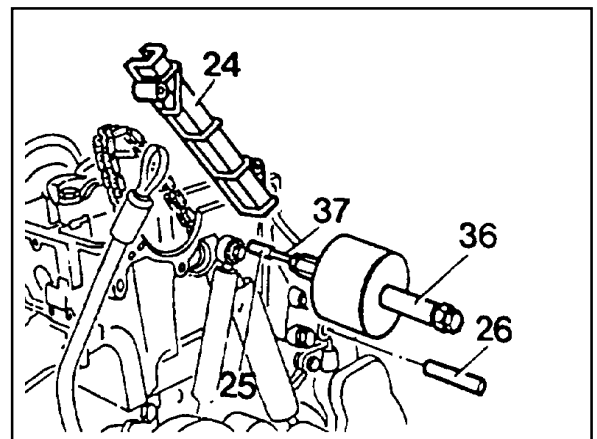


1B3-50 OM600 ENGINE MECHANICAL

45. Remove the vacuum line from the vacuum pump.

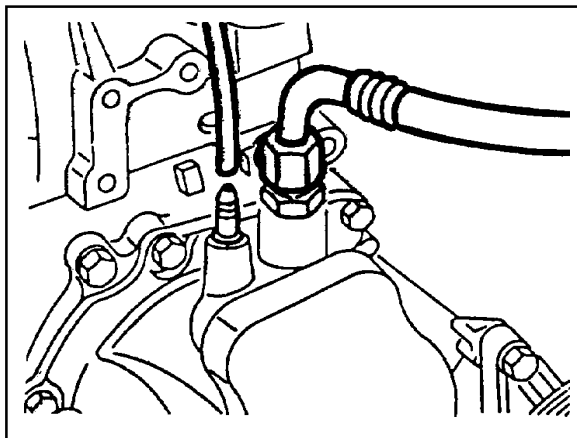


46. Disconnect the vacuum pipe from thermo valve.

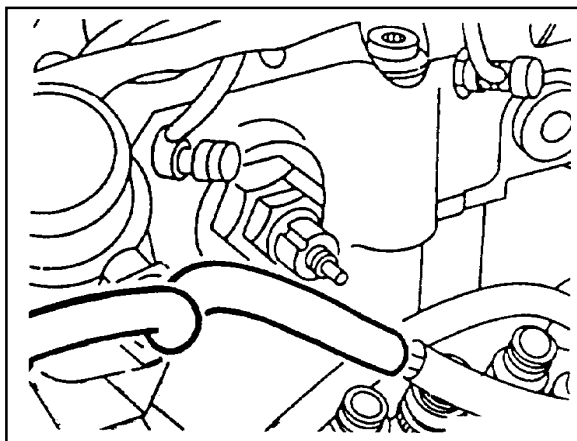


47. Remove the socket bolts(13) of the chain box.

T Type Socket Wrench 116 589 03 07 00
Magnetic Bar 102 589 03 40 00

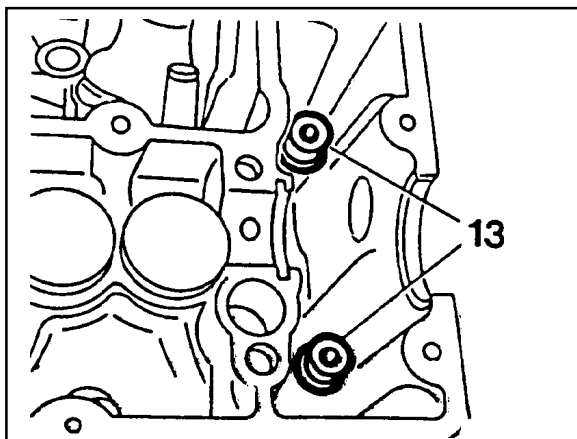


48. Remove the cylinder head bolts in numerical sequence.

Cylinder Head Bolt Wrench 601 589 00 10 00

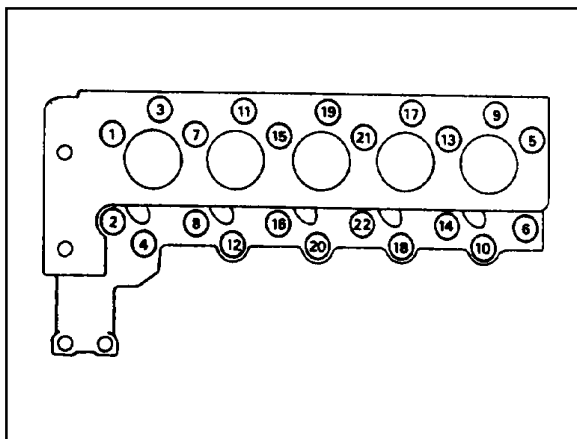


OM 662LA

OM 661LA

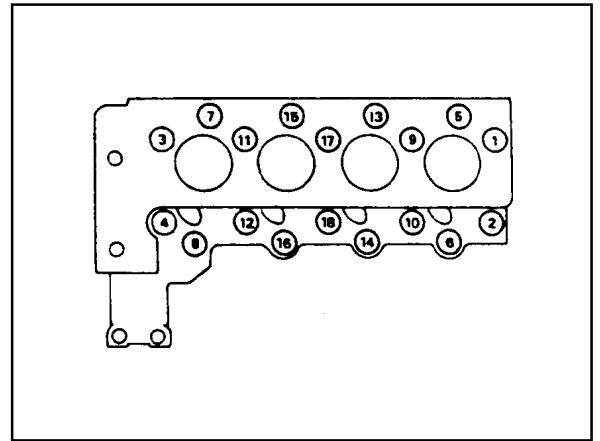


49. Remove the cylinder head(2) and gasket(3).

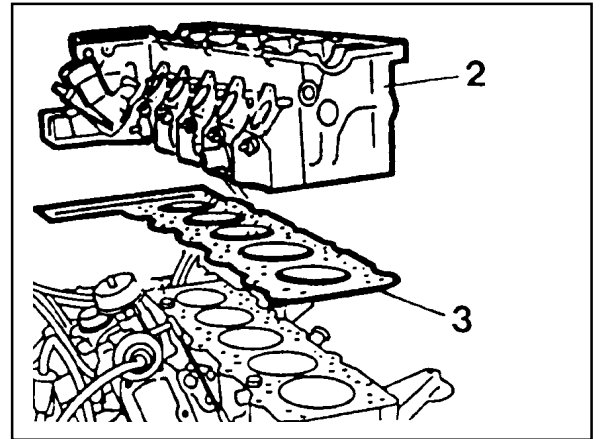

Assembly Procedure


1. Replace the cylinder head gasket.

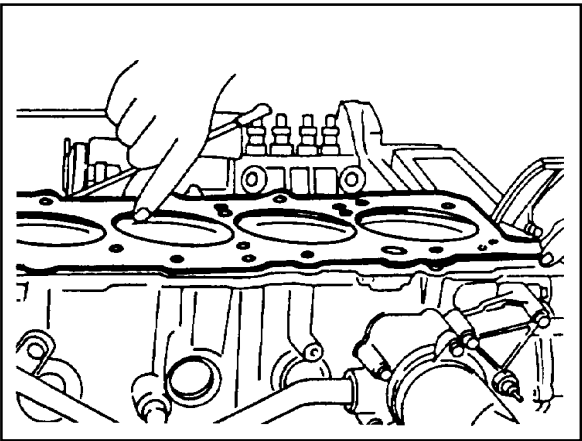

2. Install the cylinder head onto the crankcase.

Notice


Align the cylinder head holes with the guide pins.

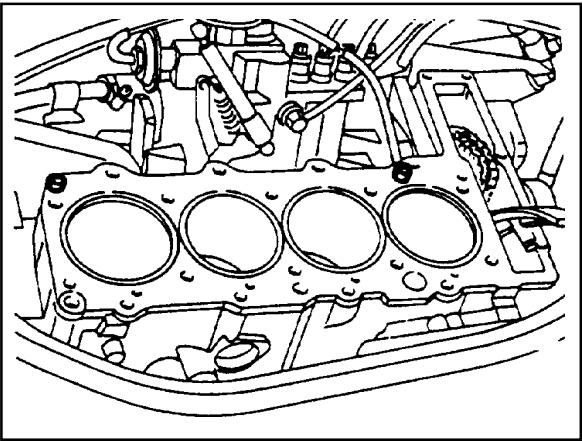

3. Measure the length(L) of cylinder head bolts.

Notice

If the max. length is exceeded, replace the bolts.

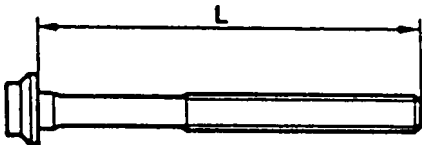


Thread Dia.	Length(L) when new	Max. Limit(L)
M10	80mm	82mm
M10	102mm	104mm
M10	115mm	117mm

4. Coat the head contact surface of bolts and thread with oil and insert them as shown.

- Cylinder head bolts arrangement


Bore

- 1 M10 × 80
- 2 M10 × 102
- 3 M10 × 115
- 4 M 8 × 50
- 5 M 8 × 80

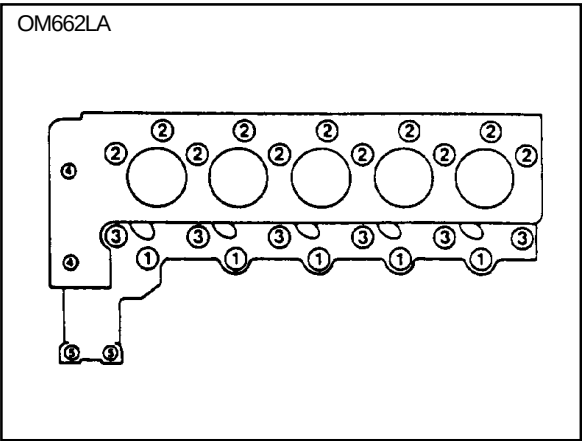


5. Tighten the cylinder head bolts to specified torque and torque angle.


Stage 1	15 Nm
Stage 2	35 Nm
Torque angle	90°
Wait for	10 minutes
Torque angle	90°

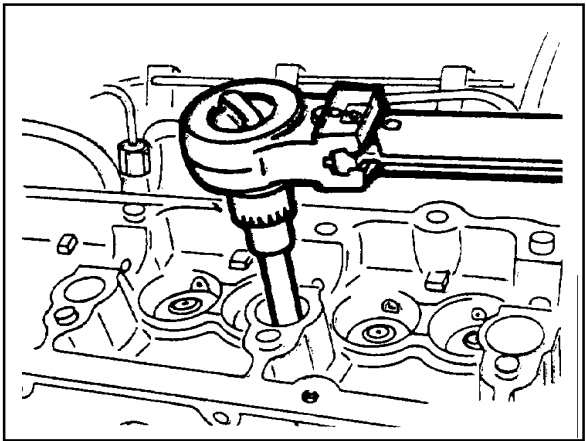

OM 661LA

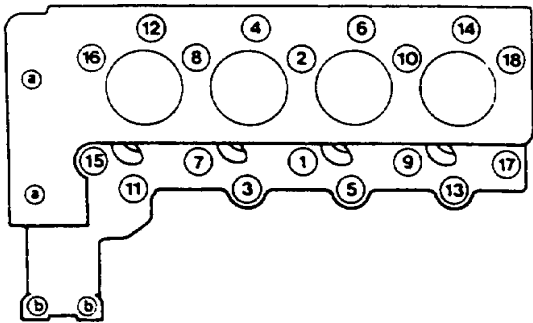


OM 662LA

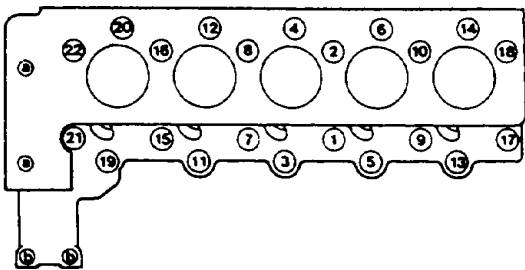


6. Install the socket bolts in the chain box.


Tightening Torque	25 Nm
-------------------	-------

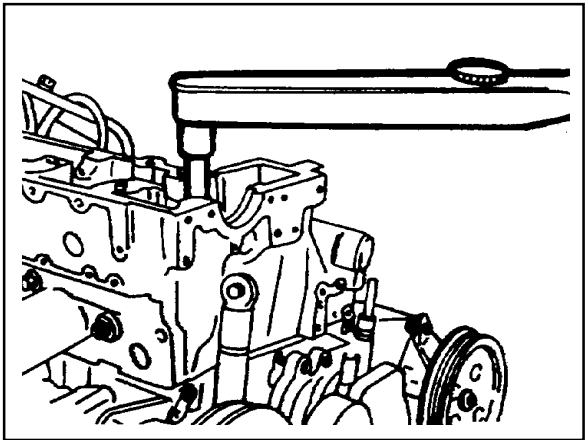

7. Connect the vacuum pipe to the thermo valve.

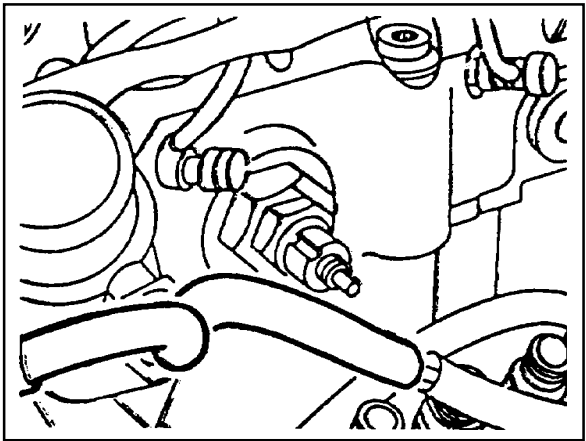

8. Connect the vacuum lines to the vacuum pump.

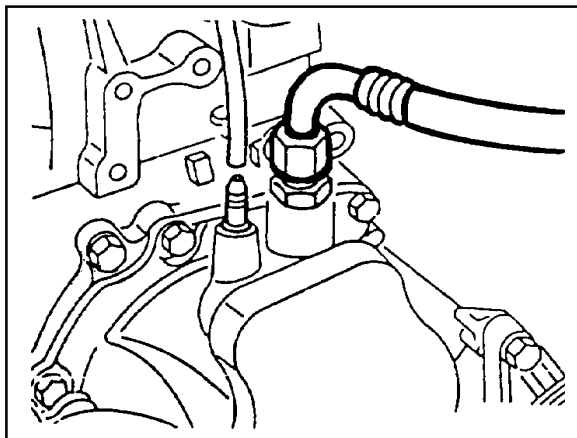


9. Install the fuel filter and connect the pipe.


Tightening Torque	25 Nm
-------------------	-------

Notice

Be careful not to be confused the connections and hoses.

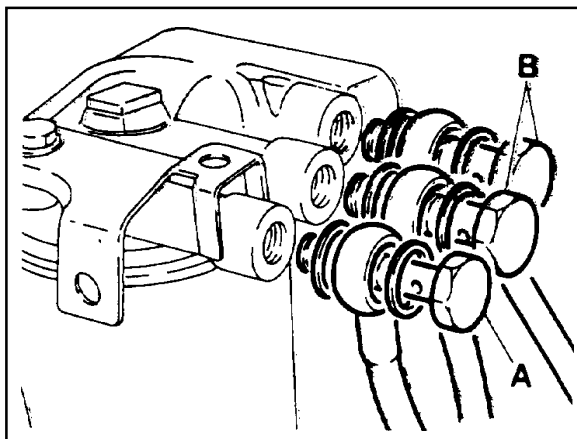

10. Connect the fuel pipe to the injection pump.

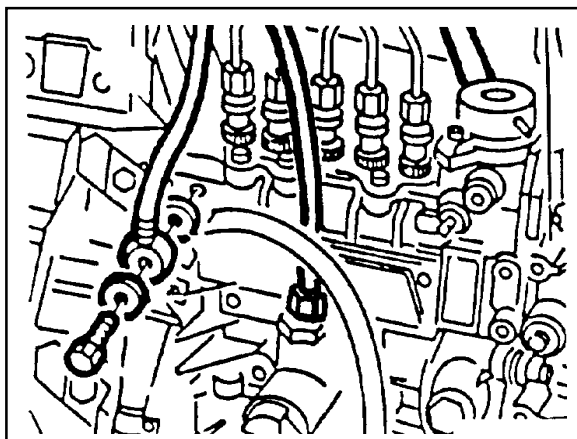


11. Install the sliding rail(24) and insert the sliding rail pins(25, 26).

Notice


Apply sealing compound on the each collar of the sliding rail pins.

Sliding Hammer 116 589 20 33 00
Threaded Pin 116 589 02 34 00

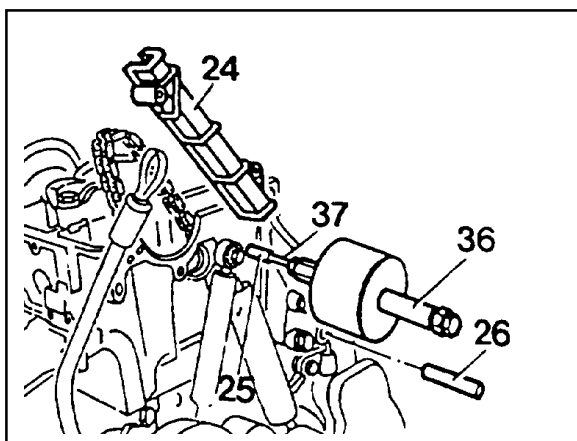


12. Install the idle pulley and fit the closing cover.

Tightening Torque	25 Nm
-------------------	-------

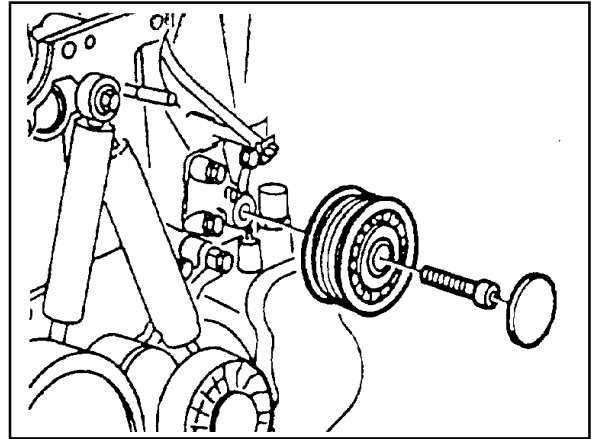

13. Insert the tensioning lever(31) and install the spring.

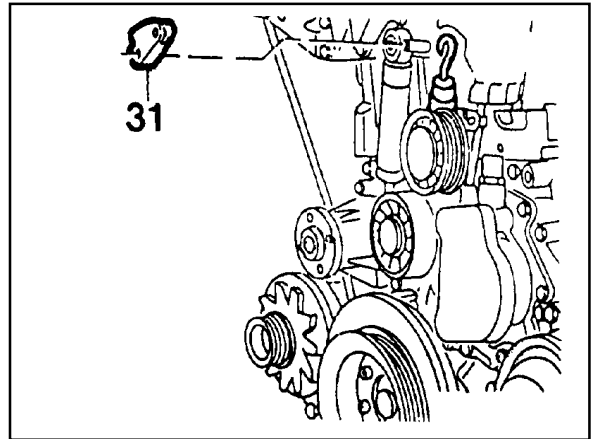


14. Install the damper.


Tightening Torque	23 Nm
-------------------	-------

Notice

Insert the tensioning lever bolts onto the mounting hole.

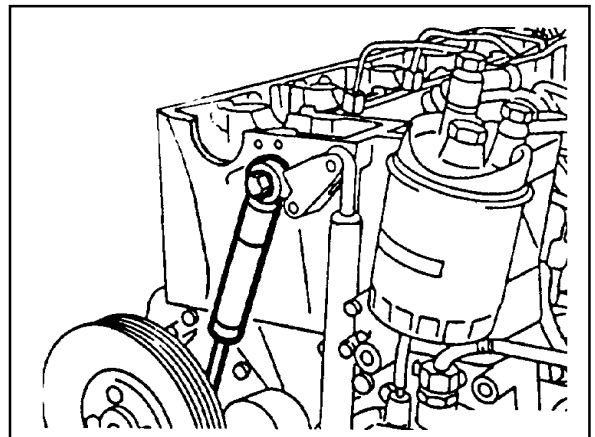

15. Insert the locking washer.
16. Inspect the valve tappet and check that the tappet moves smoothly.

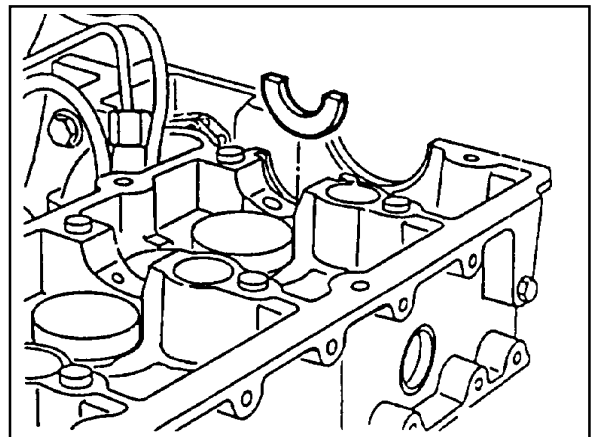


1B3-56 OM600 ENGINE MECHANICAL


- 17. Coat the camshaft with oil and install the camshaft on the cylinder head to be TDC mark(arrow) upward.
- 18. Measure the axial end play of the camshaft.

End Play	0.06 - 0.21mm
----------	---------------

Notice
If out of standard, adjust it with the proper thickness of locking washer.

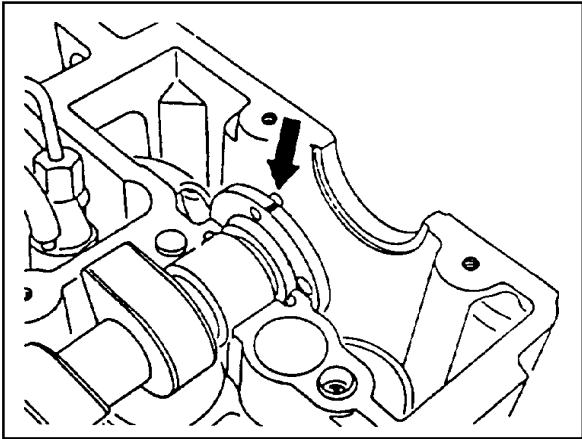


- 19. Install the bearing caps on the camshaft according to the number on the caps.

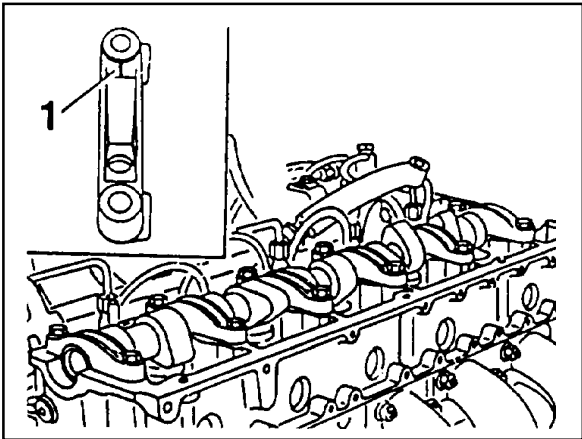


- 20. Tighten the bearing cap bolts according to the numerical sequence.

Tightening Torque	25 Nm
-------------------	-------

Notice
Tighten the No. 1 bolts(light arrow) first and then tighten the No. 2 bolts(dark arrow) stage by stage.

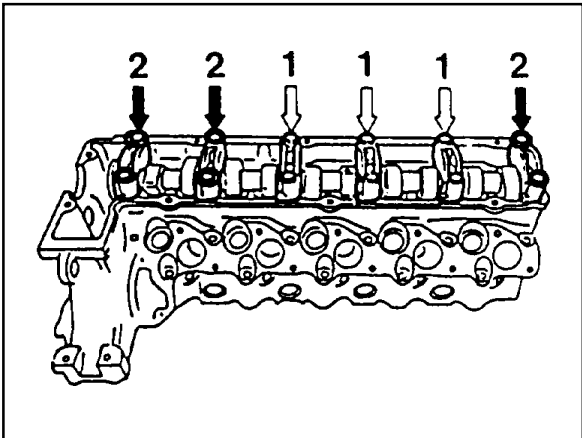

OM662LA


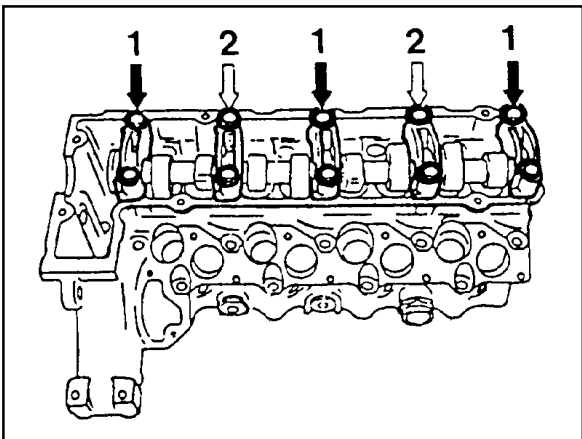


OM661LA


21. Position the camshaft on marking and install the camshaft sprocket.

Notice

Align the alignment marks on the chain and sprocket.

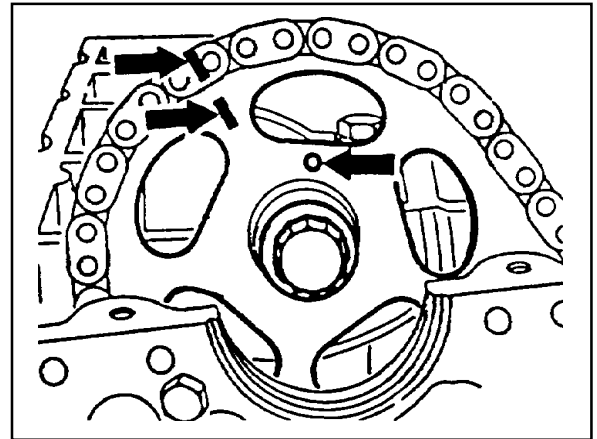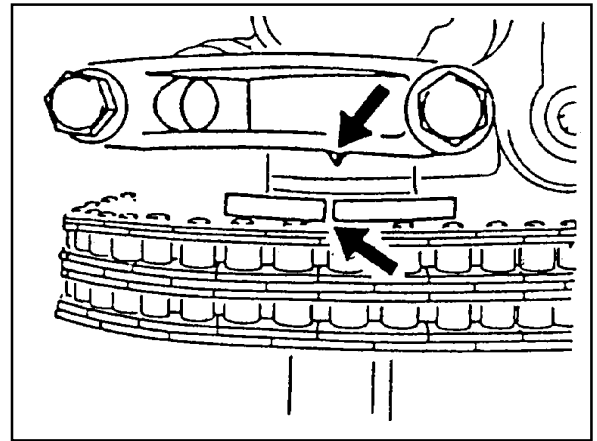


22. Check the TDC position of the crankshaft.

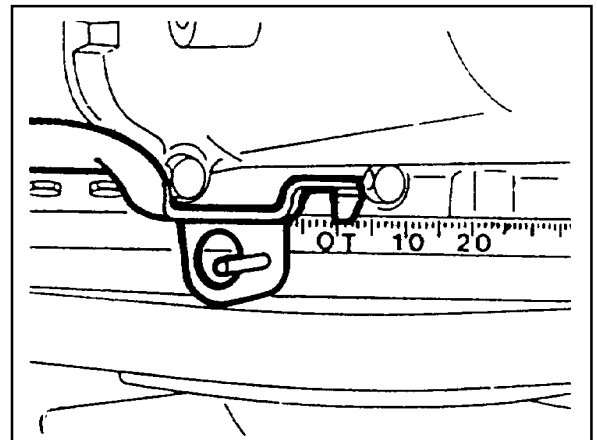


23. Install the camshaft sprocket bolt.

Tightening Torque	25 Nm + 90°
-------------------	-------------

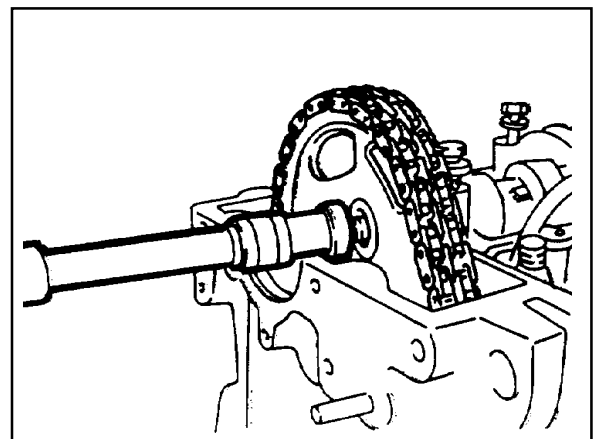


Notice


Measure the max. length 'L' and replace the bolt if it exceeds 53.6mm.

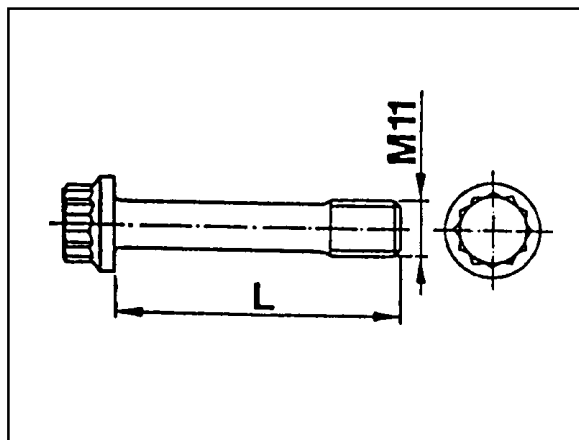

24. Install the exhaust manifold and gasket.

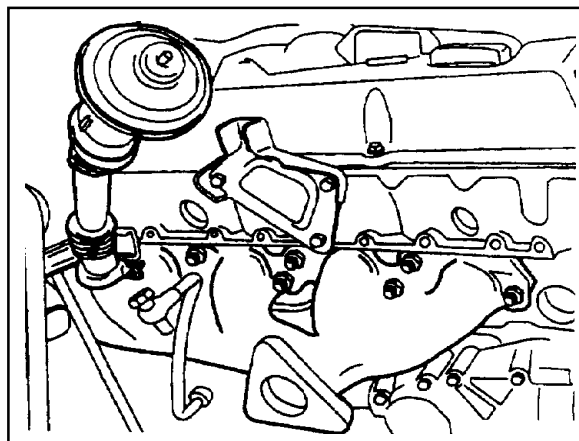


25. Install the turbocharger.

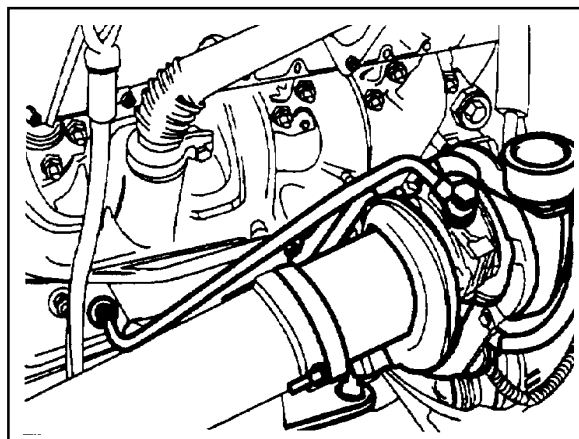


26. Install the exhaust pipe onto the turbocharger.

Tightening Torque	25 Nm
-------------------	-------

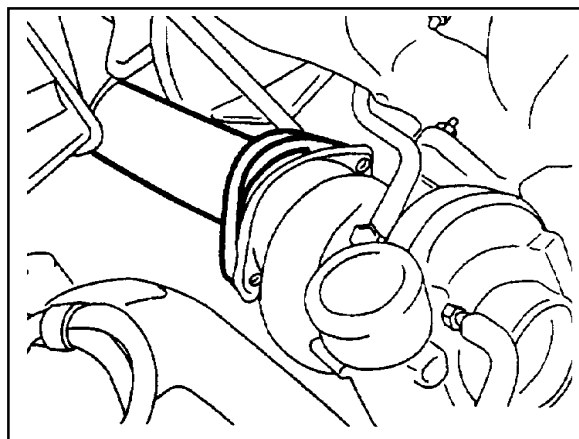


27. Replace the seal and then install the chain tensioner.

Tightening Torque	80 Nm
-------------------	-------

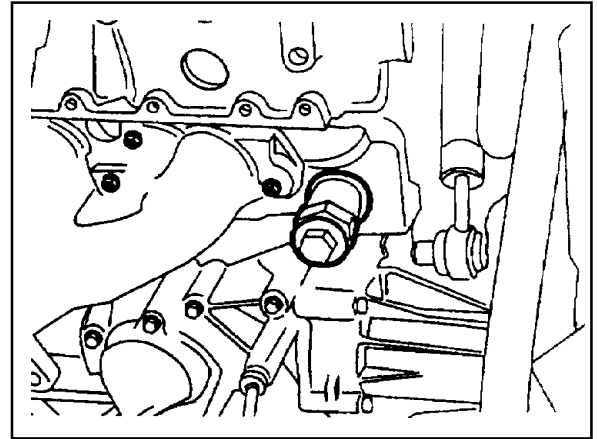


28. Remove the engine lock.

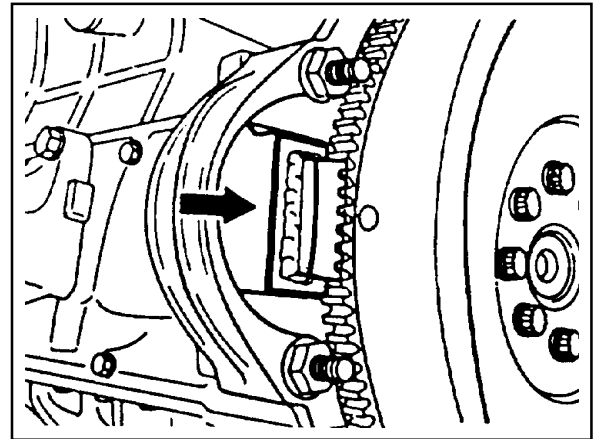

29. Insert the nozzle washer into the hole to face round part downward.


30. Install the fuel injection nozzle.

Tightening Torque	40 Nm
-------------------	-------

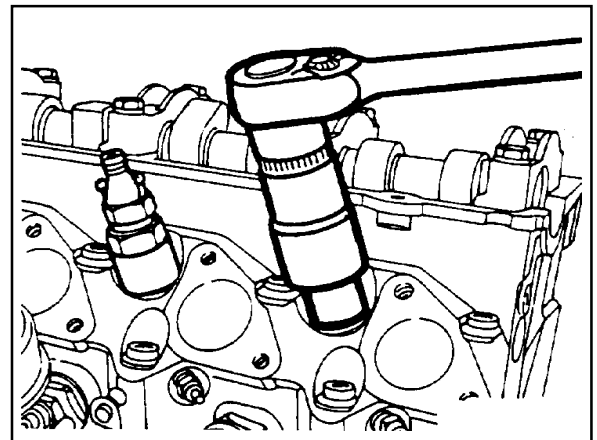

31. Connect the fuel hose.

32. Install the cable channel and connect the cables to glow plugs.

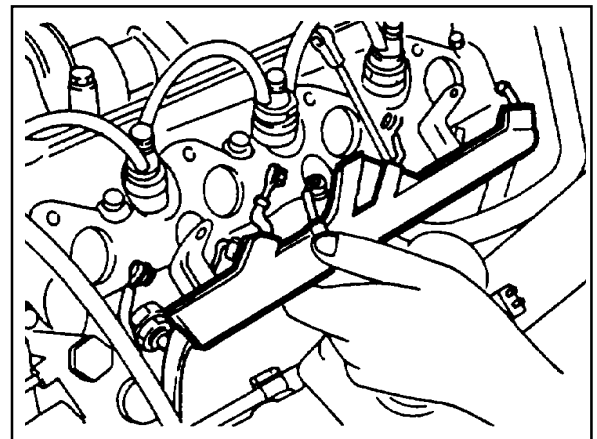


1B3-60 OM600 ENGINE MECHANICAL


33. Replace the gasket and install the cylinder head cover.

Tightening Torque	10 Nm
-------------------	-------


34. Install the blow-by hose.

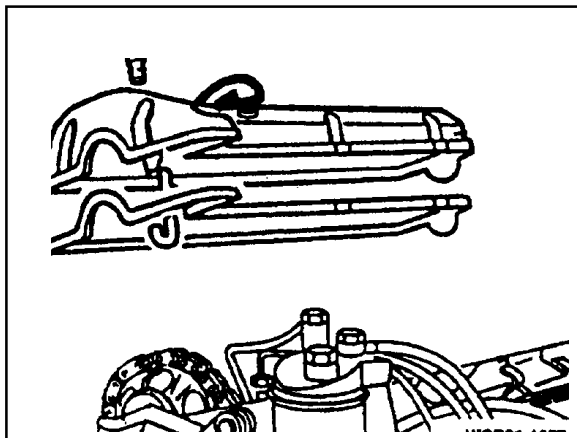

35. Connect the wires to the coolant temperature sensor and the glow plug sensor.

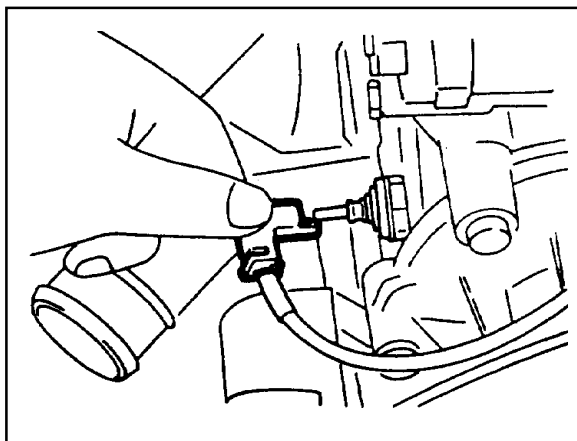


36. Replace the intake manifold gasket.

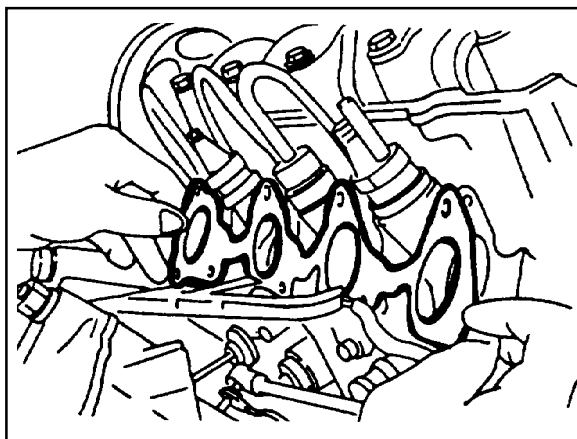

37. Install the intake manifold.


Tightening Torque	25 Nm
-------------------	-------

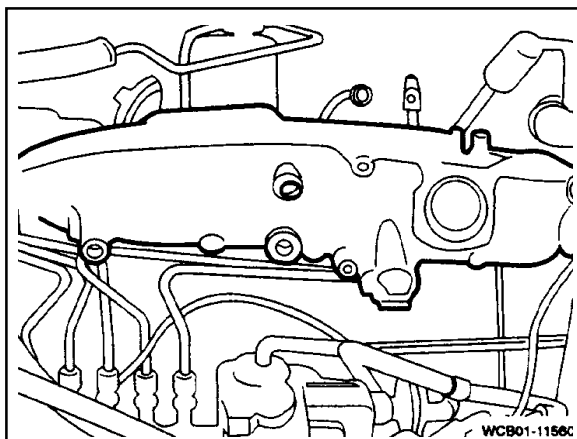


38. Replace the O-ring of heater feed pipe and install it to the cylinder head.

Notice

For installation, clean the hole.


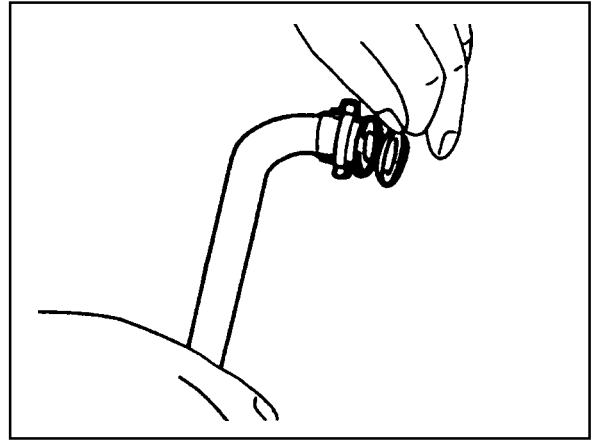


39. Install the bracket of heater feed pipe to the oil filter.

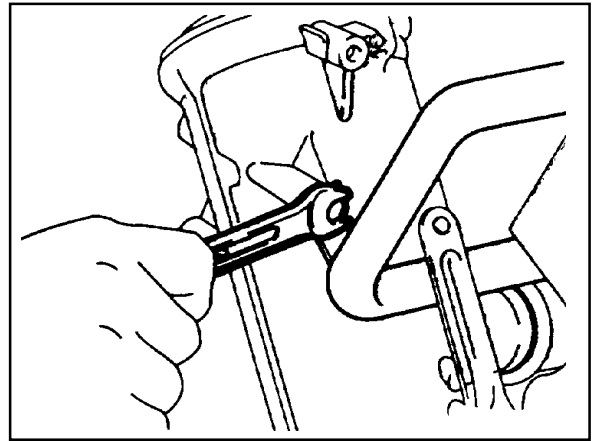

40. Install the fuel pipe and the accelerator control linkage.
41. Connect the fuel lines to the injection nozzles and to the injection pump.

Box Wrench Insert 000 589 77 03 00

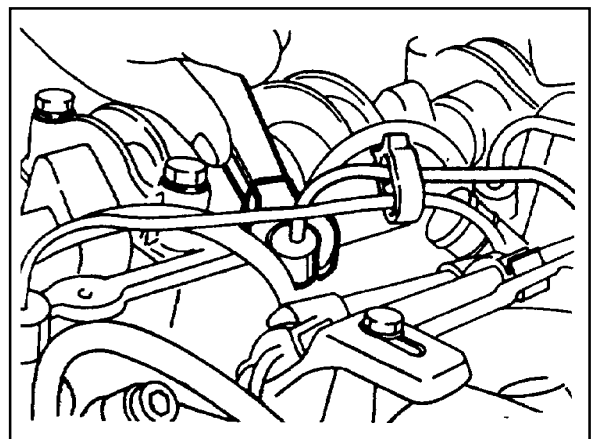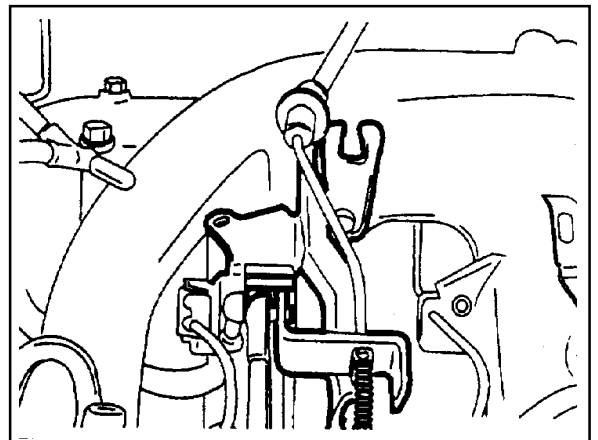


Tightening Torque	18 Nm
-------------------	-------

42. Install the poly V-belt.


Notice

Be careful not to contaminate the belt.

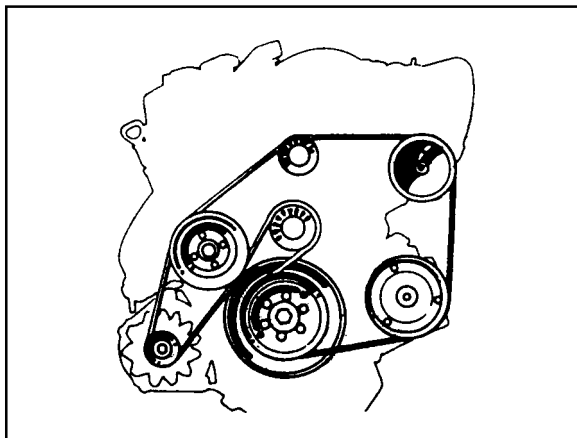


43. By inserting a rod into the tensioning lever upper hole and pulling the rod, install the bolt and then tighten the nut.

Tightening Torque	23 Nm
-------------------	-------

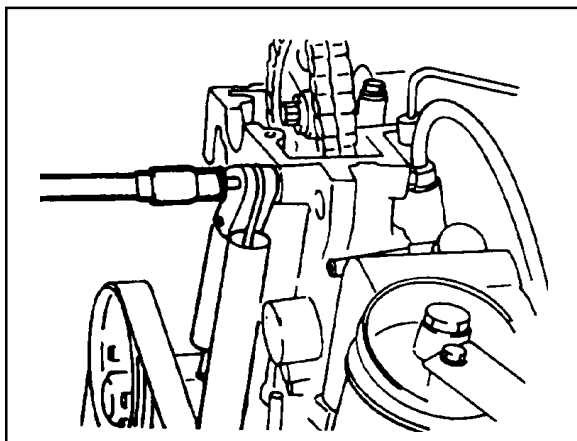


44. Install the oil dipstick tube bracket.

Tightening Torque	10 Nm
-------------------	-------

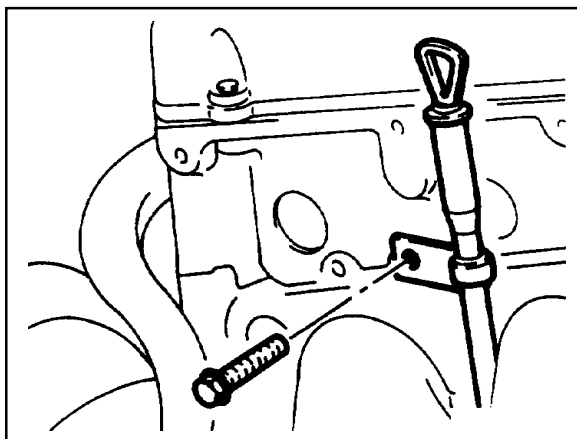


45. Hold the cooling fan with the counter holder and tighten the bolt.

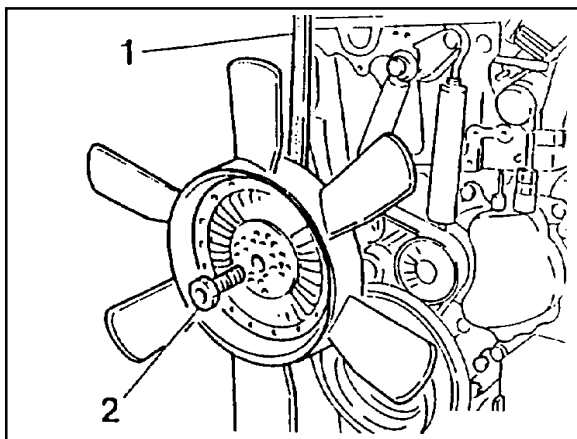

TIMING CASE COVER

Preceding Work : Removal of the cooling fan
 Removal of the V-belt tensioning device
 Removal of the vibration damper and hub
 Removal of the alternator

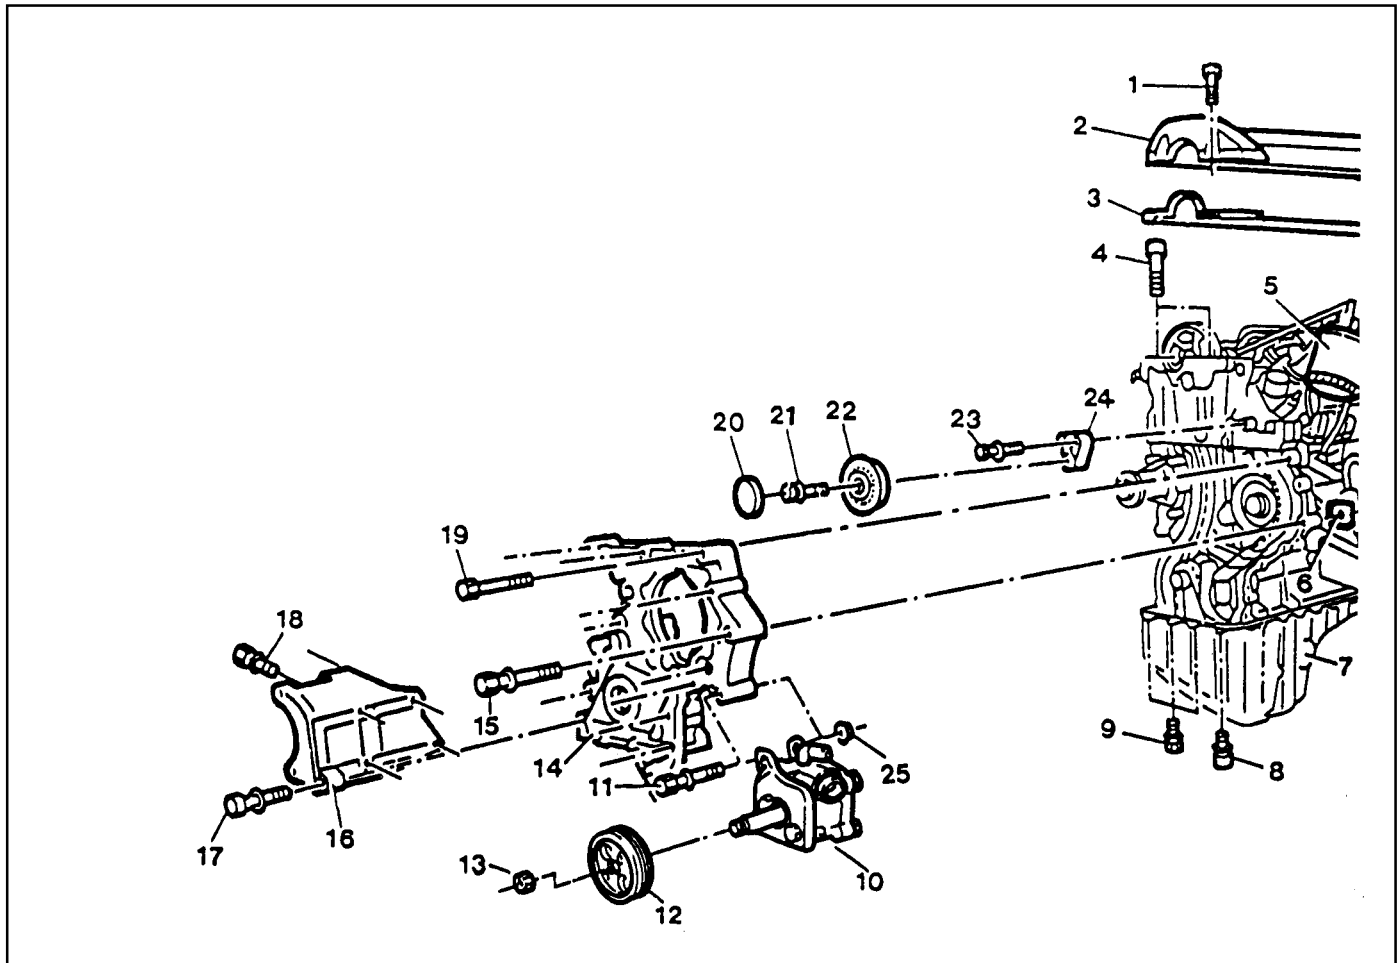


1 Bolt	10Nm	13 Bolt	32Nm
2 Cylinder Head Cover		14 Timing Case Cover	
3 Gasket	Replace	15 Bolt	23Nm
4 Socket Bolt	25Nm	16 Alternator Bracket	
5 Fuel Filter		17 Bolt	45Nm
6 Square Nut		18 Bolt	25Nm
7 Oil Pan		19 Bolt	10Nm
8 Socket Bolt	10Nm	20 Closing Cover	
9 Bolt	M6 : 10Nm M8 : 23Nm	21 Socket Bolt	23Nm
10 Power Steering Pump		22 Guide Pulley	
11 Bolt		23 Bolt	9Nm
12 Belt Pulley		24 Guide Pulley Bracket	
		25 Nut	23Nm

Tools Required


116 589 03 07 00 Socket Wrench

Removal Procedure


1. Remove the fan clutch and cooling fan belt pulley.
2. Drain the engine oil completely.
3. Remove the oil dipstick tube bracket bolts.
4. Remove the crankshaft pulley.
5. Loosen the bolt (1) and then remove the cylinder head cover (2) and gasket.

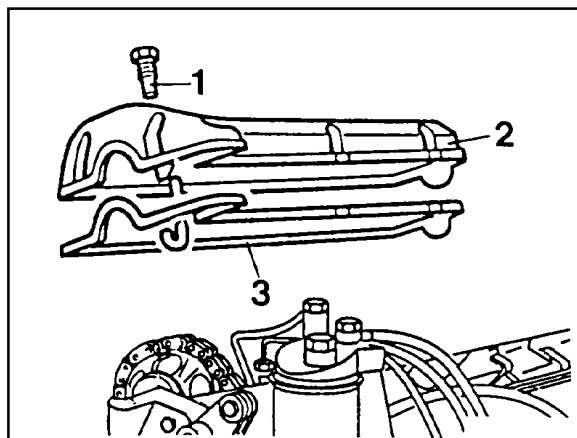


6. Remove the vacuum pump.

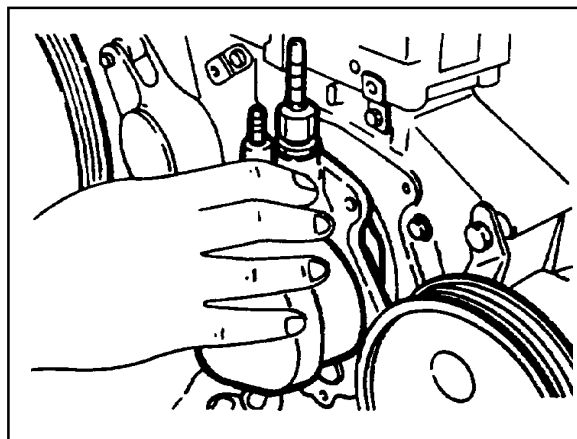

7. Detach the closing cover (20). Remove the bolts(21) and then remove the guide pulley (22).

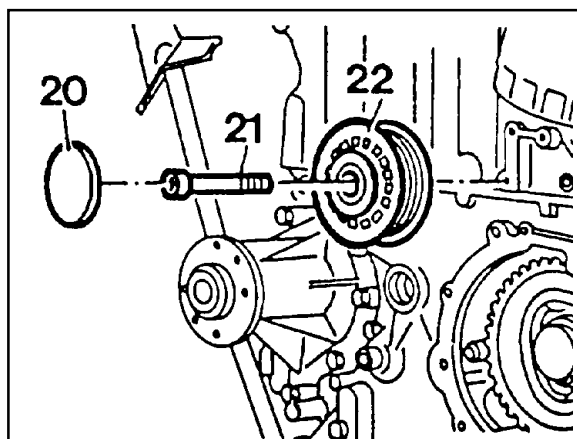


8. Remove the guide pulley bracket (24).

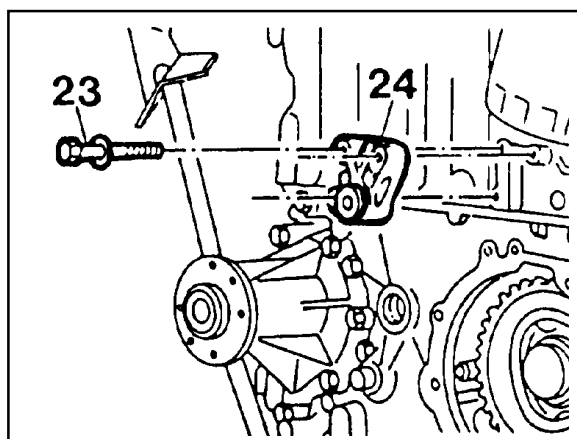


9. Disconnect the pipes of power steering pump and remove the belt pulley.

Notice


Be careful not to lose the key.

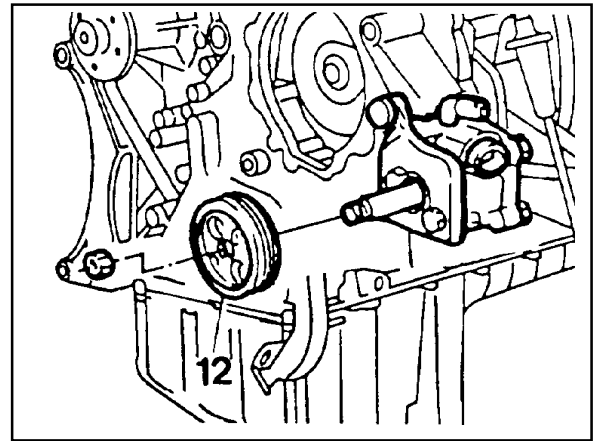


10. Remove the nut and pull out the bolt and then remove the power steering pump.

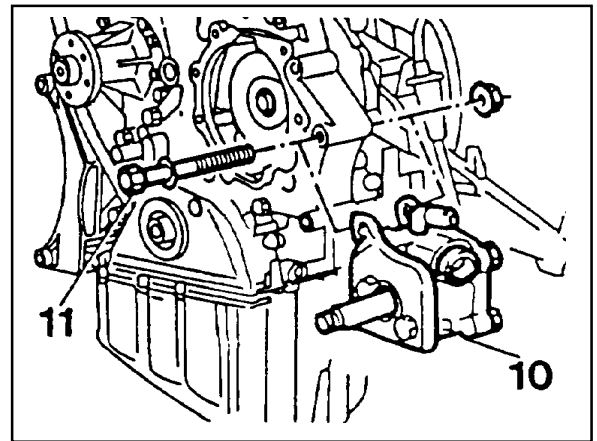

11. Remove the alternator bracket (16).

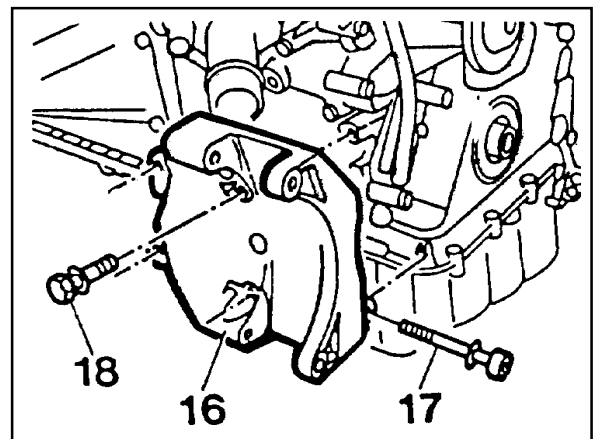


12. Remove the fuel filter.

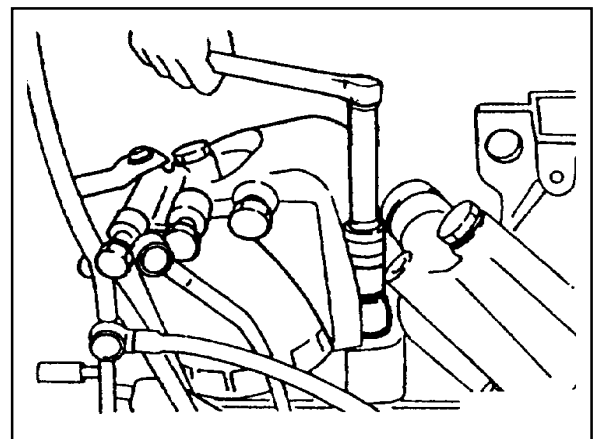

1B3-66 OM600 ENGINE MECHANICAL

13. Remove the camshaft.
14. Remove the socket bolts(4) in the chain box.


Socket Wrench 115 589 03 07 00

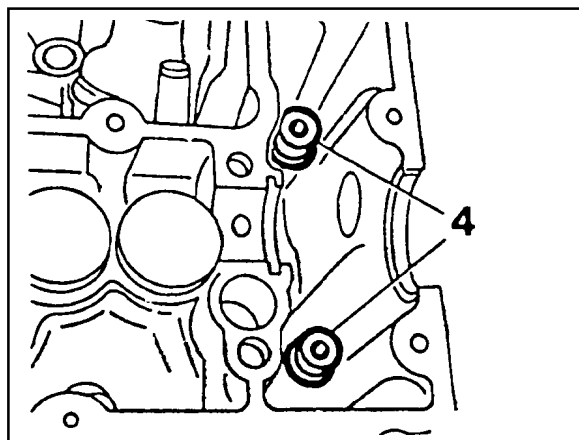


15. Remove the injection pump.

Notice

See the 'Removal of fuel injection pump'.

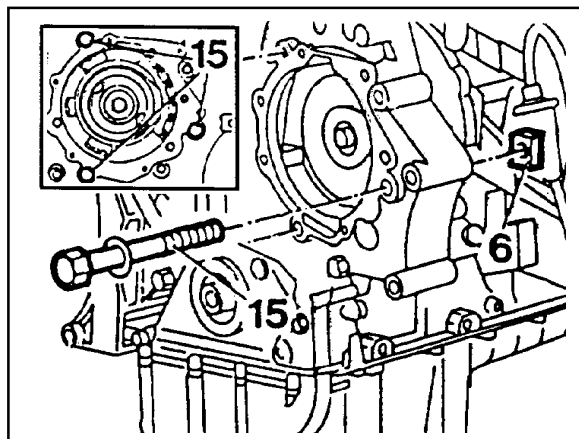


16. Remove the oil pan bolts (8, 9) in the area of the timing case cover (14).
17. Slightly loosen the remaining oil pan bolts.

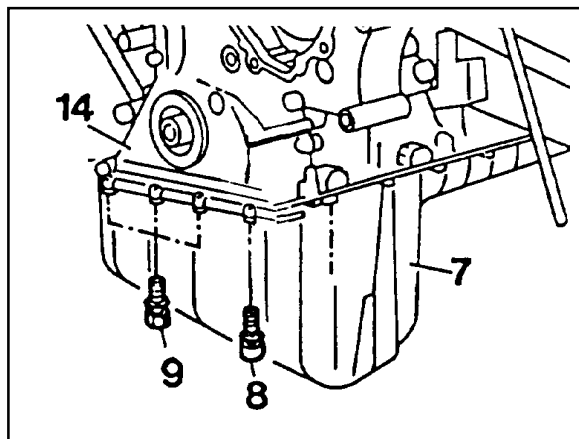

18. Remove the timing case cover (19) bolts and then remove the timing case cover (14).


Notice

Be careful not to damage the cylinder head gasket or oil pan gasket.

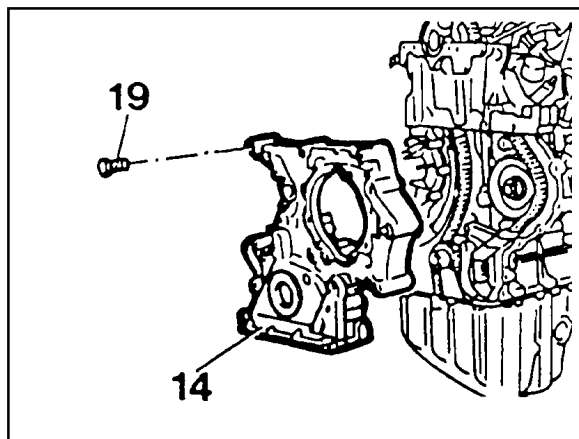


Installation Procedure

1. Thoroughly clean the sealing surface and apply sealant.

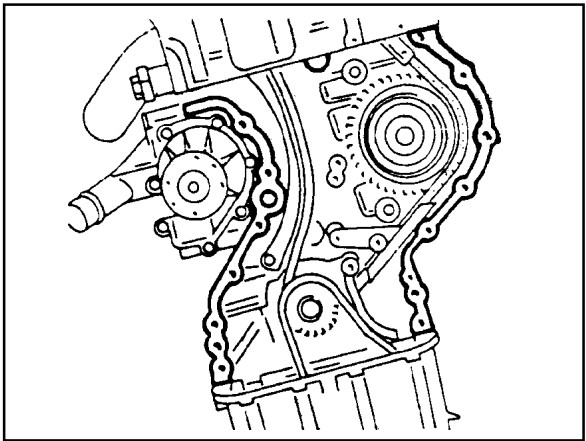

2. Install the timing case cover.


Tightening Torque	10 Nm
-------------------	-------

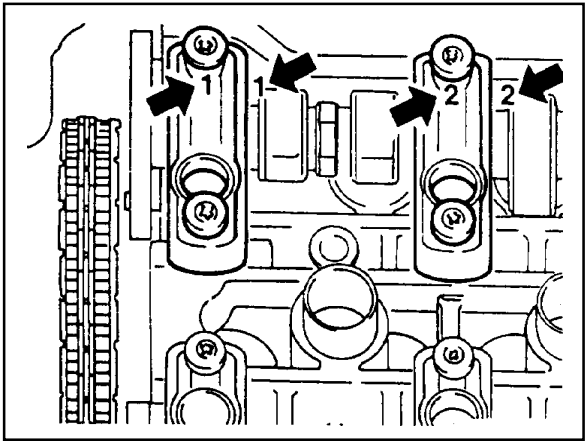

Notice

Bolts arrangement

- 1.M6 x 60
- 2.M6 x 70
- 3.M6 x 40

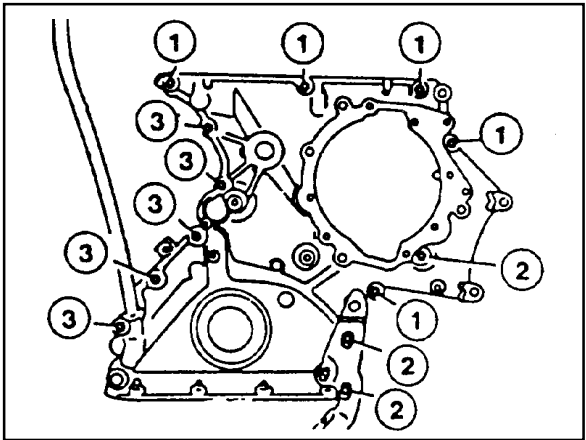


3. Tighten the socket bolts in the chain box.

Tightening Torque	23 Nm
-------------------	-------

4. Tighten the oil pan bolts.

Tightening Torque	Socket bolt	10 Nm
	M6 bolt	10 Nm
	M8 bolt	23 Nm

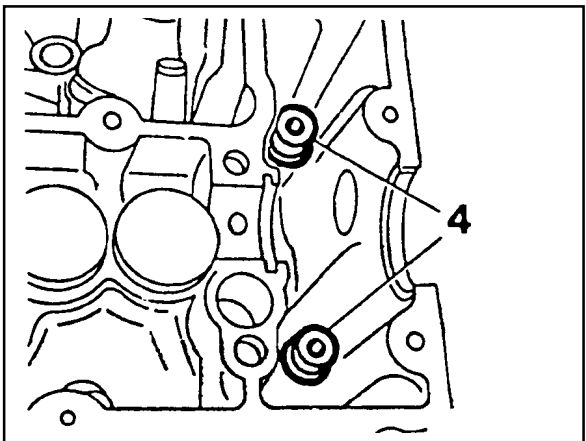


1B3-68 OM600 ENGINE MECHANICAL

5. Install the flange, vibration damper and crankshaft belt pulley.


Notice

Replace front radial seal if necessary.

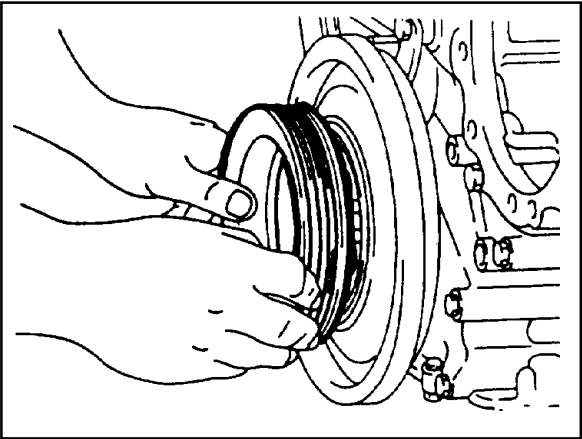


6. Install the alternator bracket.

Tightening Torque	Front	25 Nm
	Side	25 Nm

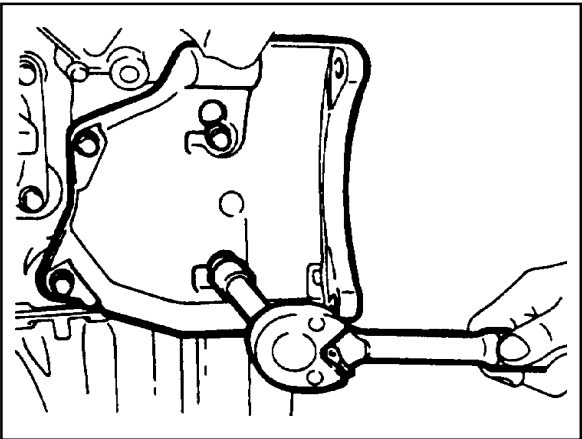

7. Install the alternator

Tightening Torque	Upper - 25 Nm
	Low - 25 Nm

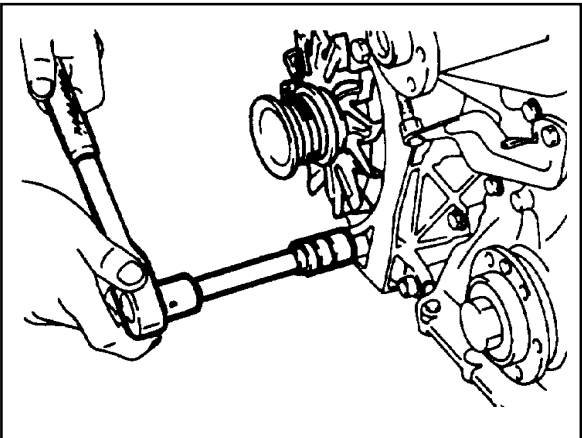


8. Install the cylinder head cover.

Tightening Torque	10 Nm
-------------------	-------

9. Tighten the injection pump mounting bolts.

Tightening Torque	23 Nm
-------------------	-------

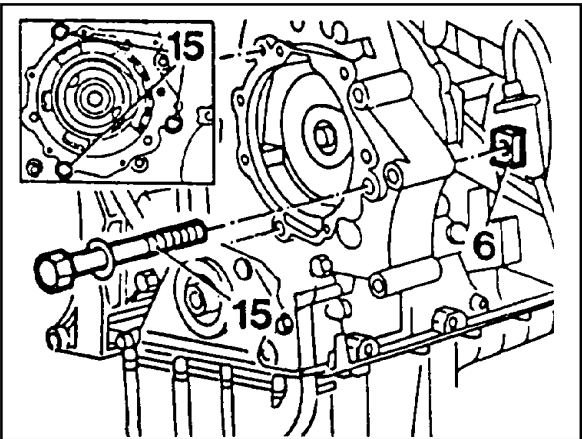


10. Install the fuel filter.

Tightening Torque	25 Nm
-------------------	-------


11. Install the vacuum pump.

Tightening Torque	10 Nm
-------------------	-------

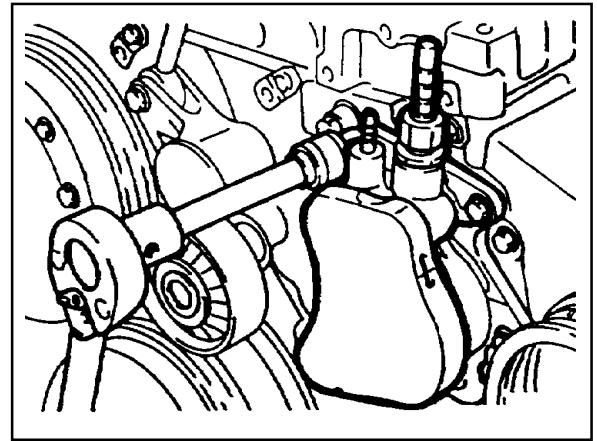


12. Install the power steering pump.

Tightening Torque	23 Nm
-------------------	-------

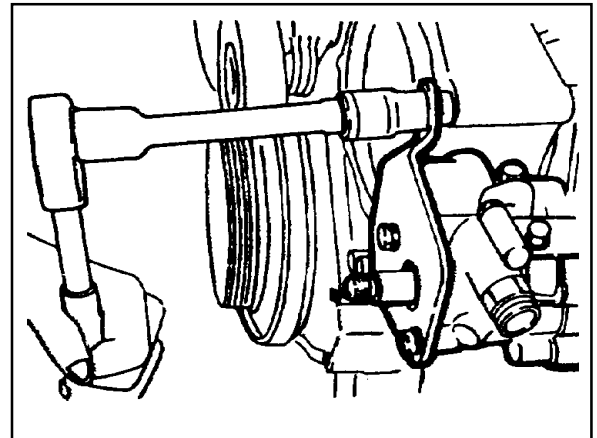


13. Install the power steering pump pulley.

Tightening Torque	32 Nm
-------------------	-------

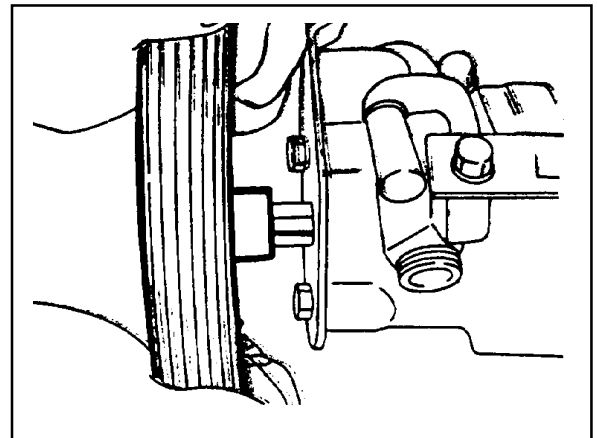

14. Install the guide pulley bracket.


Tightening Torque	9 Nm
-------------------	------

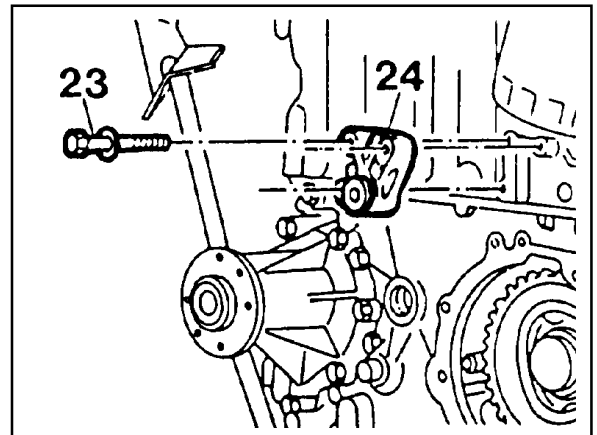

1B3-70 OM600 ENGINE MECHANICAL

15. Install the guide pulley (22) and fit the closing cover (20).


Tightening Torque	23 Nm
-------------------	-------

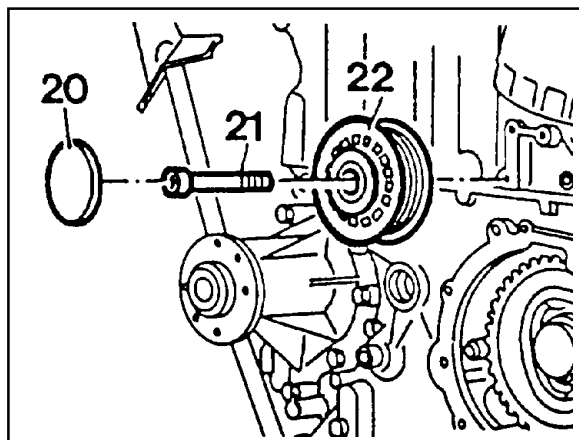

16. Replace the gasket (3) and install the cylinder head cover (2).


Tightening Torque	10 Nm
-------------------	-------

17. Install the cooling fan belt pulley and fan clutch.
18. Install the belt tensioning device and then install the belt.
19. Install the cooling fan.
20. Fill the engine oil and check oil leaks by running the engine.

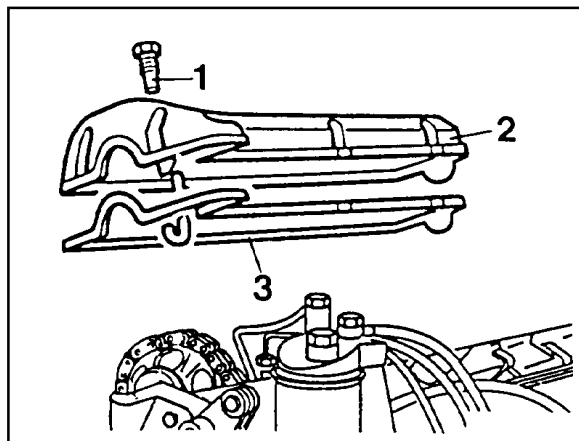

CRANKSHAFT END COVER

Preceding Work : Removal of flywheel and driven plate.

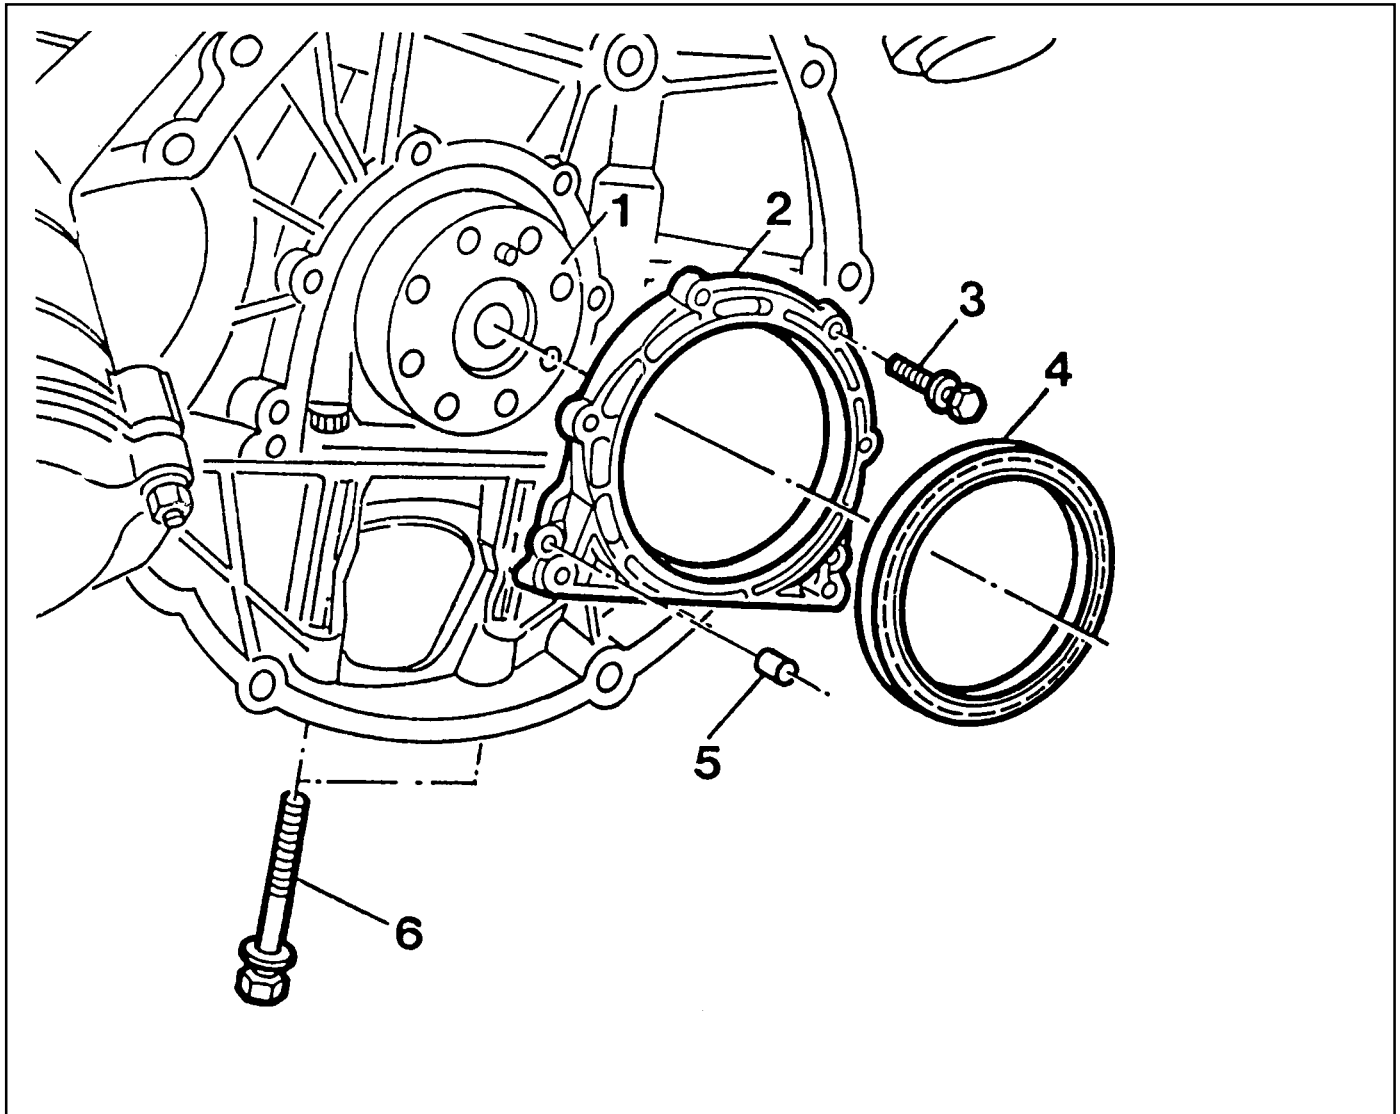

- 1 Crankshaft Flange
- 2 End Cover Clean, Loctite 573
- 3 Bolt 10Nm, Loctite 573

- 4 Radial Seal Replace
- 5 Dowel Sleeve
- 6 Bolt 10Nm, Loctite 573

Tools Required


601 589 03 43 00 Oil Seal Assembler

Removal Procedure


1. Remove the bolts (3, 6) from end cover, By pulling out the lugs (arrow), remove the cover.

Notice

Be careful not to damage the oil pan gasket.

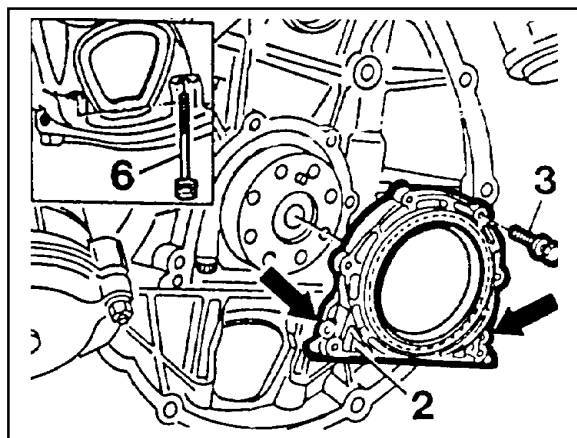

2. Remove the radial seal (4) with care not to damage the sealing surface.

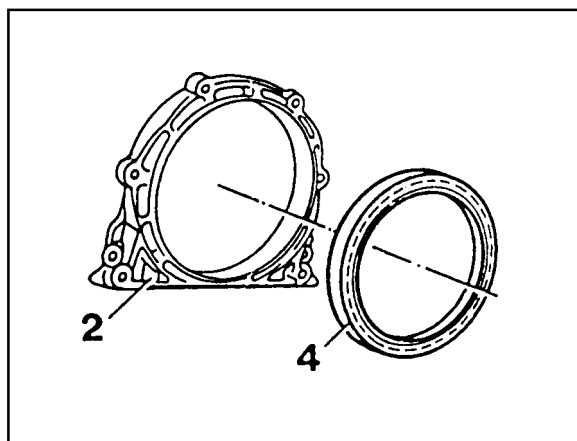


Installation Procedure

1. Thoroughly clean the sealing surface of end cover and apply Loctite 573.
2. Clean the groove of radial seal.
3. Apply Loctite 573 on the bolts and install the end cover.

Tightening Torque	10 Nm
-------------------	-------


Notice

Be careful not to damage the oil pan gasket.

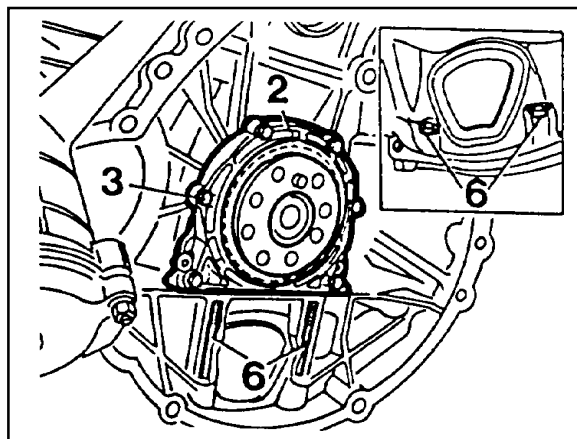

4. Install the inner oil seal assembler to the crankshaft flange.

Oil Seal Assembler 601 589 03 43 00

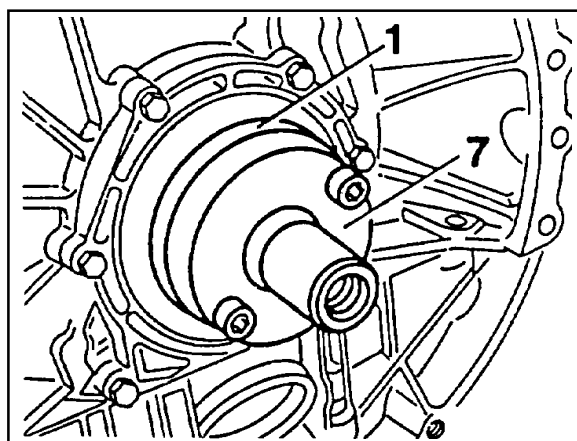


5. Coat a little oil on the sealing lip of new radial seal and contacting surface.

Notice

Don't use grease.


6. Insert the new radial seal (4) onto the oil seal assembler (7).

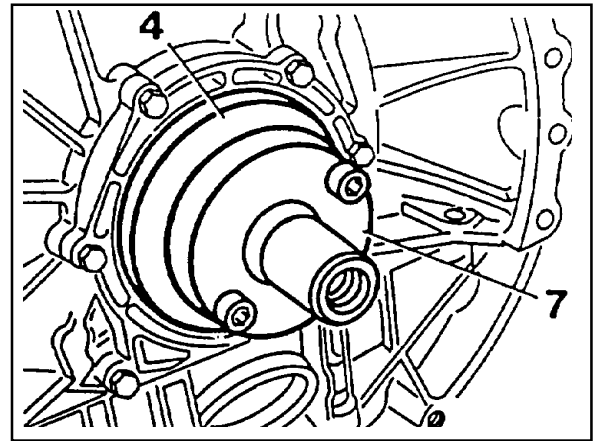

Notice

The sealing lip of the repair radial seal is offset to the inside by 3mm to ensure that it does not run in any groove which the standard radial seal may have left on the crankshaft flange.

A Standard Radial Seal
B Repair Radial Seal

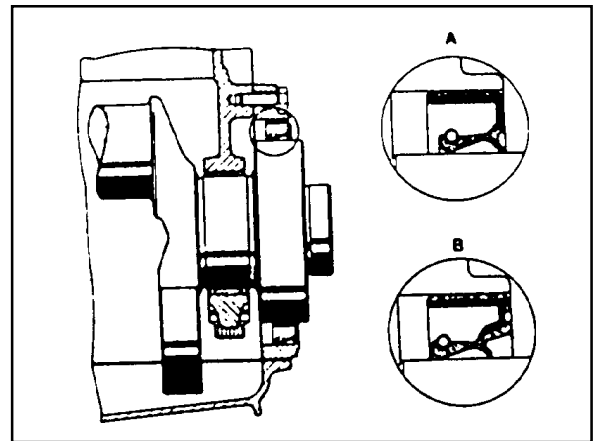


7. Install the outer oil seal assembler on the seal and by tightening the bolts, press the radial seal into the end cover as far as the stop.

Notice


The seal must be positioned exactly at right angles in the end cover to ensure that it provides a proper seal.

Oil Seal Assembler 601 589 03 43 00

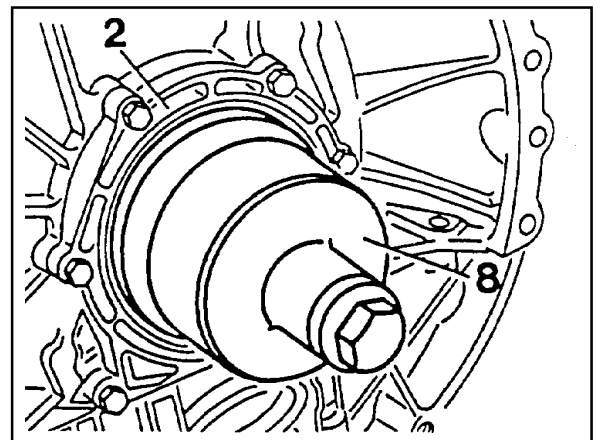


VIBRATION DAMPER AND HUB

Preceding Work : Removal of the cooling fan
Removal of poly V-belt

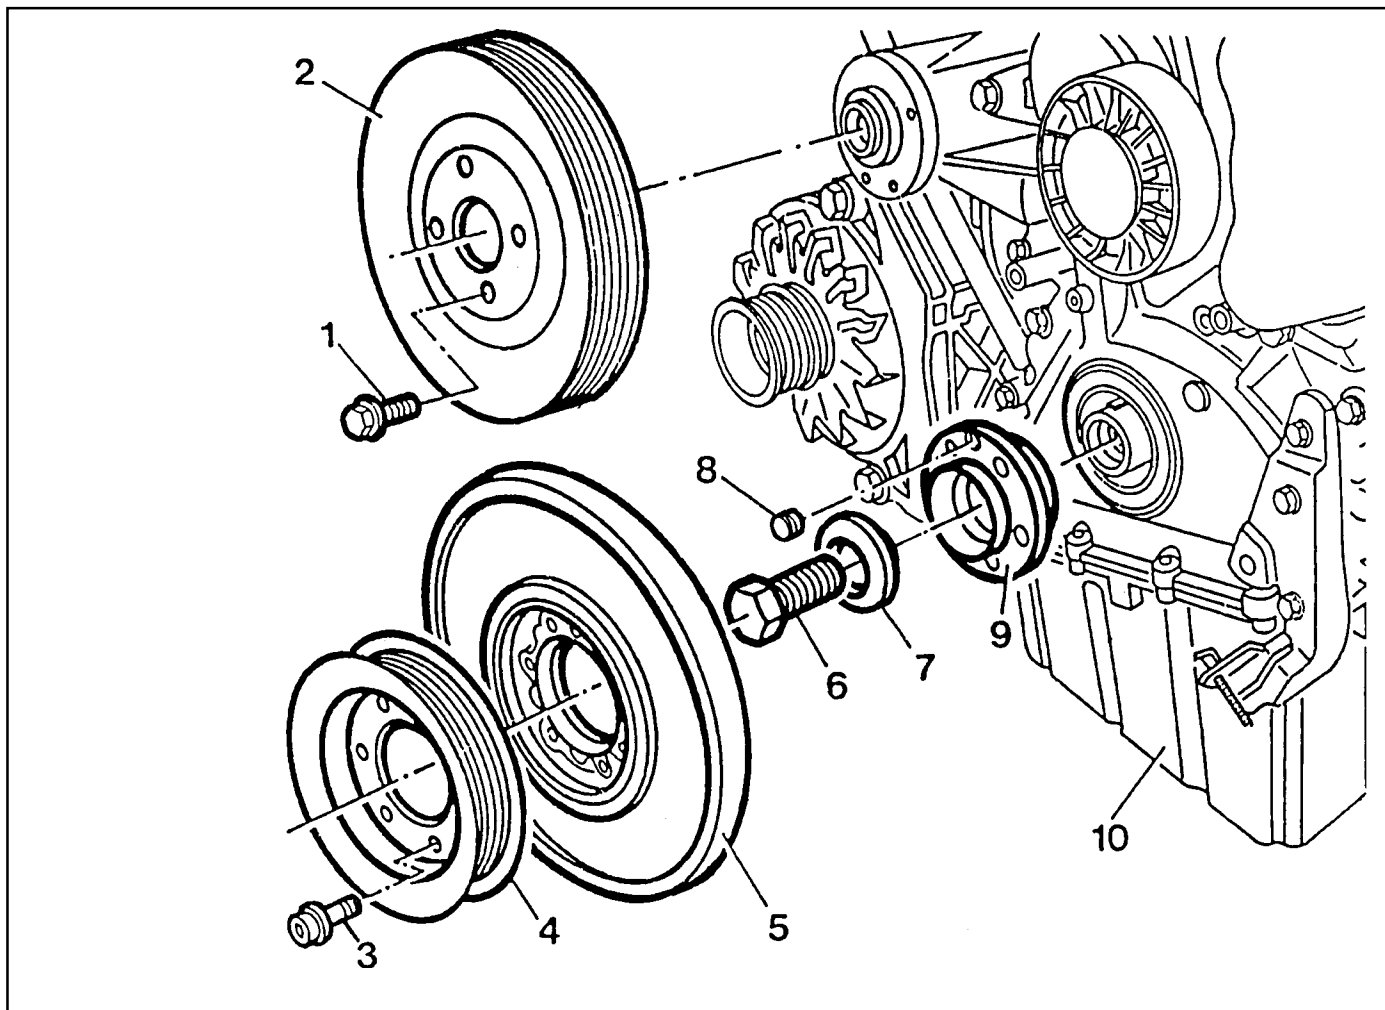

- | | |
|---------------------------|------|
| 1 Bolt | 10Nm |
| 2 Cooling Fan Belt Pulley | |
| 3 Socket Bolt | 23Nm |
| 4 Crankshaft Belt Pulley | |
| 5 Vibration Damper | |

- | | |
|----------------|-------------|
| 6 Bolt | 200Nm + 90° |
| 7 Washer | |
| 8 Straight Pin | |
| 9 Hub | |
| 10 Oil Pan | |

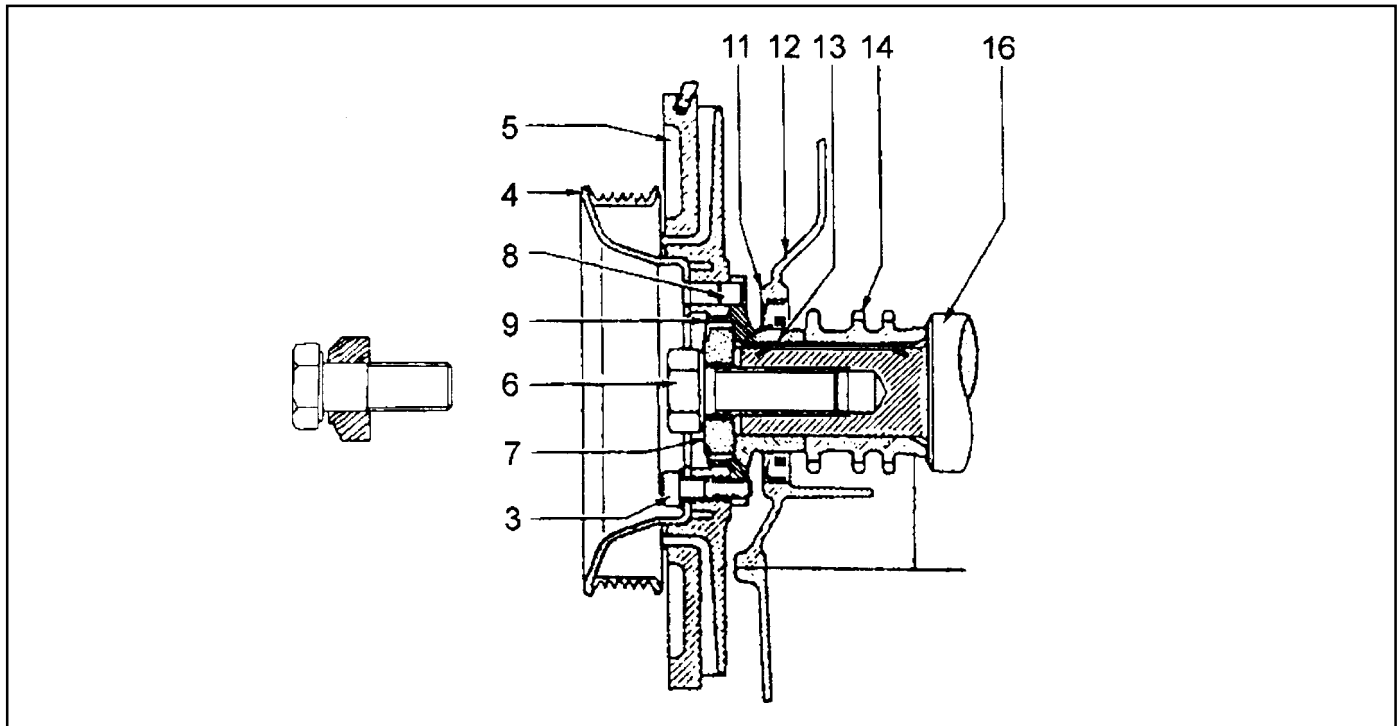Sectional View

- | | |
|--------------------------|---------------------------|
| 3 Socket Bolt | 9 Hub |
| 4 Crankshaft Belt Pulley | 11 Radial Seal |
| 5 Vibration Damper | 12 Timing Gear Case Cover |
| 6 Bolt | 13 Key |
| 7 Washer | 14 Crankshaft Sprocket |
| 8 Straight Pin | 16 Crankshaft |

Notice

The mounting position of vibration damper is fixed by straight pin (8).


Tools Required

602 589 00 40 00 Engine Lock
103 589 00 30 00 Puller

Removal Procedure

1. Remove the starter motor and install the engine lock into the wheel ring gear.


Engine Lock 602 589 00 40 00

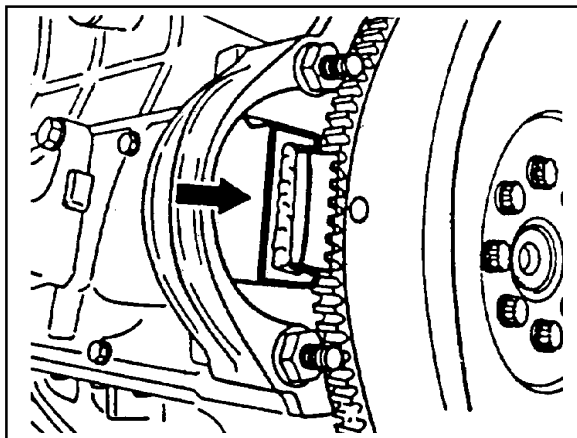


2. Remove the poly V-belt.
3. Remove the cooling fan.

Notice

Keep the fan in vertical position.

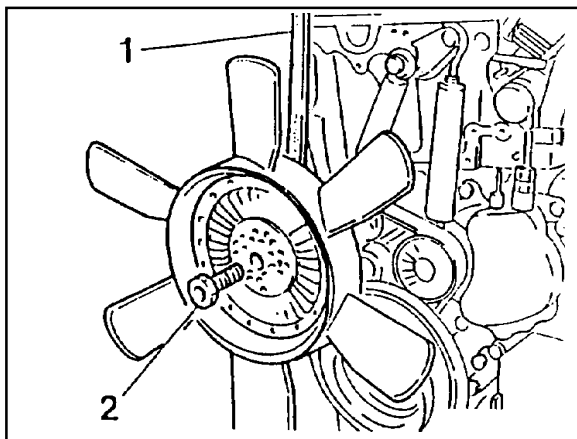


4. Remove the cooling fan belt pulley (2).
5. Place alignment marks (arrow) on the vibration damper (5) and crankshaft belt pulley (4).

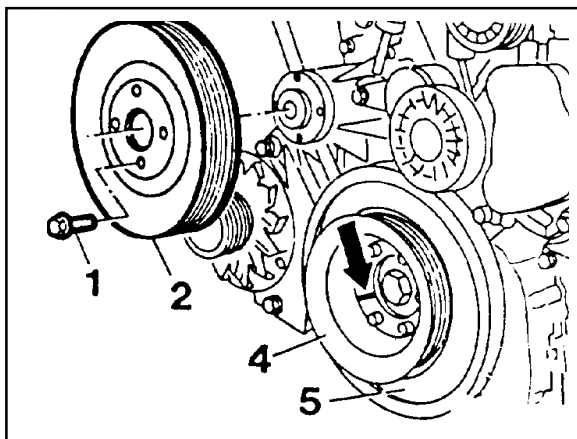


6. Remove the timing sensor bracket.

Notice


Remove if necessary.

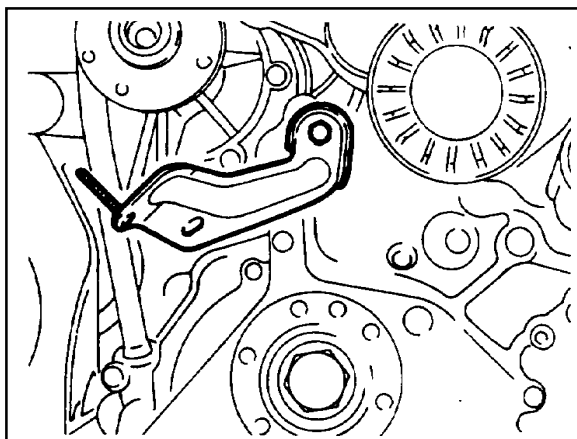


7. Remove the socket bolts (3) and then remove the belt pulley (4) and vibration damper (5).

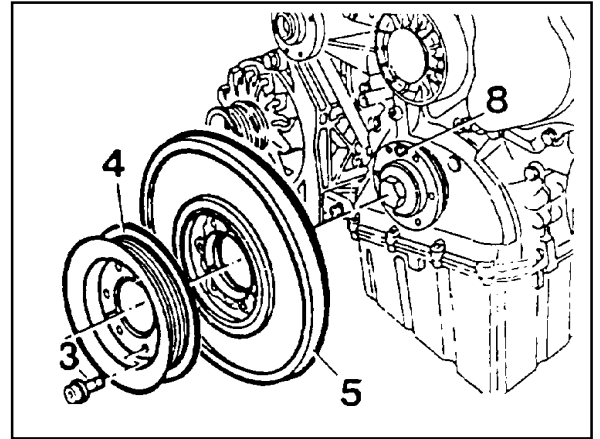

8. Remove the washer and bolt.

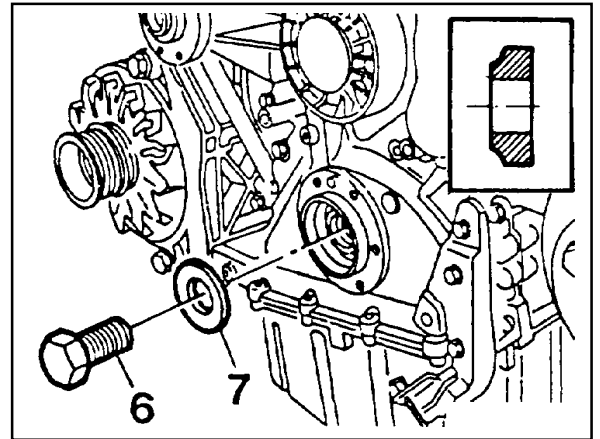

9. Remove the hub by using a puller.

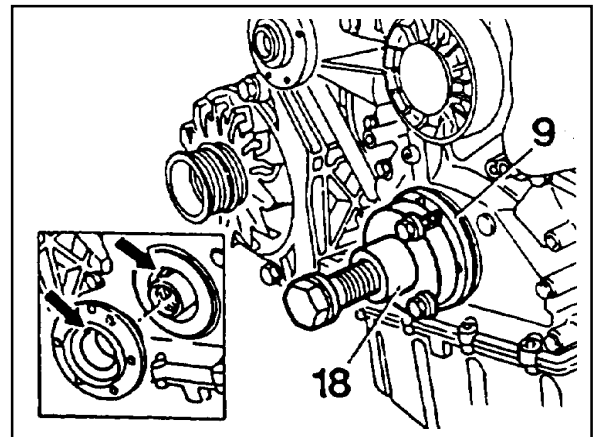

Puller 103 589 00 33 00


10. Replace the radial seal.

Installation Procedure

1. Install the hub.


Notice

Exactly align the woodruff key and the groove of hub (arrow).

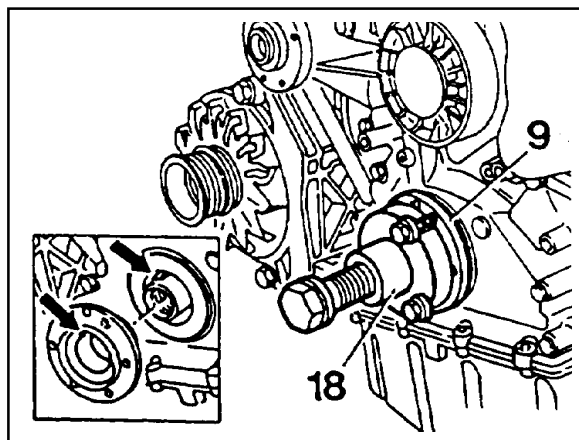

2. Install the washer (7) and tighten the bolt (6).


Washer (new) : 1 EA	200 Nm + 90°
---------------------	--------------

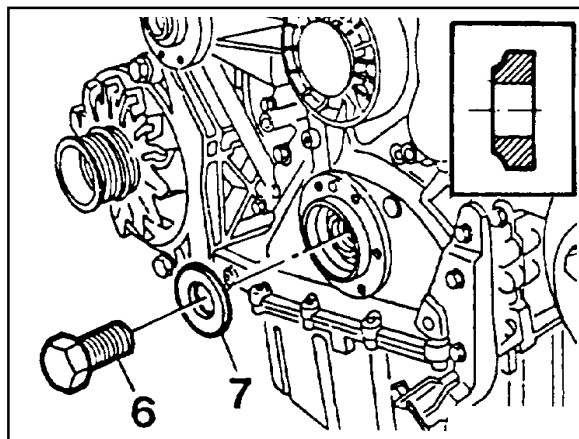

3. Install the vibration damper.

Notice

Exactly align and insert onto the straight pin.

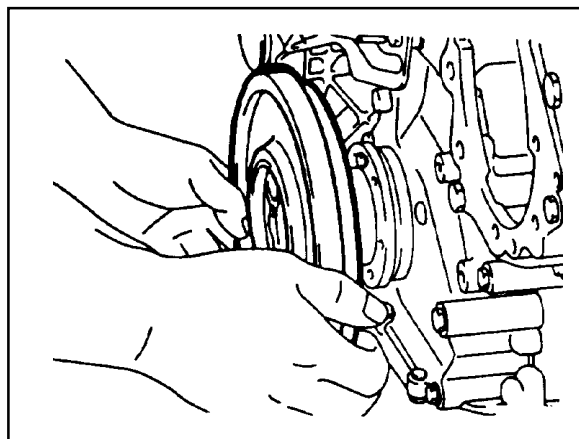


4. Install the belt pulley.

Tightening Torque	25 Nm
-------------------	-------

Notice


Align the alignment marks.

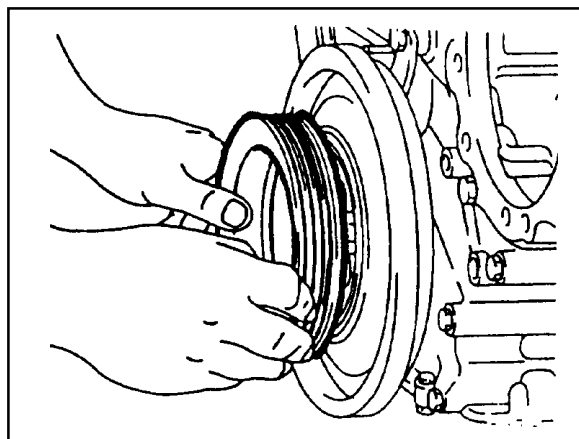

5. Install the timing sensor bracket.

Notice


See the 'TDC setting'.

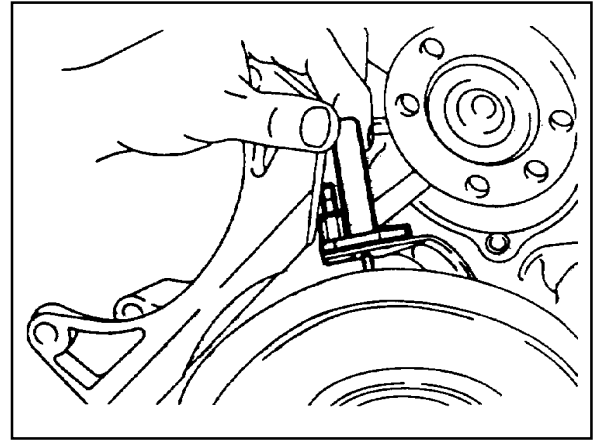


6. Install the cooling fan pulley.

Tightening Torque	10 Nm
-------------------	-------


7. Install the cooling fan.
8. Install the fan belt.

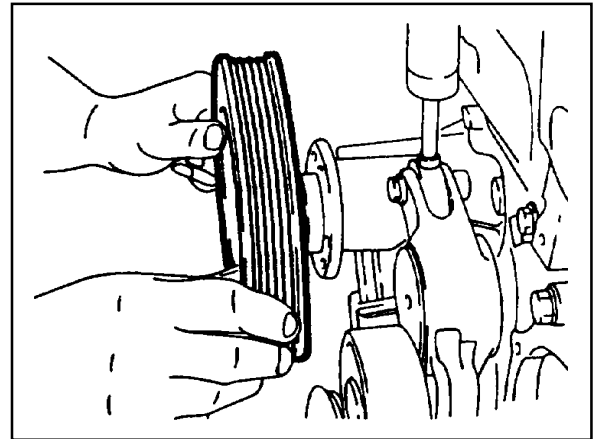

9. Remove the engine lock.

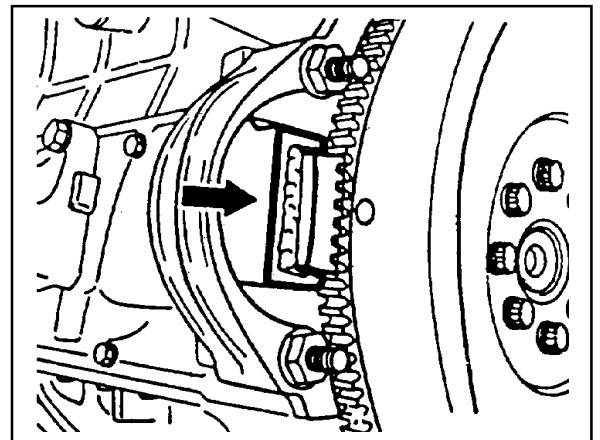

CRANKSHAFT FRONT RADIAL SEAL

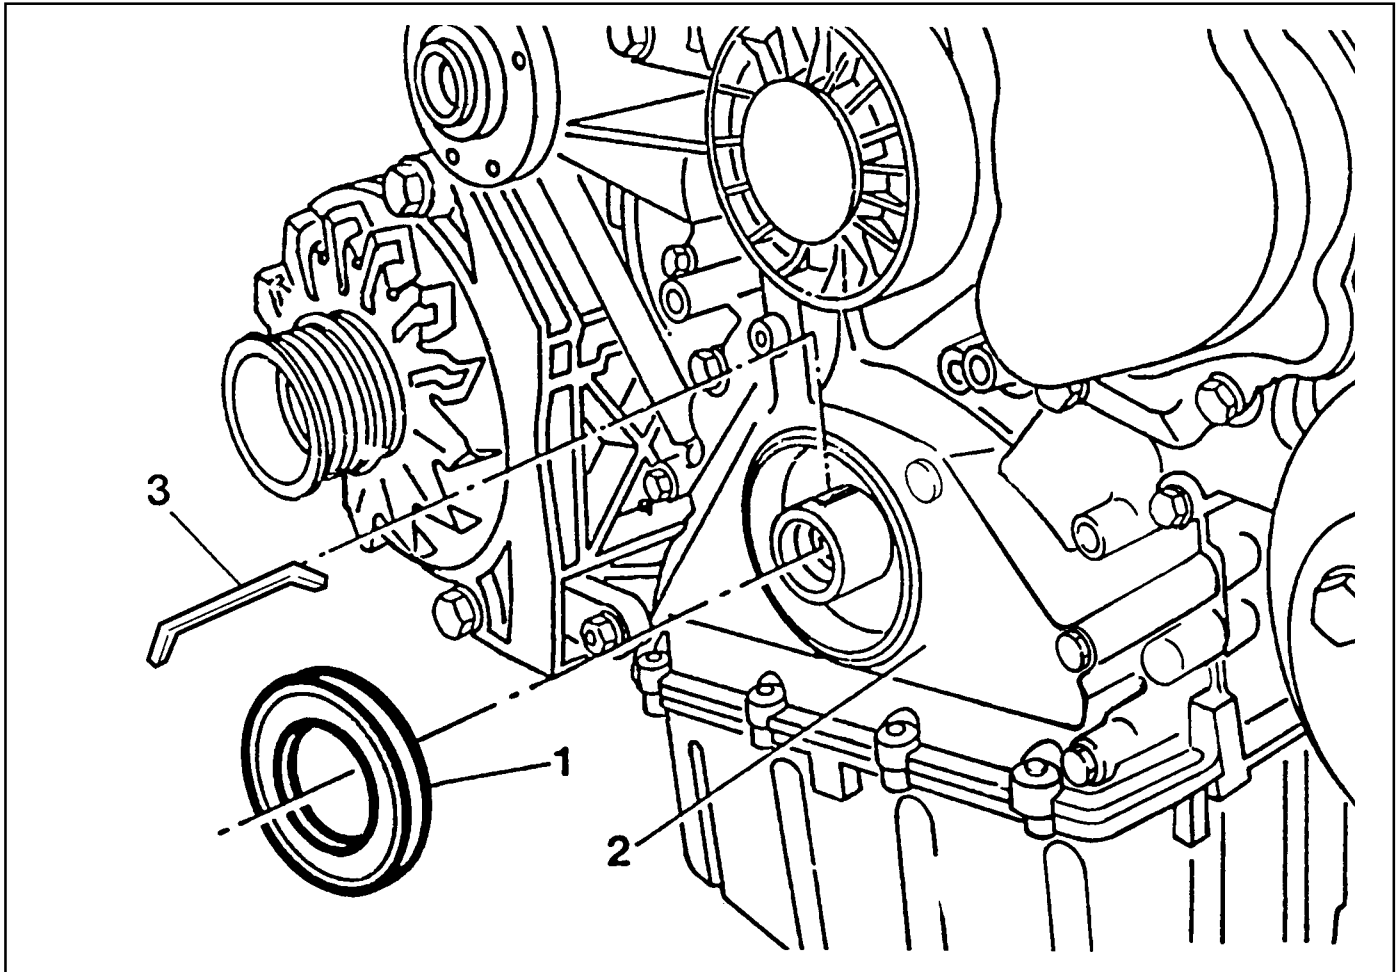

- 1 Radial Seal
- 2 Timing Case Cover

- 3 Woodruff Key


Tools Required

601 589 03 14 00 Sleeve


Notice

The sealing lip of the repair radial seal is offset to the inside by 2mm to ensure that it does not run in any groove which the standard radial seal may have left on the crankshaft flange.

A Standard Radial Seal
B Repair Radial Seal

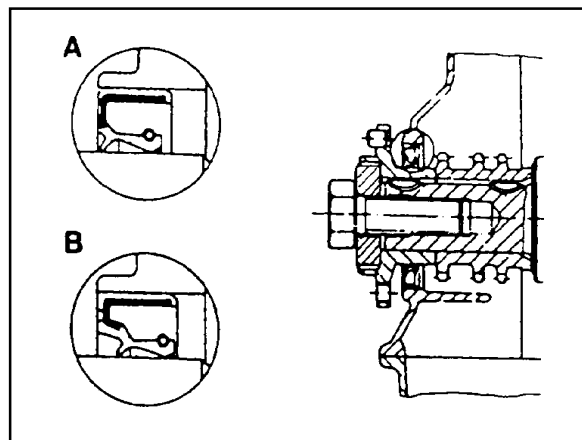**Replacement Procedure**

1. Pull out the radial seal (1) and be careful not to damage the sealing surface of timing case cover.
2. Thoroughly clean the mounting bore of the radial seal.

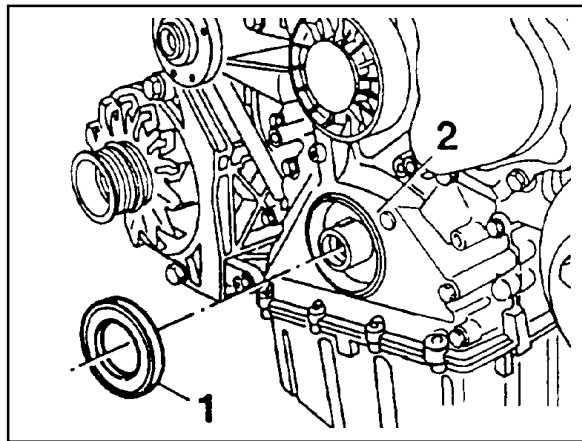

3. Coat a little oil on the sealing lip of new radial (1) and contact surface.


Notice

Don't use grease.

4. Install the radial seal (1) by using a sleeve (4).


Notice

Align the groove of sleeve and woodruff key (arrow).

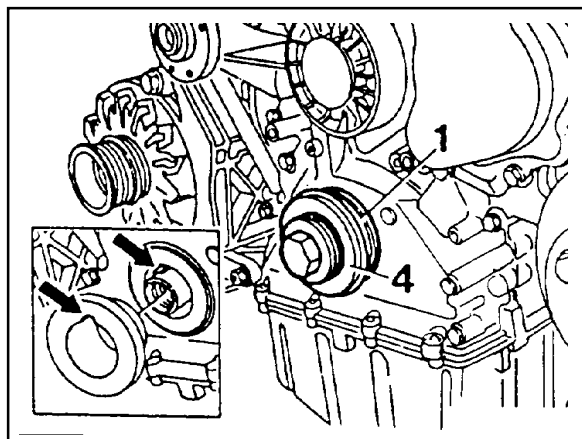

Sleeve 601 589 03 14

CRANKSHAFT BALL BEARING

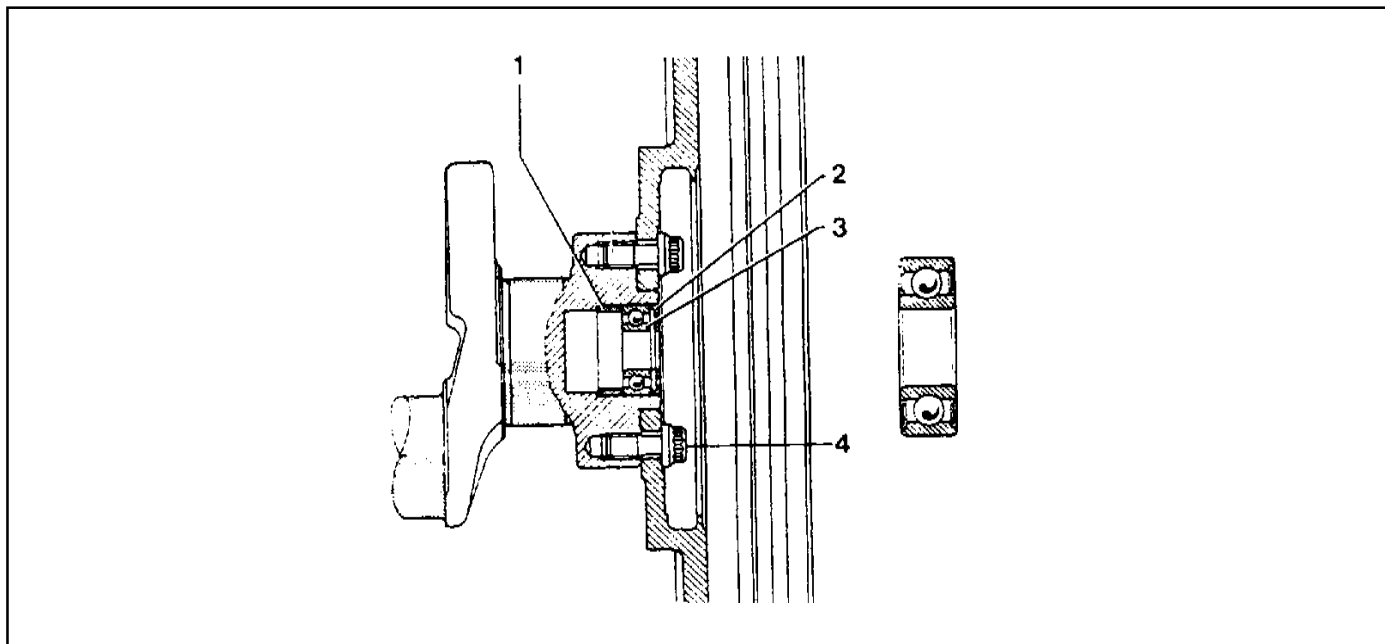

1 Spacer

2 Cover Replace

3 Ball Bearing

4 Bolt 45Nm + 90°

Notice

Manual transmission only.

Tools Required

000 589 33 33 00 Counter Support


000 589 25 33 00 Internal Extractor

Removal & Installation Procedure

1. Remove the manual transmission.
2. Using a puller, pull out the locking ring and ball bearing together.


Counter Support 000 589 33 33 00
Internal Extractor 000 589 25 33 00

3. Apply Loctite 241 on the new ball bearing and then insert the ball bearing to be stopped at the spacer ring by using a proper mandrel.

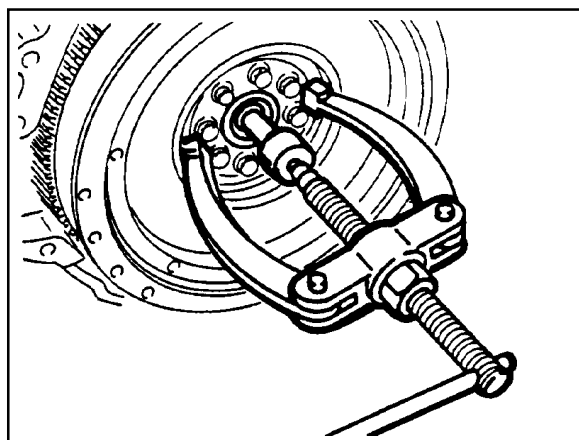

CRANKSHAFT

Preceding Work : Removal of the end cover
Removal of the piston
Removal of the crankshaft sprocket

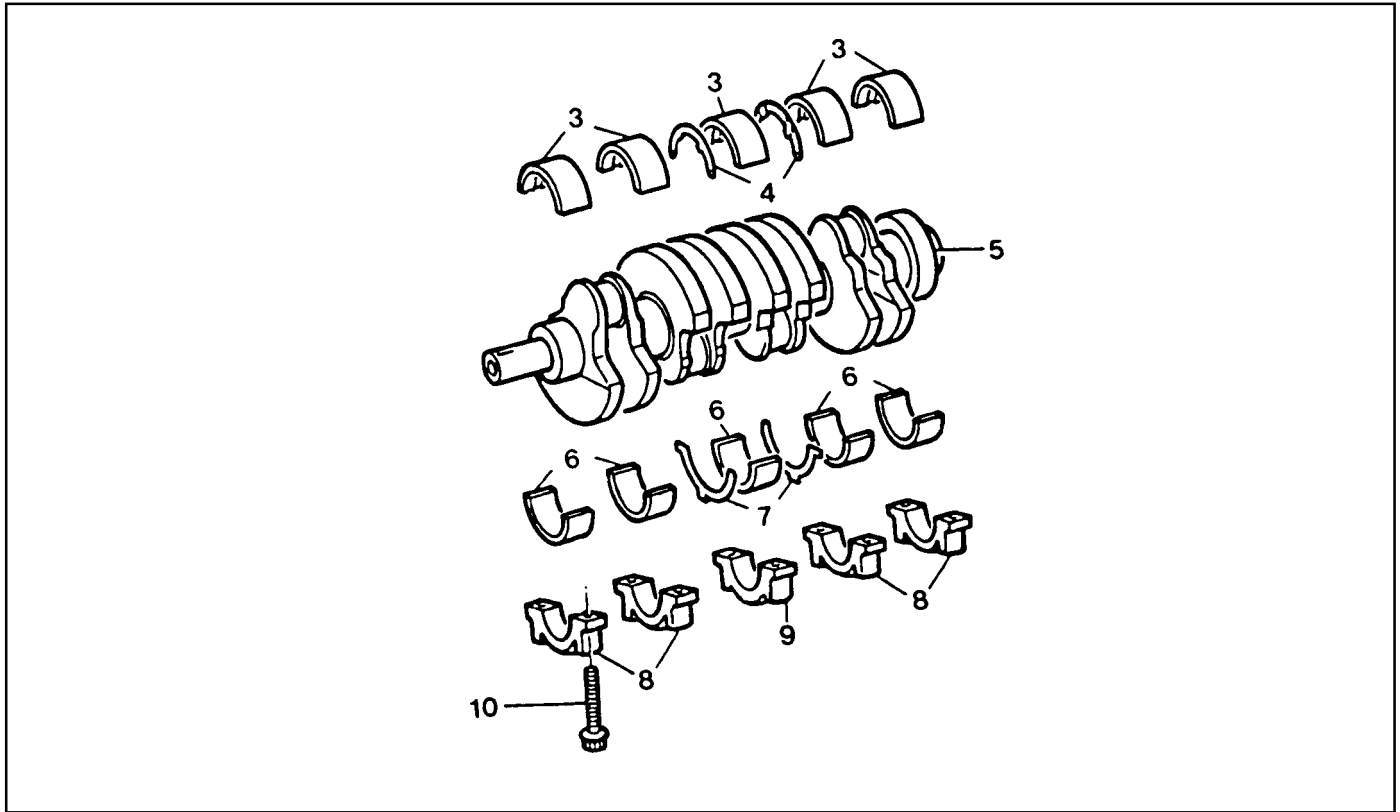

3 Crankshaft Main Bearing Shells (Upper)
4 Thrust Bearings (Upper)
5 Crankshaft
6 Crankshaft Main Bearing Shells (Lower)


7 Thrust Bearings (Lower)
8 Crankshaft Bearing Cap
9 Crankshaft Bearing Cap (Fit Bearing)
10 12-sided Stretch Bolts55Nm + 90°

Tools Required

001 589 53 21 00 Dial Gauge
363 589 02 21 00 Dial Gauge Holder
366 589 00 21 05 Extension

Thrust Washer and Bearing Arrangement

OM662LA Engine

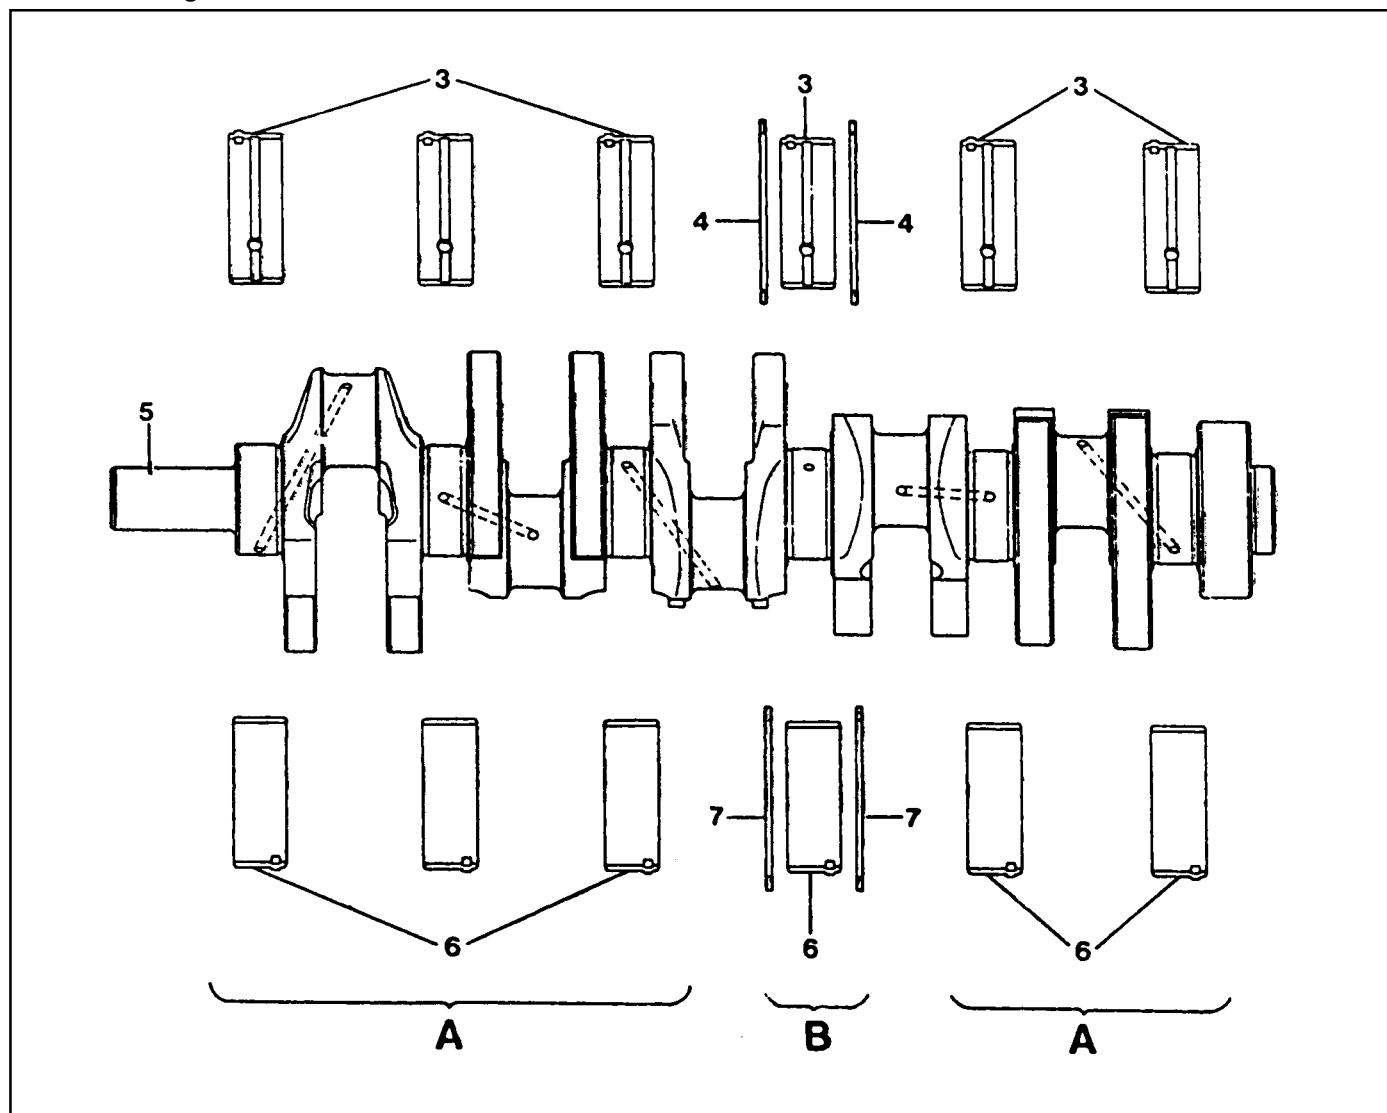


- 3 Crankshaft Main Bearing Shells (Upper)
- 4 Thrust Bearings (Upper)
- 5 Crankshaft
- 6 Crankshaft Main Bearing Shells (Lower)
- 7 Thrust Bearings (Lower)

- A Radial Bearings
- B Radial and Axial Bearings (Thrust Bearing)

Notice

The gaps between the bearing shell and bore and between the bearing shell and journal are different each other. Refer to service data.

OM661LA Engine

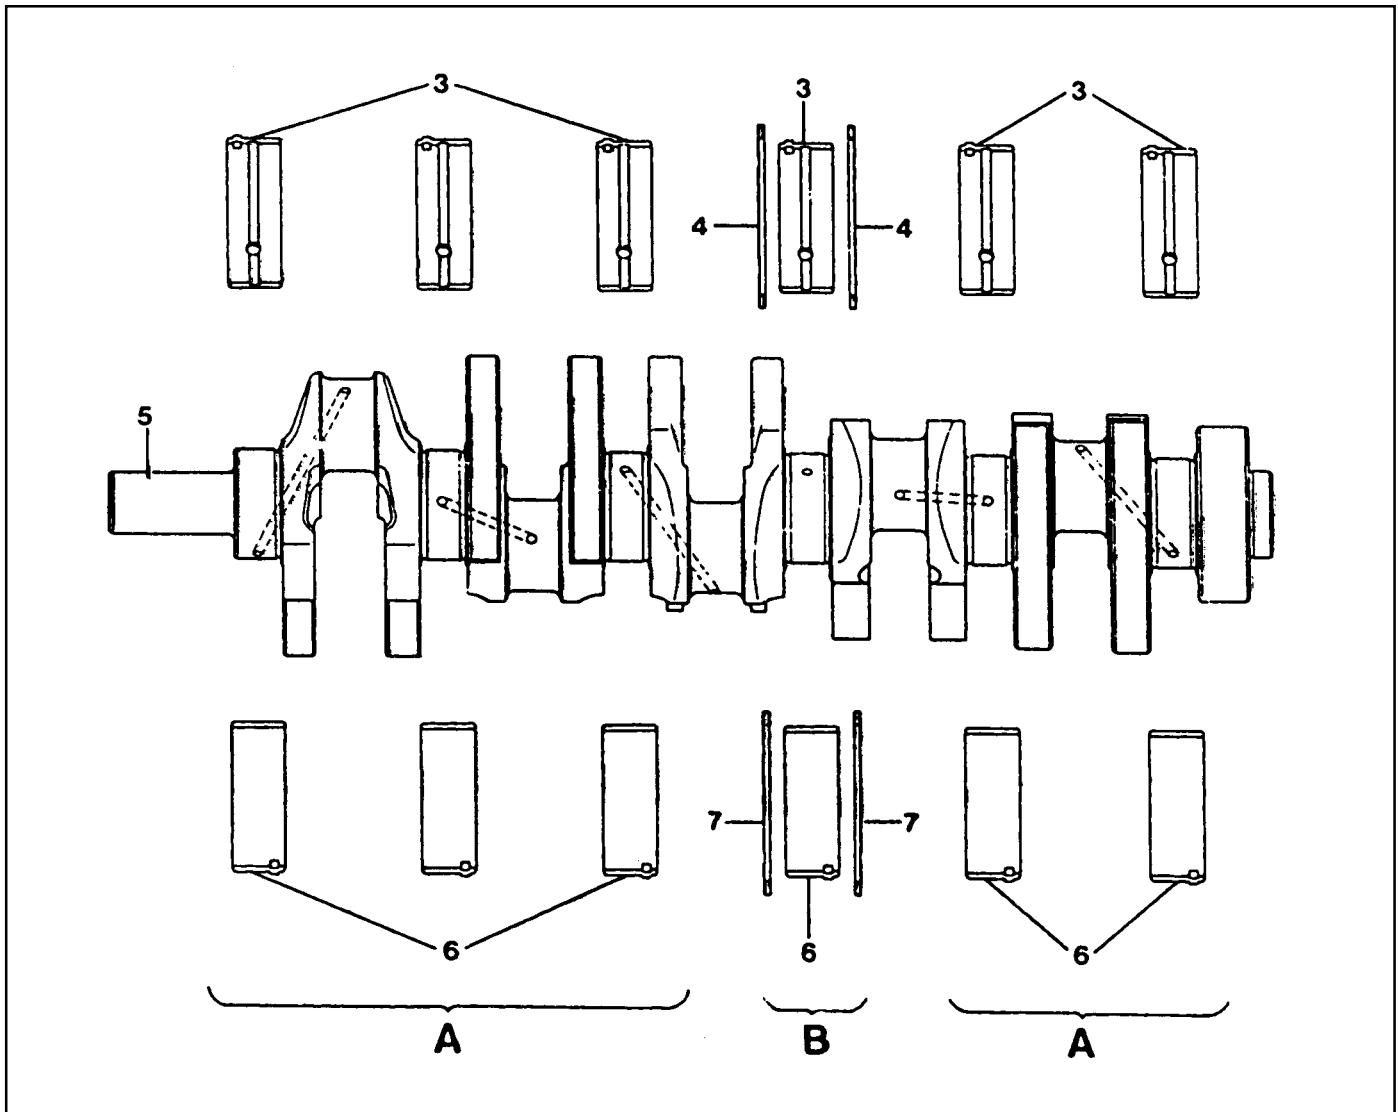

- 3 Crankshaft Main Bearing Shells (Upper)
- 4 Thrust Bearings (Upper)
- 5 Crankshaft
- 6 Crankshaft Main Bearing Shells (Lower)
- 7 Thrust Bearings (Lower)

- A Radial Bearings
- B Radial and Axial Bearings (Thrust Bearing)

Notice

The gaps between the bearing shell and bore and between the bearing shell and journal are different each other. Refer to service data.

Crankshaft Standard and Repair Sizes

mm

	Crankshaft bearing journal diameter	Thrust bearing journal width	Thrust bearing journal diameter
Standard size	50.950 - 57.965	24.500 - 24.533	47.950 - 47.965
		24.600 - 24.633	
Repair size 1	57.500 - 57.715	24.700 - 24.733	47.700 - 47.715
Repair size 2	57.450 - 57.465	24.900 - 24.933	47.450 - 47.650
Repair size 3	57.200 - 57.215	25.000 - 25.033	47.200 - 47.215
Repair size 4	56.950 - 56.965	-	46.950 - 46.965

Bearing Clearances

mm

		Thrust bearing	Crankshaft bearing
Radial clearances	New	0.027 - 0.051	0.026 - 0.068
	Limit	Max. 0.070	Max. 0.080
Axial clearances	New	0.100 - 0.254	-
	Limit	Max. 0.300	-

Matching Fit Bearing Journal Width to Thrust Bearings

mm

Fit bearing journal width	Thrust bearings thickness
24.500 - 24.533	2.15
24.600 - 24.633	2.20
24.700 - 24.733	2.25
24.900 - 24.933	2.35
25.000 - 25.033	2.40

Notice

- Measure crankshaft axial clearance and adjust with proper thrust Bearing.
- The same thickness of washer must be installed on both sides of the fit bearing.

Matching Crankshaft Bearing Shells to Basic Bearing Bore in Crankshaft

Marking of basic bearing bore in lower parting surface	Color code of relevant crankshaft bearing shell
1 punch mark or blue	Blue or white-blue
2 punch marks or yellow	Yellow or white-yellow
3 punch marks or red	Red or white-red

Matching Crankshaft Bearing Shells to Basic Bearing Journal of Crankshaft


Marking of bearing journals on crank webs	Color code of relevant crankshaft bearing shell
Blue or white-blue	Blue or white-blue
Yellow or white-blue	Yellow or white-yellow
Red or white-blue	Red or white-red

Removal & Installation Procedure


1. Remove the bearing cap bolt.
2. Remove the bearing caps (8).

Notice


The crankshaft bearing caps are marked with stamped numbers. Remove the bearing cap from the vibration damper side.

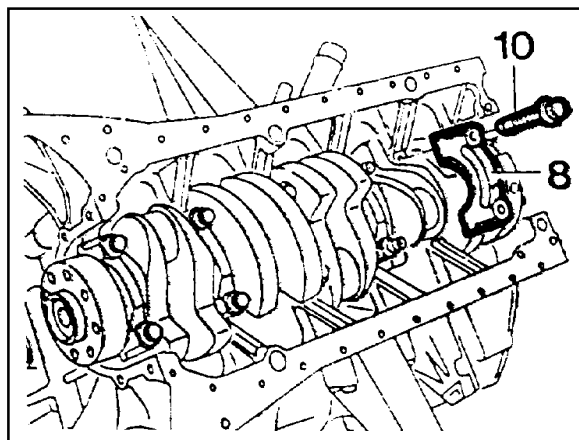


3. Remove the crankshaft bearing caps (9) and lower thrust bearings (7).
4. Remove the lower thrust bearings (6) from the bearing cap (9).

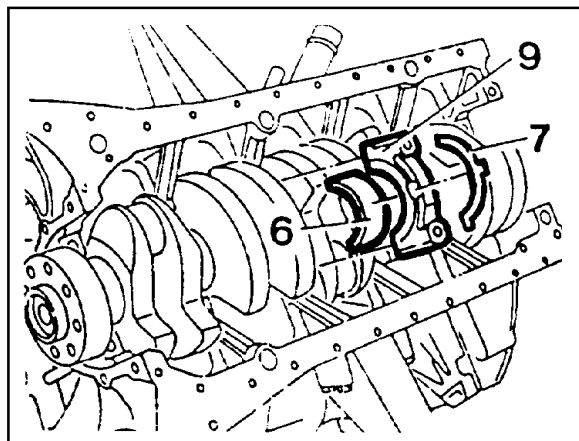

5. Remove the crankshaft (5).

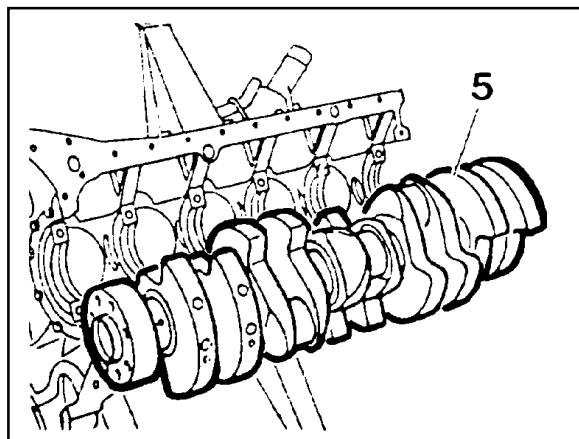

6. Remove the upper thrust bearings(4).
7. Remove the upper bearing shells (3) from crankcase.

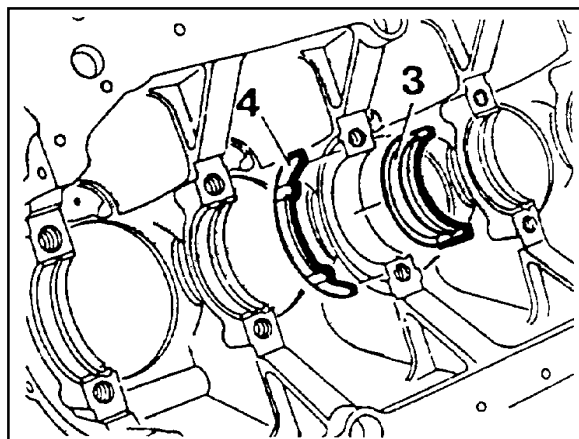

8. Thoroughly clean the oil gallery.
9. Select a proper new bearing shells with reference to table.
10. Coat the new bearing shells with oil and insert into the crankcase and into the crankshaft bearing caps.

Notice

Do not mix up upper and lower crankshaft bearing shells.

11. Install the bearing caps according to marking and tighten the 12-sided stretch bolts.



Tightening Torque	35 - 40 Nm
-------------------	------------

Notice


No. 1 is vibration damper side.

12. Measure crankshaft bearing diameters (E).

Extension 366 589 00 21 05

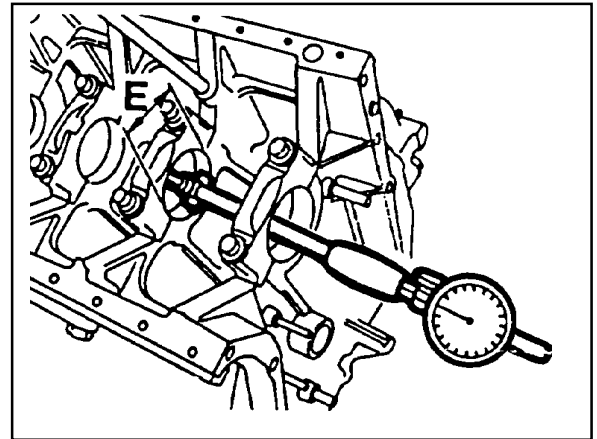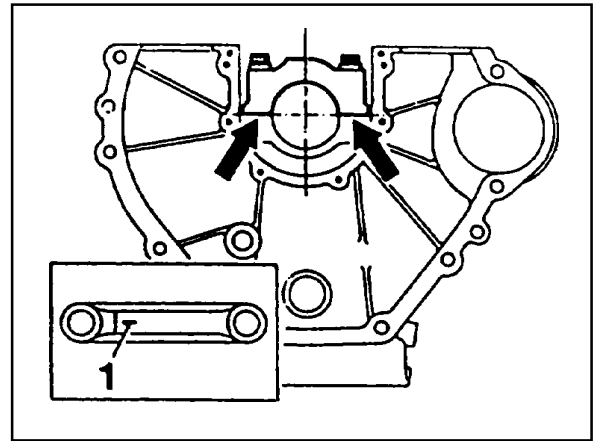



13. Measure at 3 points (A, B and C) and if the average value of B and C is less than A's value, the average value of B and C is the mean value and if more than A's value, A's value is the mean value.

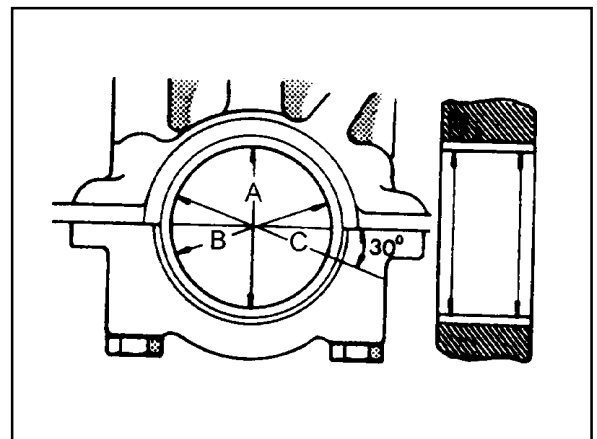

14. Measure crankshaft bearing journal diameter (F).

Notice

When measured in A and B, the runout should not exceed 0.010mm.

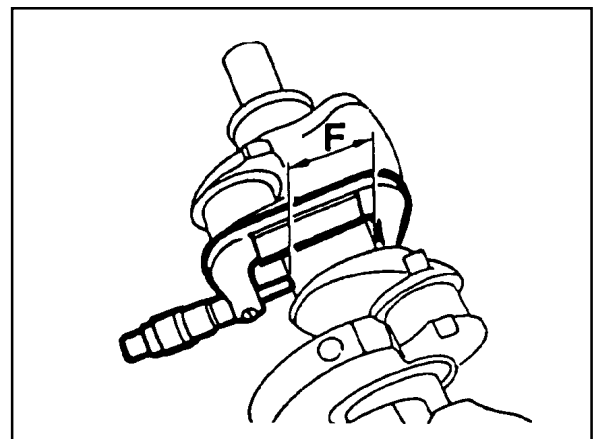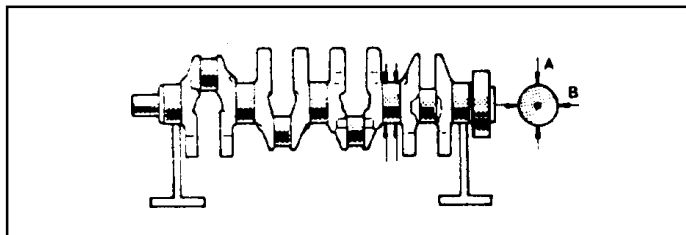

1B3-90 OM600 ENGINE MECHANICAL

15. Measure radial clearance of crankshaft bearing (G).

Clearance 'G'	0.027 - 0.051mm
---------------	-----------------

Notice

If 'G' is out of standard, replace the bearing shells and adjust the radial clearance of crankshaft bearing.

Example) Measured value 'E' = 57.700mm

Measured value 'F' = 57.659mm


Clearance 'G' = 0.041mm

16. Remove the crankshaft bearing cap.


17. Measure width of thrust bearing journal (H) and adjust with proper thrust bearings (see table).

Notice

The same thickness of thrust washers should be installed on both sides of the thrust bearing.

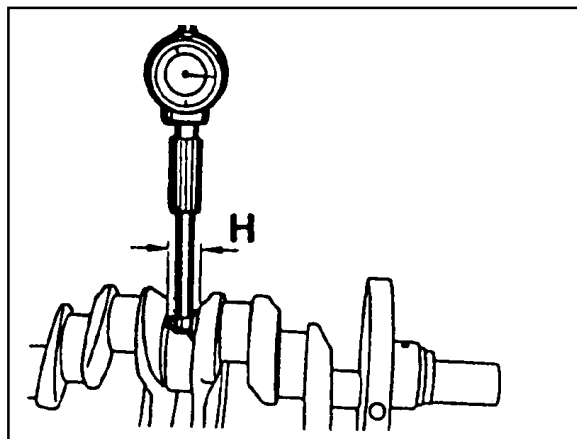


18. Coat the upper thrust bearing (4) with oil and insert into the crankcase so that the oil grooves are facing the crank webs (arrow).

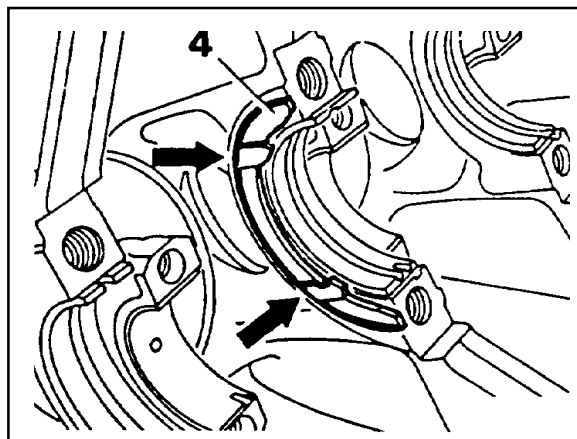

19. Coat the lower thrust bearing (7) with oil and insert into the crankshaft bearing cap so that the oil grooves are facing the crank webs (arrow).


Notice

The retaining lugs should be positioned in the grooves (arrow).

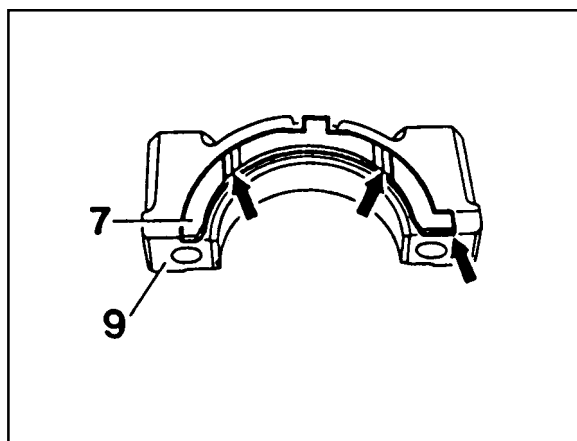

Notice

If the max. length of bolts(L) exceed 63.8mm, replace them.

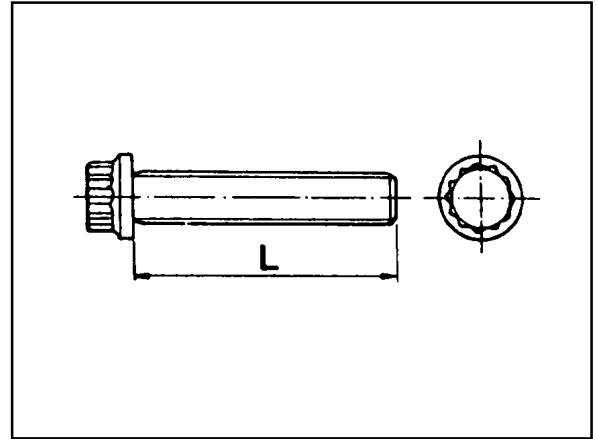


19. Coat the new crankshaft with engine oil and place it on the crankcase.
20. Install the crankshaft bearing caps according to marking and tighten the bolts.

Tightening Torque	55 Nm + 90°
-------------------	-------------

Notice

Install from No. 1 cap.

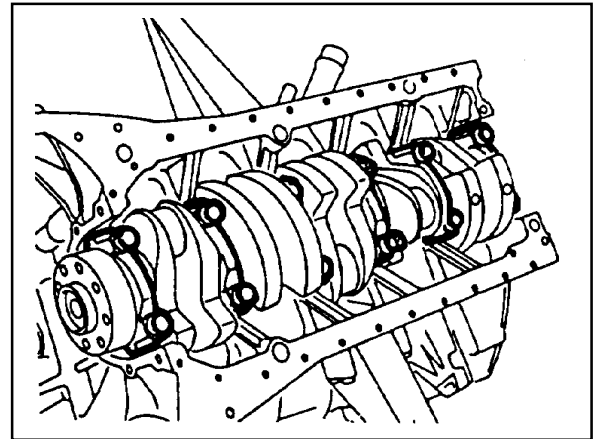

22. Rotate the crankshaft with hand and check whether it rotates smoothly.
23. Measure crankshaft bearing axial clearance.

Clearance	0.100 - 0.245mm
-----------	-----------------


Notice

If the clearance is out of standard, adjust the axial clearance of crankshaft bearing by replacing the thrust washers.

Dial Gauge 001 589 53 21 00
Dial Gauge Holder 363 589 02 21 00

Notice


The same thickness of thrust washers should be installed on both sides of the thrust bearing.

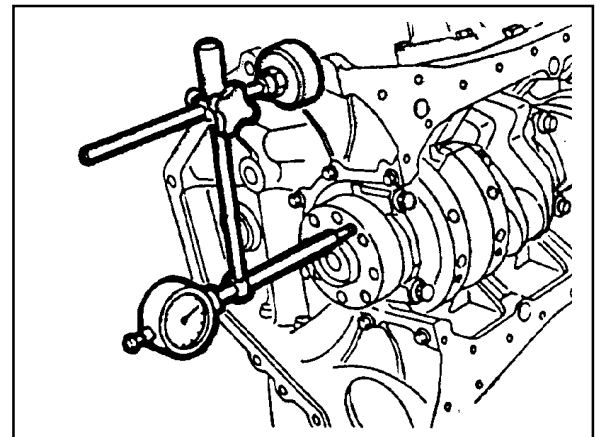

24. Insert the new connecting rod bearing shells into the connecting rod and connecting rod bearing cap and tighten the 12-sided stretch bolts (11).

Tightening Torque	40 Nm + 90°
-------------------	-------------

25. Measure inner diameter of connecting rod bearing.

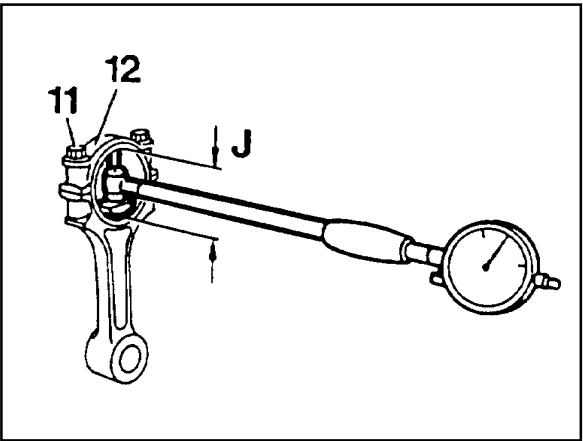

26. Measure connecting rod bearing journal diameter (K).

Notice


Refer to measurement of the crankshaft bearing journal diameter.

27. Measure the radial clearance (L) of the connecting rod bearing.

Example) Measured value 'J' = 47.700mm
Measured value 'K' = 47.653mm

Clearance 'L' = 0.047mm

Radial Clearance 'L'	0.026 - 0.068mm
----------------------	-----------------

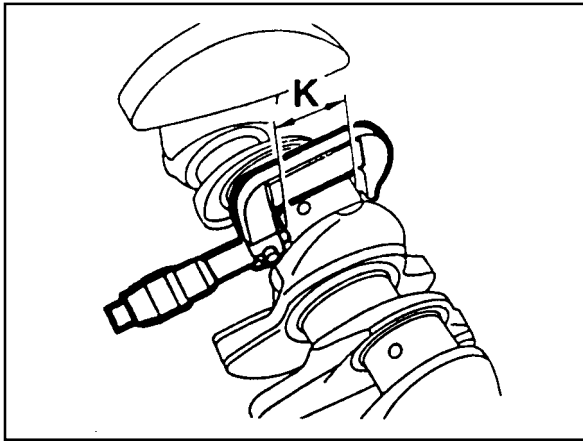

Notice

If the clearance is out of standard, adjust the radial clearance of connecting rod bearing by replacing the connecting rod bearing shells.

28. Remove the connecting rod bearing cap.
29. Install the piston.
30. Rotate the crankshaft by hand and check whether it rotates smoothly.
31. If the bearings are damaged,
- replace the oil presser relief valve.
- clean the oil pump and oil filter housing carefully and replace the hose if necessary.

Notice

After assembling the engine, check the camshaft timing, adjust the start of fuel injection and check the TDC sensor bracket setting.


32. Fill oil and run the engine and then check the oil pressure and oil level.

Notice

Install the original oil filter element and then change the engine oil and oil filter element after 1,000 - 1,500km.

FLYWHEEL

Preceding Work : Removal of the transmission
Removal of the clutch

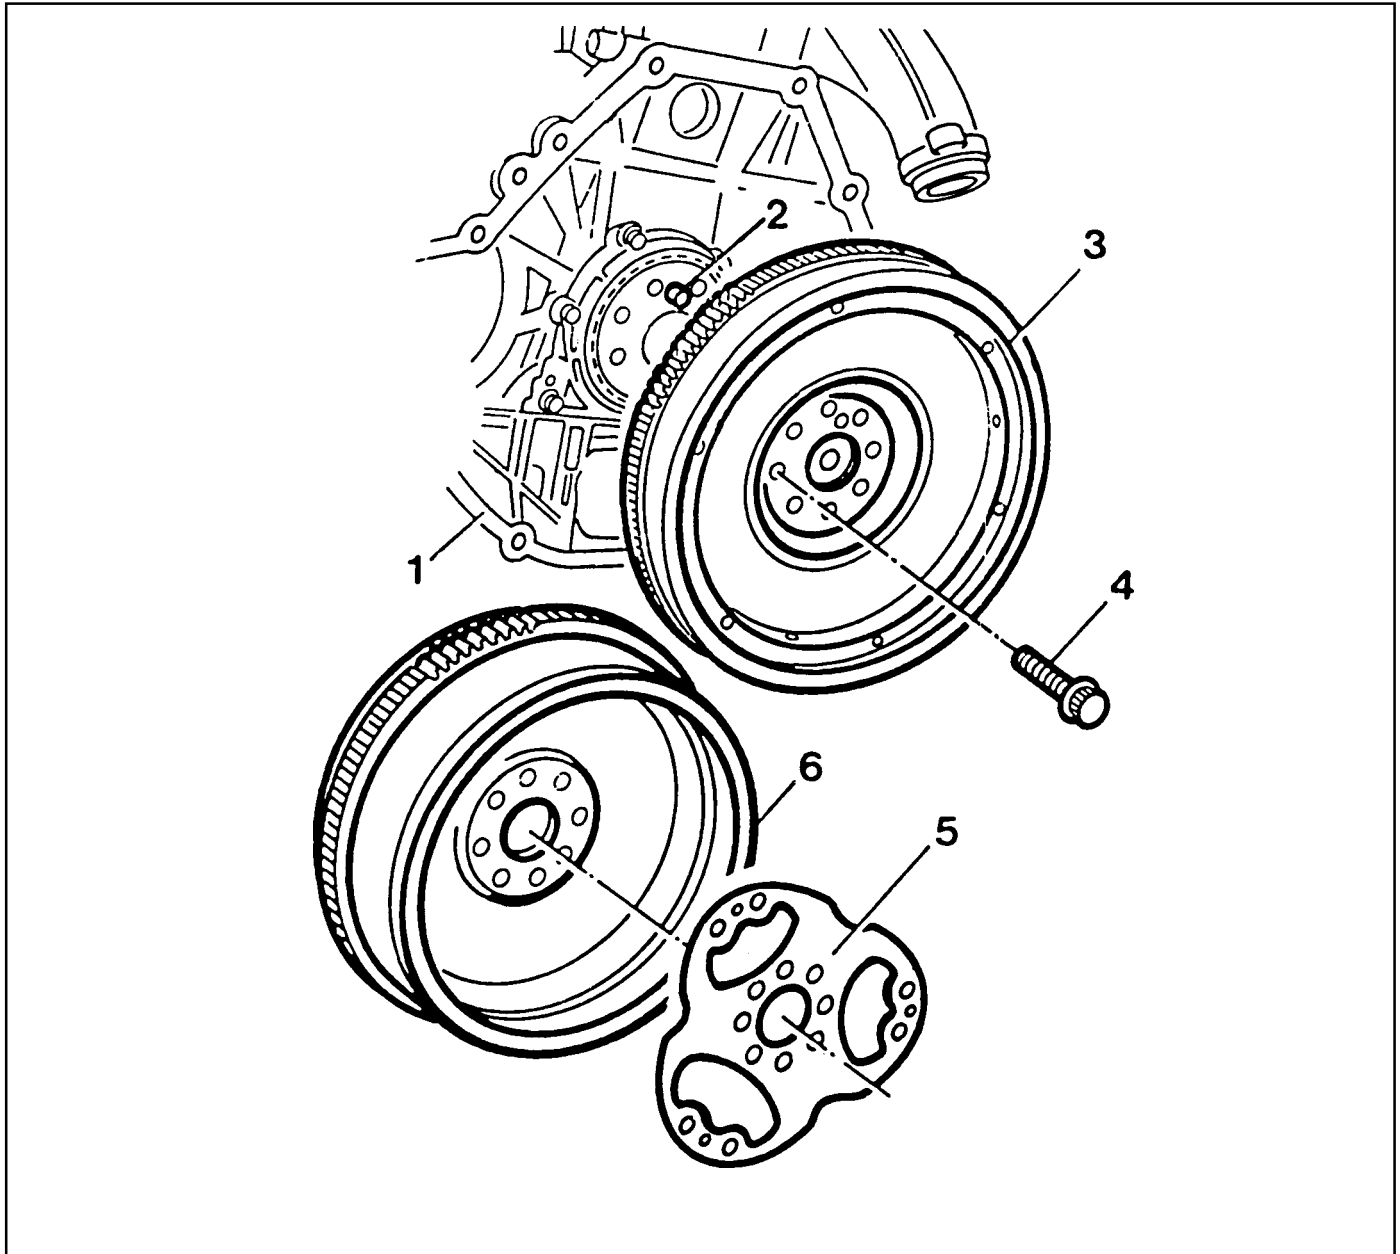


- 1 Oil Pan
- 2 Straight Pin
- 3 Flywheel


- 4 12-Sided Stretch Bolt Check, 45Nm + 90°
- 5 Drive Plate (Automatic Transmission)
- 6 Flywheel (Automatic Transmission)

1B3-94 OM600 ENGINE MECHANICAL

- Manual transmission flywheel

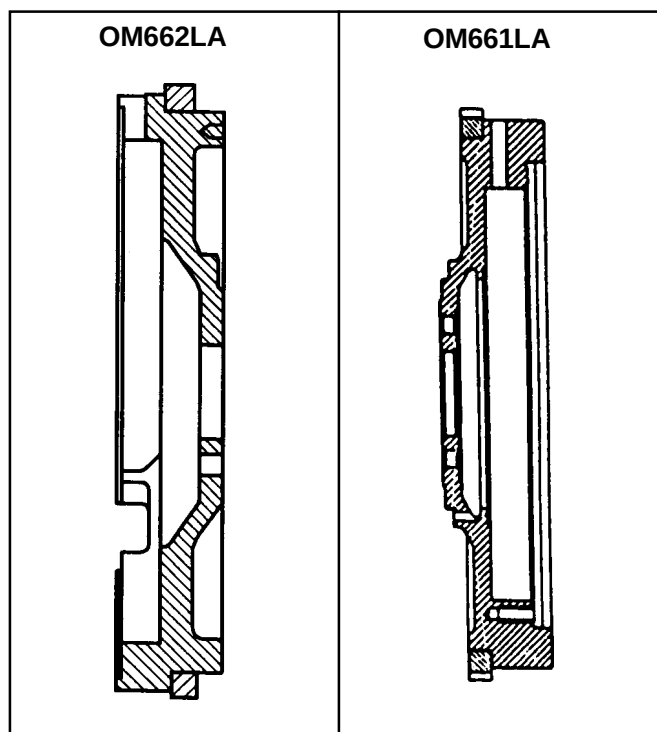

- Automatic transmission flywheel

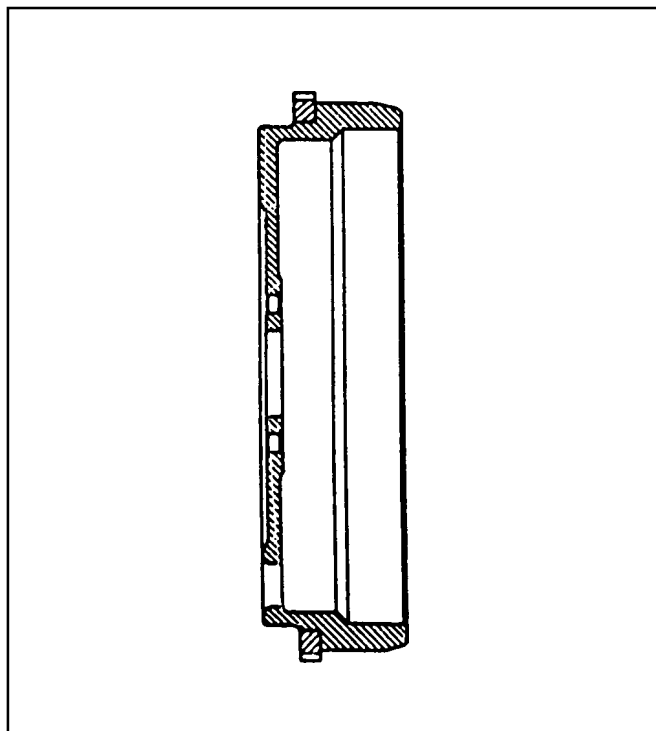


Tools Required

602 589 00 40 00 Engine Lock

Removal & Installation Procedure

1. Install the engine lock.


Engine Lock 602 589 02 40 00

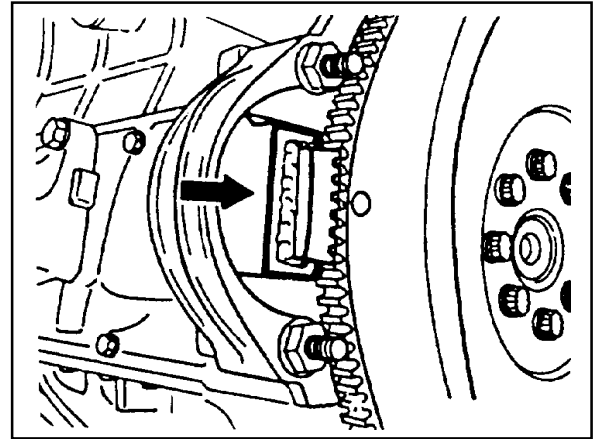


2. Remove the 12-sided stretch bolts (4).

Installation Notice

Tightening Torque	45 Nm + 90°
-------------------	-------------

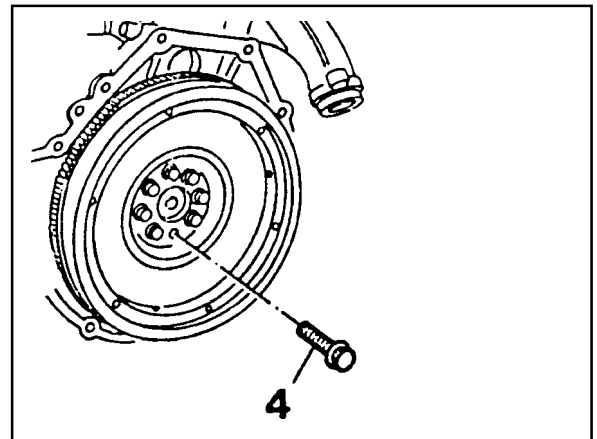**Notice**


If the length 'L' of bolts exceeds 22.5mm, replace the bolts.

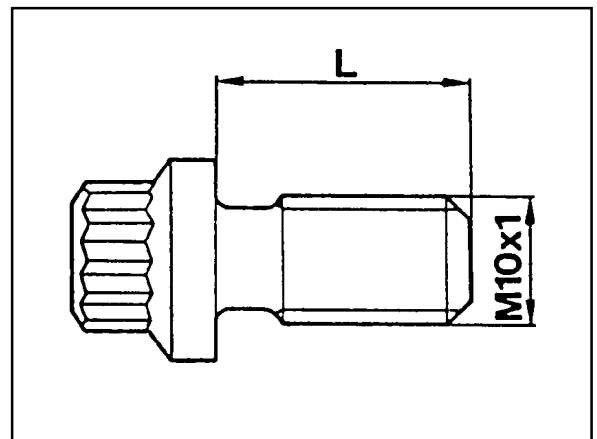

3. Remove the flywheel (3), if equipped with manual transmission.

Installation Notice

Correctly align the position of dowel pin (2).

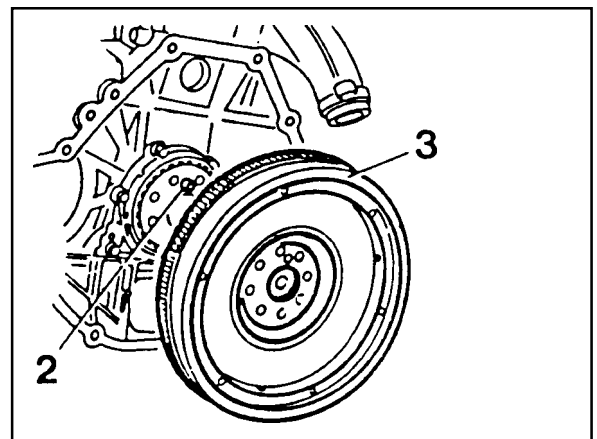


1B3-96 OM600 ENGINE MECHANICAL

4. Remove the flywheel (6) and driven plate (5), if equipped with automatic transmission.


Installation Notice

Correctly align the position of dowel pin (2).

5. Installation should follow the removal procedure in the reverse order.

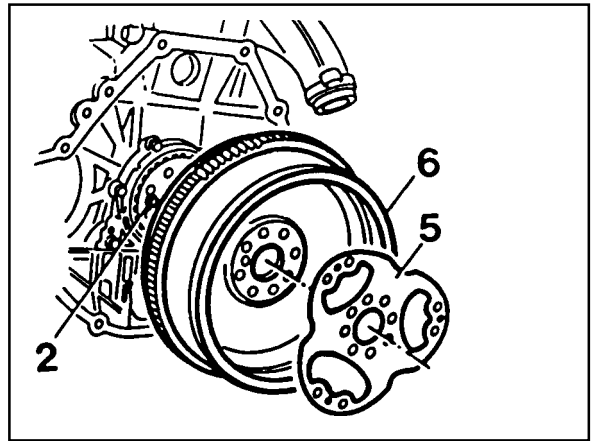

MACHINING OF FLYWHEEL

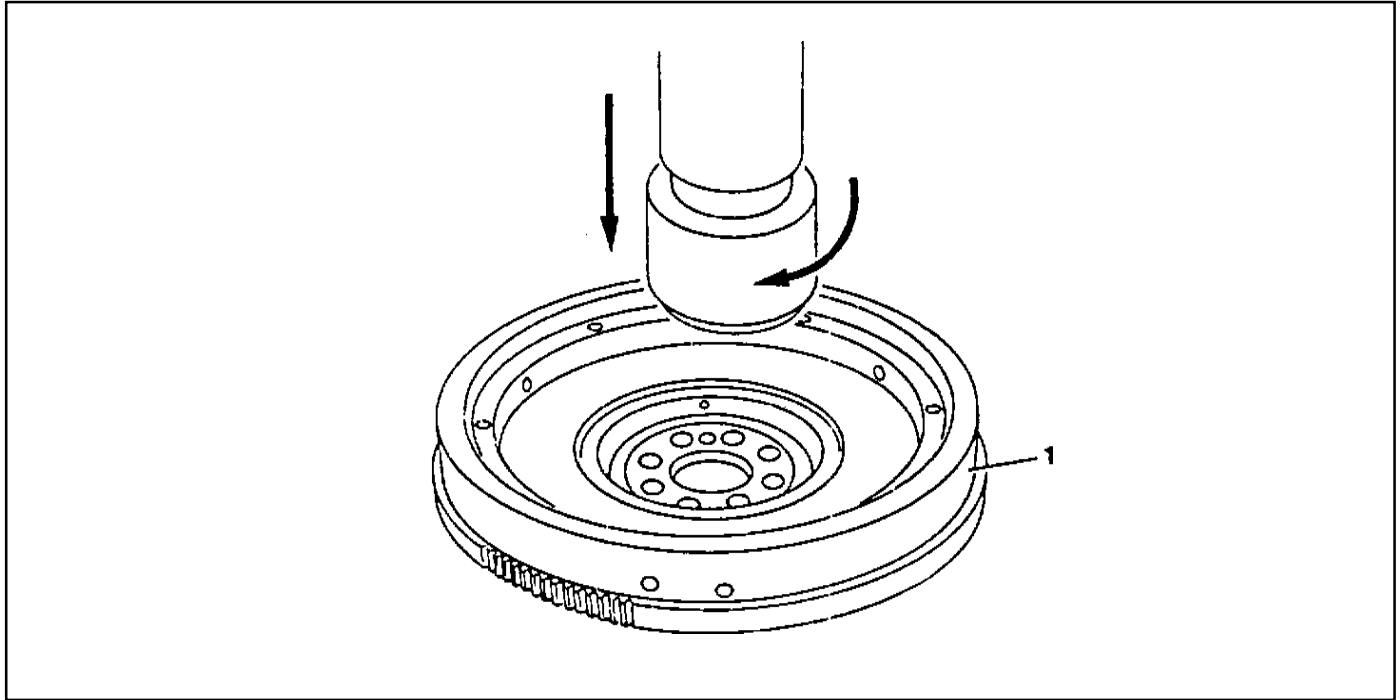

1 Flywheel


Machining of Flywheel

Notice

Flywheels which have scorch marks, scoring or cracks in the clutch surface should be machined by grinding or precision-turning. If the scores or cracks are severe than permissible specifications, replace the flywheel.


Distance 'a'	19.3 - 19.5 mm	
Distance 'b'	New	16.6 mm
	Repair up to	15.6 mm
Max. axial runout		0.05 mm

- When machining the clutch surface 'A', the mounting surface (B) for the clutch pressure plate should also be machined in accordance with 'A' to keep the distance 'a'.
- Do not machine under 'b' value.
- When machining, fix the flywheel exactly not to exceed the standard runout.

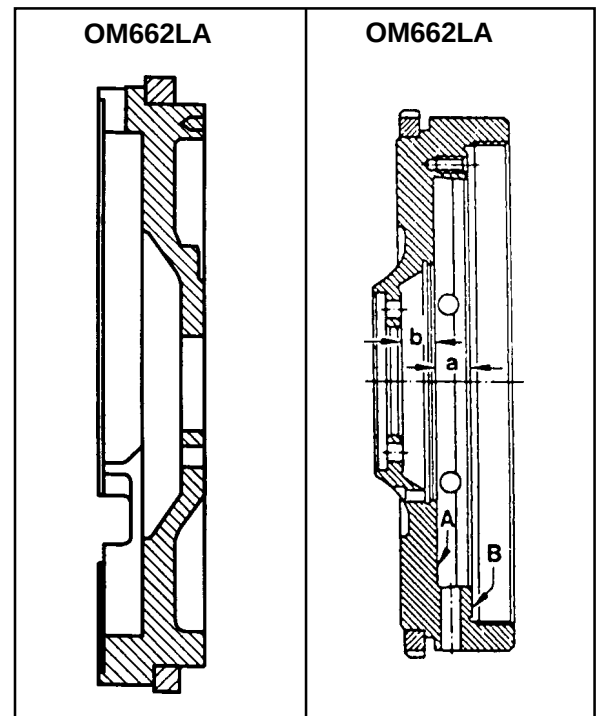

FLYWHEEL RING GEAR

Preceding Work : Removal of flywheel

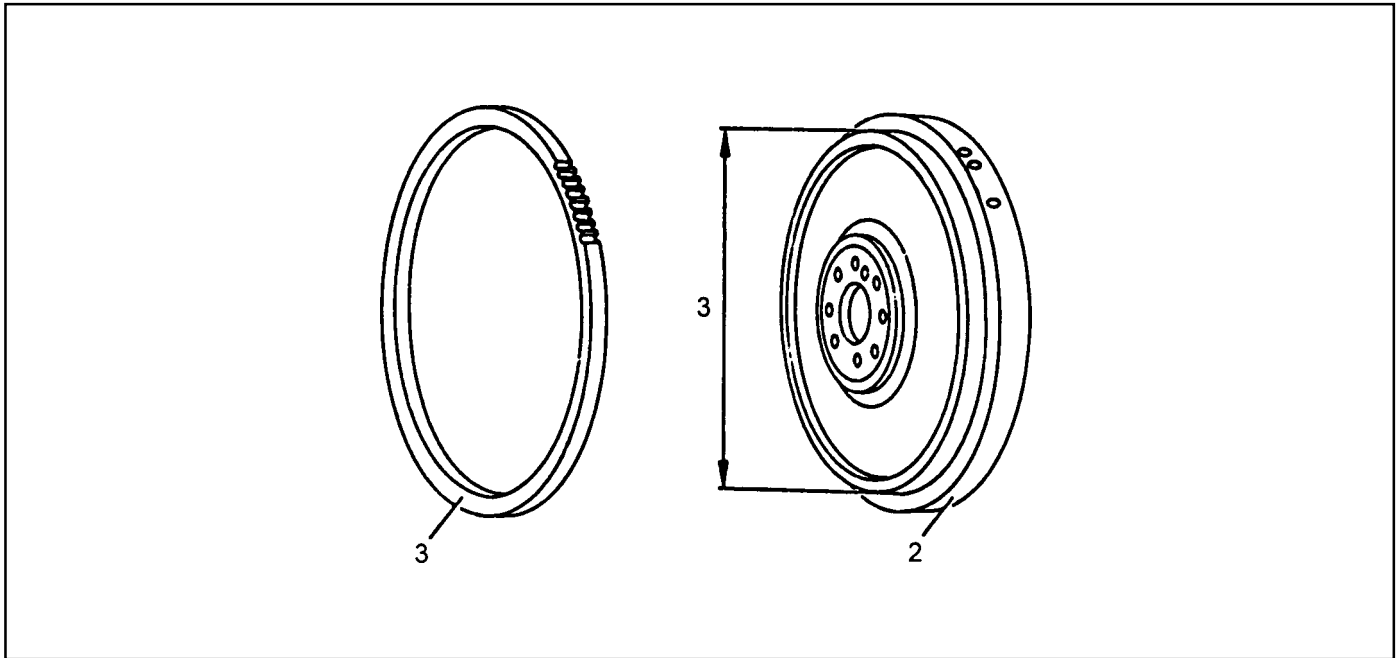

- 1 Ring Gear
- 2 Flywheel

- 3 Centering Collar Diameter


Tools Required

001 589 53 21 00 Dial Gauge

363 589 02 21 00 Dial Gauge Holder

Replacement Procedure

1. Drill a hole into the ring gear (1) (arrow) and snap with a chisel.
2. Thoroughly clean the collar surfaces of ring gear.

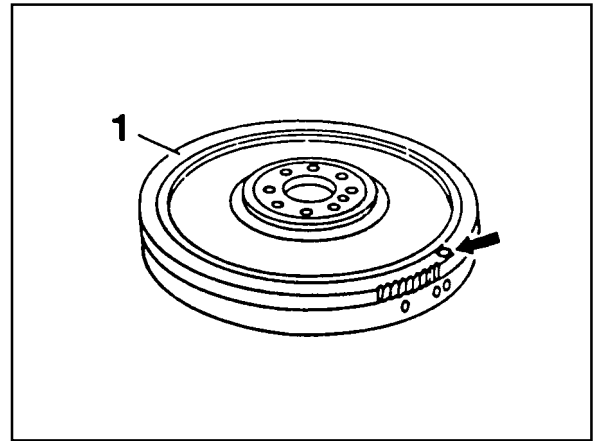


3. Measure diameter (a) of centering collar.

Diameter 'a'	$275 \pm 0.5\text{mm}$
--------------	------------------------

Notice


If out of standard, replace the flywheel.

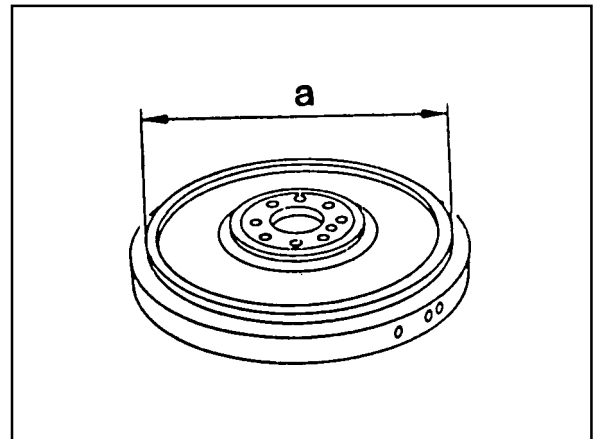


4. Heat up the new ring gear up to 220°C by using a heating device.

Notice

Use temperature measuring chalk.

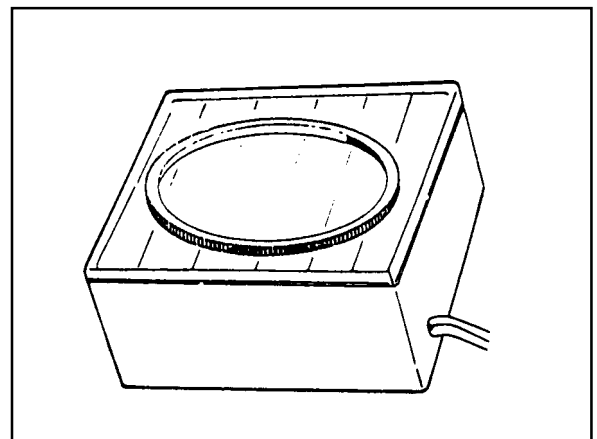

5. Install the new ring gear (1) onto the flywheel by using a drift.

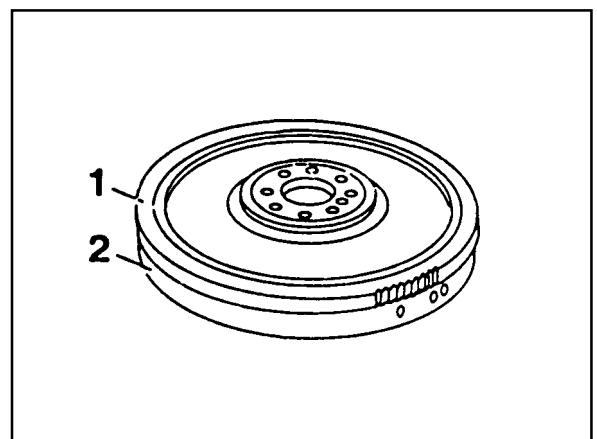

1B3-100 OM600 ENGINE MECHANICAL


6. Measure axial runout of ring gear (1) on a surface plate.


Limit	Max. 0.4mm
-------	------------

Notice

For correct measurement, put the flywheel on the flat measuring board.

Dial Gauge 001 589 53 21 00
Dial Gauge Holder 363 589 02 21 00

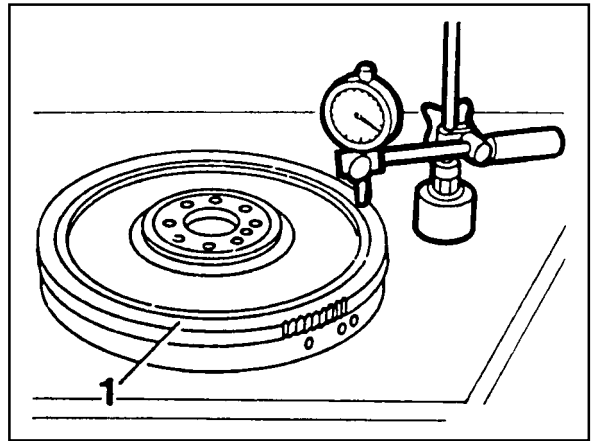

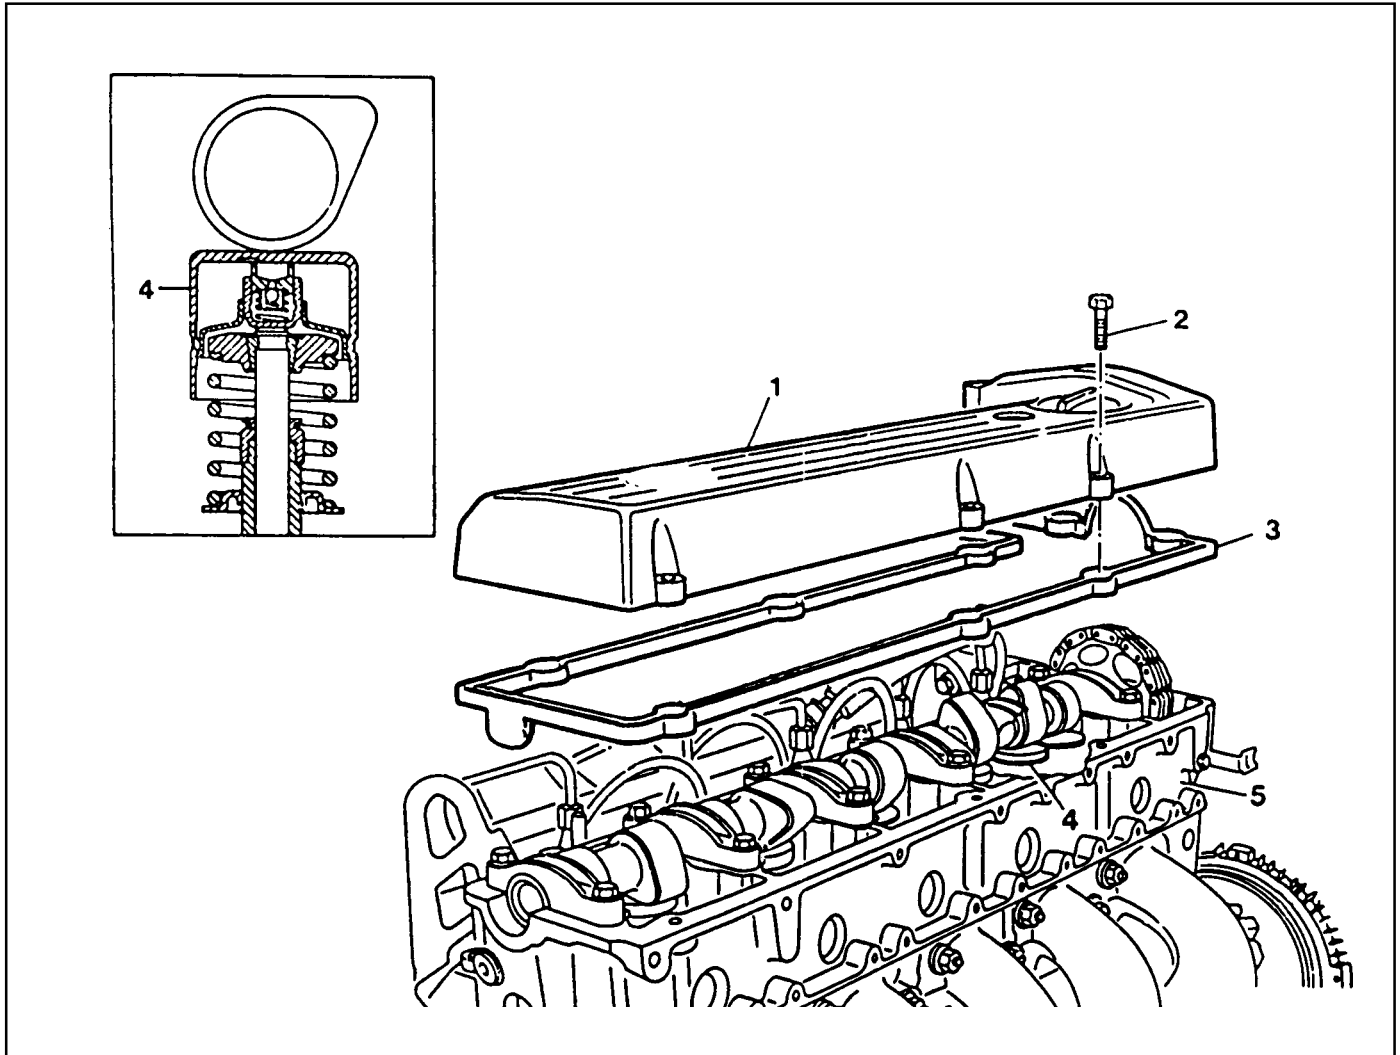HYDRAULIC VALVE CLEARANCE COMPENSATION ELEMENT CHECK

- | | | | | |
|---|---------------------|---------|---|---------------|
| 1 | Cylinder Head Cover | | 4 | Valve Tappet |
| 2 | Bolt | 10Nm | 5 | Cylinder Head |
| 3 | Gasket | Replace | | |